

## **IMPORTANT SAFETY INSTRUCTIONS:**

- These instructions are provided for your safety. It is very important that they are read carefully and completely before beginning the assembly and installation of this lighting fixture.
- Never use with an extension cord. Do not alter the plug. Do not attempt to defeat this safety feature.
- This fixture has been rated for up to one (1) **60-watt maximum E26 medium-base bulb** or one (1) **9-Watt LED bulb**. To avoid the risk of fire, do not exceed the recommended lamp wattage.
- This lamp is meant for outdoor use, SUITABLE FOR WET LOCATIONS.
- Save these instructions.

## WARNING:

- To reduce the risk of fire, electrical shock or personal injury, always turn off and unplug the light fixture and allow it to cool prior to replacing the light bulb.
- Do not touch bulb when fixture is turned on. Do not look directly at lit bulb.
- Keep flammable materials away from lit bulb.

## ASSEMBLY:

- Remove all parts and hardware from box along with any plastic protective packaging.
- Insert one **bulb** (not included) into the socket. DO NOT
  EXCEED THE RECOMMENDED WATTAGE.
- Fix the Glass Shade onto the Glass Shade Holder and twist to tighten.
- Slide Rattan Shade Spider between Washer and Glass Shade Holder.
- Insert Screw through the washer into holes of Shade Spider and screw gently to fix the Shade.

## Parts List:

- A) Glass Shade
- B) Glass Shade Holder
- C) Shade Spider
- D) Washer
- E) Shade Screws (2x)

