
## **C1280 INSTALLATION INSTRUCTIONS**



# WARNING DISCONNECT POWER BEFORE RELAMPING OR WIRING THE FIXTURE. READ ALL INSTRUCTIONS COMPLETELY BEFORE STARTING INSTALLATION.

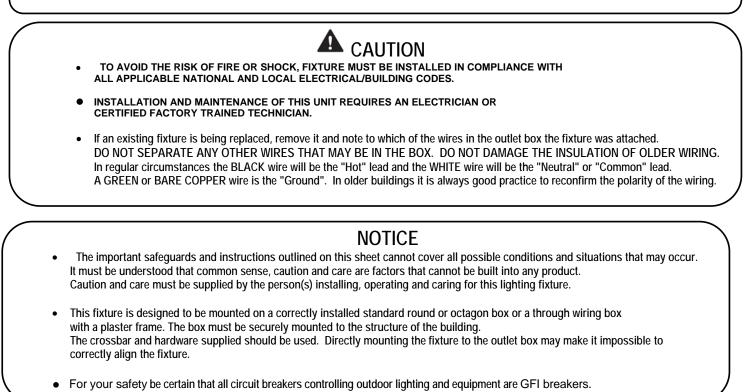

#### FIXTURE PREPARATION

1. Remove the fixture, parts and parts bag(s) from the carton.

#### NOTICE:

Before discarding the carton, double check to make certain that all parts are found.


#### FIXTURE INSTALLATION

- 1. thread the 2 longest screws into the crosbar. Adjust the screws so that they extend about 3/16 beyond the back plate of the fixture. Lock the hex nuts against the cross bar. Attach the cross bar to the outlet box use mounting screws.. (The green screw should face the floor).
- Fasten the ground wire to the green or bare copper wire in the outlet box or to the green screw on the crossbar.

### 

Never fasten the ground wire to the black or "hot" wire! Failure to follow this instruction could result in serious injury or death!

**3.** Fasten the white fixture lead to the white wire in the outlet box. Fasten the wires together with an approved fastener (wire nut). Starting about 1' below the fastener, tightly wrap the connection with electrical tape so that the connection seals the end of the fastener.

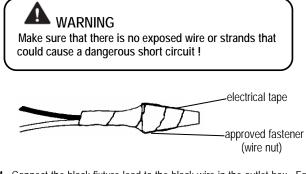

- 4. Connect the black fixture lead to the black wire in the outlet box. Fasten the joined wires as in step 3
- 5. Fasten the canopy on ceiling use ball nut.
- 6. Adjust the hex nut on the nipple so that 1/4" is exposed at the end. Thread the nipple into the hex coupling. Tighten the nut against the coupling.
- 7. Install the lamps (light bulbs). NOTE: This fixture is rated for Max60 watt type A-15 (fan) lamps.

# DO NOT EXCEED RECOMMENDED WATTAGE!

8. Using the soft washer and the cap nut install the glass

9. Restore power to circuit at breaker or fuse box.

