
## CHD1551 ASSEMBLY & INSTALLATION GUIDE

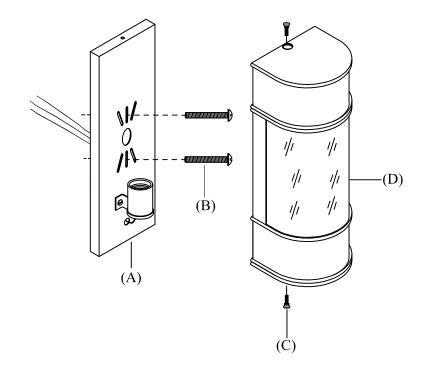

WE RECOMMEND INSTALLATION OF THIS LIGHTING FIXTURE BE DONE BY A LICENSED ELECTRICIAN.

WARNING \*\*\* SWITCH OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER BEFORE INSTALLATION.

INSPECT ITEM CAREFULLY BEFORE ATTEMPTING TO INSTALL. IF THERE IS ANY DAMAGE OR OBVIOUS DEFECT, DO NOT INSTALL.

## ITEM MAY NOT BE RETURNED ONCE IT HAS BEEN INSTALLED.

 Attach ground (green) fixture wire to ground wire from junction box (usually green or copper in color), and fasten together with a plastic wire connector. Tightly wrap the wire connector electrical tape so the end of the connector is

sealed.

IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME BE PROPERLY GROUNDED.

- 2. Connect neutral (white) fixture to neutral (usually white) outlet wire. Fasten both wires together with a plastic wire connector and tightly wrap the wire connector with electrical tape.
- Repeat the procedure for hot (black) wires. Always make sure that no wire strands are left outside the connectors.
  DO NOT REVERSE THE HOT AND NEUTRAL CONNECTION OR SAFETY WILL BE COMPROMISED.
- 4. Place fixture base (A) to wall outlet box and secure with mounting screws (B) provided.
- 5. Insert light bulb into socket.
- Attach glass shade (D) to fixture base (A), aligning top and bottom holes of glass shade (D) and fixture base (A).
  Tighten by inserting base screws (C) to the holes to secure glass shade to fixture base.

## VISUAL COMFORT & CO. Est. 1987