
CHA9121 ASSEMBLY & INSTALLATION GUIDE

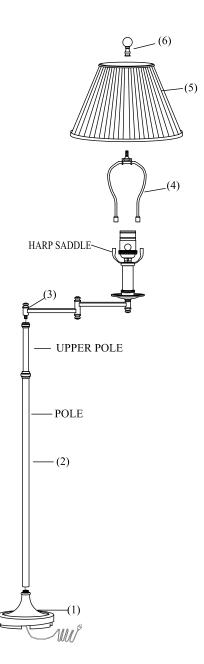

INSPECT ITEM CAREFULLY BEFORE ATTEMPTING TO INSTALL. IF THERE IS ANY DAMAGE OR OBVIOUS DEFECT, DO NOT INSTALL.

ITEM MAY NOT BE RETURNED ONCE IT HAS BEEN INSTALLED.

- 1. Screw the top of upper pole onto the bottom threaded nipple of part (3).
- 2. Screw the top of part (1) into the bottom of part (2).
- 3. Pull the wire until taut.
- 4. Put harp (4) into harp saddle by squeezing both sides of the harp.
- 5. Remove finial (6) from harp (4), place lamp shade (5) onto the bolt attached to the top of harp. Screw finial (6)

onto bolt to secure shade to the harp.

- 6. Insert light bulb into socket.
- 7. Plug lamp cord into wall outlet.
- 8. ADJUSTMENT INSTRUCTIONS:

To adjust the height of lamp fixtures, hold the lower pole steadily, pull the upper pole up to desired height.

To lower the height, push the upper pole down to desired height.

VISUAL COMFORT & CO. Est. 1987