	1
ASSEMBLY INSTRUCTIONS	
ITEM DESCRIPTION:	
ITEM NO.: 45208-671 NAME: Samala Lamp	
MATERIAL TYPE: Terracotta FINISH: Tuscan Wash	
SOCKET TYPE: E-26 SOCKET QTY: 1	
BULB WATTAGE: 150W/CFL 35W/LED 28W	
VOLTAGE: 110-120 V ITEM NET WEIGHT: 25.5LBS	
	TO ASSEMBLE:
	 Insert the harp (C) into the saddle (F) and lower the two harp caps (D) until they cover the two pronged saddle.
	2. Unscrew the finial (A) from the harp top (B). Place shade (G) over the assembled harp, making sure the top of the harp extends through the hole at the top of the shade. Attach the finial (A) and tighten to secure the shade.
	3. Insert correct bulb (not included) into the socket (E).
	CARE INSTRUCTIONS:
	Clean with soft, dry cloth.
	 Always avoid the use of harsh chemicals or abrasive cleaners as they may cause damage to the lamp.
PARTS INCLUDED:	IMPORTANT SAFETY INSTRUCTIONS:
Finial (A) Qty: 1	
Harp Top (B) Qty: 1 Harp (C) Qty: 1	For safety purposes, this lamp is equipped with a polarized plug (one blac wider than the other) (For North America Customers Only). If the plug do
Harp (C) Qty: 1 Harp Caps (D) Qty: 2	fit securely into your outlet, do not force it – contact a professional electr Use the plug with an extension cord only if it can be fully inserted into the
Socket (E) Qty: 1	cord's socket. Never alter the plug in any way. This instruction is provided
Saddle (F) Qty: 1	your safety. It is important that it is read carefully and completely before assembling the fixture.
Shade (G) Qty: 1	To avoid risk of fire, do not exceed the recommended wattage.
	WARNING:
 PRE-ASSEMBLY: Remove all parts and hardware from box along with any plastic protecting packaging 	 To reduce the risk of fire, electrical shock, or personal injury, always turn off and unplug lamp and allow it to cool prior to replacing the bulb.
 Do not discard any contents until after assembly is complete to avoid accidentally discarding small parts or hardware. 	 Do not touch bulb when fixture is turned on. Do not look directly at lit bulb.
	Keep flammable materials away from lit bulb.
For customer service questions call 1-800-338-2150	ARTERIORS
	•



- the saddle (F) and lower the two cover the two pronged saddle.
- rom the harp top (B). Place shade (G) p, making sure the top of the harp le at the top of the shade. Attach the secure the shade.
- included) into the socket (E).

:

INSTRUCTIONS:

is equipped with a polarized plug (one blade is orth America Customers Only). If the plug does not lo not force it - contact a professional electrician. n cord only if it can be fully inserted into the plug in any way. This instruction is provided for at it is read carefully and completely before

- e, electrical shock, or personal injury, lug lamp and allow it to cool prior to
- n fixture is turned on. Do not look
- als away from lit bulb.