ASSEMBLY INSTRUCTIONS


ITEM DESCRIPTION:

ITEM NO.: DWC44 NAME: CARTER OUTDOOR SCONCE

MATERIAL TYPE: METAL FINISH: AGED IRON

SOCKET TYPE:E12 SOCKET QTY:2

BULB WATTAGE: 40W /9W CFL/4W LED

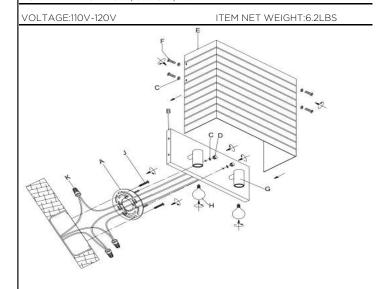

PARTS INCLUDED:				
M .: DI.	(4)			

Mounting Plate	(A)	Qty:1Pc	Metal Shade (E)	Qty:1Pc
Back Plate	(B)	Qty:1Pc	Shade Screw (F)	Qty:4Pcs
Rubber Washer	(C)	Qty:6Pcs	Lamp Assembly(G)	Qty:2Pcs
Screw Nut	(D)	Qty:2Pcs		

HARDWARE INCLUDED:

Mounting Screws	(J)	Qty: 2Pcs						
Plastic Wire Cap	(K)	Qty: 3Pcs						

TOOLS NEEDED (Not Included):

1 Screwdriver

These instructions are provided for safety. It is very important that they are read carefully and completely before beginning installation.

We strongly suggest that all hard-wired fixtures must be installed by a professional electrician.


For customer service questions call 1-800-338-2150



TO ASSEMBLE:

- 1. Shut off the main electrical supply from the main fuse box/circuit breaker.
- 2. Carefully unpack all fixture parts and hardware and lay them on a soft surface for assembly.
- 3. Attach mounting plate(A) to wall or junction box by using the mounting screws (J).
- 4. Connect ground wire from wall to ground wire from lamp by using wire caps (K).
- 5. Attach house wire to lamp wires as shown. Fasten the pairs together with a wire caps(K) DO NOT REVERSE THE HOT AND NEUTRAL
- CONNECTIONS OR SAFETY WILL BE COMPROMISED.


 6. Attach back plate (B) to mounting plate (A) and fix by using the enclosed screw nut(D) and rubber washer(C).
- Insert 2 TYPE-G 40W /9W CFL/4W LED bulb(not included) into The Lamp Assembly (G).DO NOT EXCEED SPECIFIED WATTAGE OF SCONCE
- 8. Attach the metal shade (E) to back plate (B) by using the enclosed Shade screw(F) and rubber washer(C). Tighten shade screws with screwdrive. Please be sure the rubber washer(C) is on top threading of the plate screws(F).
- 9. Use the outdoor silicone caulking compound to caulk completely along the rim of meatl shade(E) where it meets the wall surface, but leaving a space without the caulking compound at the bottom of meatl shade to allow the water to seep out if water entered into the J-Box by accident. See more details on extra page.
- 10. Restore power to junction box and test fixture.

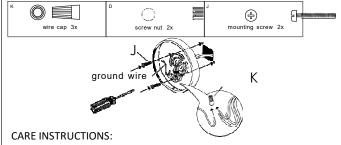

Wipe with a soft, dry cloth. To protect finish, avoid the use of

ARTERIORS

CAULKING INSTRUCTIONS

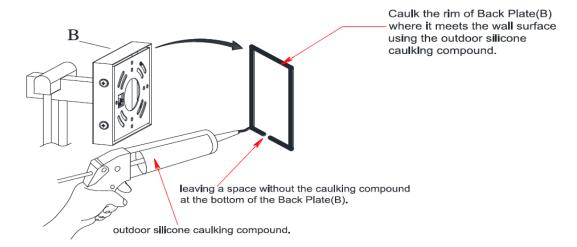

To prevent the water from entering the J-box and causing a short circuit, use the outdoor silicone caulking compound to caulk completely along the rim of Back Plate (B) where it meets the wall surface, but leaving a space without the caulking compound at the bottom of Back Plate (B).

NOTE: Mounting surface should be clean, dry, flat, and a 1/4 inch larger than the Back Plate (B) on all sides.
