ASSEMBLY INSTRUCTIONS	
ITEM DESCRIPTION:	
ITEM NO.: 49096-652 NAME: Odessa Lamp	
MATERIAL TYPE: Resin FINISH: Fossil	
SOCKET TYPE: E26 SOCKET QTY: 1	
BULB WATTAGE: 150W/CFL 35W/LED 28W	
VOLTAGE: 110-120 V ITEM NET WEIGHT: 111 BS	
VOLTAGE: 110-120 V ITEM NET WEIGHT: 11LBS (G (C C (C C C (C C (C C (C C (C (C (C (C C (C (C C (C C (C C (C C (C C C (C C (C C (C C C C C C C C C C C C C	 TO ASSEMBLE: 1. Insert the harp (C) into the saddle (F) and lower the two harp caps (D) until they cover the two pronged saddle. 2. Unscrew the finial (A) from the harp top (B). Place shade (G) over the assembled harp, making sure the top of the harp extends through the hole at the top of the shade. Attach the finial (A) and tighten to secure the shade. 3. Insert correct bulb (not included) into the socket (E). CARE INSTRUCTIONS: Clean with soft, dry cloth. Always avoid the use of harsh chemicals or abrasive cleaners as they may cause damage to the lamp.
Finial (A) Qty: 1	IMPORTANT SAFETY INSTRUCTIONS:
Harp Top (B) Qty: 1	For safety purposes, this lamp is equipped with a polarized plug (one blac wider than the other) (For North America Customers Only). If the plug do
Harp (C) Qty: 1	fit securely into your outlet, do not force it - contact a professional elect
Harp Caps (D) Qty: 2 Socket (E) Qty: 1	Use the plug with an extension cord only if it can be fully inserted into the cord's socket. Never alter the plug in any way. This instruction is provided
Saddle (F) Qty: 1	your safety. It is important that it is read carefully and completely before assembling the fixture.
Shade (G) Qty: 1	To avoid risk of fire, do not exceed the recommended wattage.
	WARNING:
 PRE-ASSEMBLY: Remove all parts and hardware from box along with any plastic protecting packaging. Do not discard any contents until after assembly is complete to avoid accidentally discarding small parts or hardware. 	 To reduce the risk of fire, electrical shock, or personal injury, always turn off and unplug lamp and allow it to cool prior to replacing the bulb. Do not touch bulb when fixture is turned on. Do not look directly at lit bulb. Keep flammable materials away from lit bulb.
For customer service questions call 1-800-338-2150	ARTERIORS



BLE:

- arp (C) into the saddle (F) and lower the two D) until they cover the two pronged saddle.
- e finial (A) from the harp top (B). Place shade (G) sembled harp, making sure the top of the harp ough the hole at the top of the shade. Attach the d tighten to secure the shade.
- ect bulb (not included) into the socket (E).

RUCTIONS:

- ft, dry cloth.
- the use of harsh chemicals or abrasive cleaners ause damage to the lamp.

T SAFETY INSTRUCTIONS:

oses, this lamp is equipped with a polarized plug (one blade is other) (For North America Customers Only). If the plug does not your outlet, do not force it - contact a professional electrician. h an extension cord only if it can be fully inserted into the ever alter the plug in any way. This instruction is provided for important that it is read carefully and completely before fixture.

- he risk of fire, electrical shock, or personal injury, off and unplug lamp and allow it to cool prior to e bulb.
- h bulb when fixture is turned on. Do not look it bulb.
- able materials away from lit bulb.