

# ASSEMBLY INSTRUCTIONS FOR YOUR CELESTE WALL SCONCE

## IMPORTANT SAFETY INSTRUCTIONS:

- \* These instructions are provided for your safety. It's important that all safety instructions are read before beginning installation of fixture.
- \* We **STRONGLY** recommend installation by a licensed electrician.
- \* Turn off power at switch before replacing bulbs, making sure fixture has sufficient time to cool down.
- \* Do not connect the electricity until lamp is fully assembled.
- \* This fixture is UL rated for damp locations.

## DIRECT WIRE ASSEMBLY INSTRUCTIONS:

### NOTE: FOR DIRECT WIRE METHOD ONLY, FIXTURE TO BE MOUNTED VERTICALLY.

1. SHUT OFF MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER. IT IS RECOMMENDED THAT A LICENSED ELECTRICIAN INSTALL THIS FIXTURE.
2. Unpack all parts and remove packing materials.
3. Remove mounting plate (A) from backplate (C) by removing screws (D).
4. Carefully pull the wiring from wall outlet box. Guide wires through the center hole in mounting plate (A).
5. Affix mounting plate (A) to wall outlet box with mounting screws (B) provided.
6. Lift fixture to mounting plate (A) and make proper electrical connections described in steps 7-9.

### A LICENSED ELECTRICIAN IS RECOMMENDED.

7. Connect ground (green or silver in color) wire from fixture to ground wire in the outlet box. Fasten wires together with wire nut (I) and tightly wrap the connection with electrical tape.
8. Attach hot wire from fixture (black in color or smooth side of wire) to hot wire from outlet box. Fasten wires together with wire nut (I) and tightly wrap connection with electrical tape.
9. Attach neutral wire from fixture (white in color or ribbed side of wire) to neutral wire from outlet box. Fasten wires together with wire nut (I) and tightly wrap connection with electrical tape.
10. Carefully push wire connections back into wall outlet box. Slide backplate (C) over mounting plate (A).
11. Thread screws (D) into holes at the top and sides of backplate (C) to secure the fixture to the mounting plate (A).
12. Insert (4) Edison base (small globe or torpedo shape) 40W Max, incandescent bulbs or 7-9W Max LED bulbs into sockets.
13. To attach glass shades, first loosen threaded washer (E) and move shade cap (F) up. Once loosened, slide glass shade (H) over the bulb and shade retention clip (G). Slide shade cap (F) back down over the glass shade (H). Then tighten threaded washer (E) until hand tight. (This will tighten the shade retention clip (G) holding the glass shade (H) in place).
14. Reconnect main electrical supply at the fuse box/ circuit breaker and test the fixture.
15. Fixture is adjustable by rotating the front facing extension arm at swivel (J).

