


ASSEMBLY INSTRUCTIONS FOR YOUR CINCH TRIPLE PENDANT

IMPORTANT SAFETY INSTRUCTIONS:

- * These instructions are provided for your safety. It is very important that they are read completely before beginning the installation of your fixture.
- * **WE STRONGLY RECOMMEND INSTALLATION BY A LICENSED ELECTRICIAN.**
- * Turn off power at switch before replacing bulbs, making sure fixture has sufficient time to cool down.
- * If any special control devices are used with this fixture, follow the instructions carefully to assure full compliance with N.E.C. requirements. If there are any questions, contact a qualified electrical contractor.
- * This fixture is U.L. rated for dry locations.

ASSEMBLY INSTRUCTIONS:

1. SHUT OFF THE MAIN ELECTRICAL SUPPLY AT FUSE BOX/ CIRCUIT BREAKER.
2. Remove all parts from carton. Do not throw away any parts.
3. Remove quick link (G) from hang straight (F). Keep quick link (G) attached to loop (H).
4. Remove cross bar (A) (with threaded tube (C) and hang straight (F) attached) from canopy (D) by unscrewing collar (E). Affix cross bar (A) to ceiling outlet box using screws (B) provided. Hang straight (F) will remain affixed to threaded tube (C).
5. Measure desired drop for fixture to hang and add/remove extension tubes (I). Guide wiring through extension tubes before threading tubes together. ****ADD/REMOVE EXTENSIONS:** (Un)Thread the threaded nipple of one extension into the threaded opening of the next extension. Make sure wiring is pulled tight when threading extensions together to prevent damage to the wire**
6. Carefully slide threaded collar (E) down extensions (I) to rest on top of housing (J). Carefully slide canopy (D) down extensions (I) until it rests on collar (E).
7. Thread loop (H) to the top threaded nipple of extension (I).
8. Lift fixture to ceiling outlet box and connect quick link (G) to hang straight (F) to suspend fixture from ceiling.
9. Guide wiring through threaded tube (C).
10. Cut the cord to the desired length to make electrical connections. Note: At least 8 inches of wire is needed to make proper electrical connections.
11. Make proper electrical connections described in steps 12 - 14.
A LICENSED ELECTRICIAN IS RECOMMENDED.
12. Attach ground wire from fixture (green or silver in color) to ground wire from outlet box. Fasten wires together with wire nut (P) and tightly wrap connection with electrical tape.
13. Attach hot wire from fixture (black in color or smooth side of wire) to hot wire from outlet box. Fasten wires together with wire nut (P) and tightly wrap connection with electrical tape.
14. Attach neutral wire from fixture (white in color or ribbed side of wire) to neutral wire from outlet box. Fasten wires together with wire nut (P) and tightly wrap connection with electrical tape.
15. Carefully push wire connections back into the ceiling outlet box.
16. Slide canopy (D) up extension tubes (I) and hold firmly against ceiling. Slide collar (E) up extension tubes (I) and thread onto hang straight (F), securing canopy (D) against ceiling.
17. Remove threaded collar (N) and socket cover (M) from socket (K). Repeat step for each shade/socket.
18. Slide shade (L) over socket (K). Holding shade (L) firmly against the fixture, slide socket cover (M) over socket (K) and secure shade (L) and socket cover (M) to the fixture by threading collar (N) onto socket (K). Repeat step for each shade/socket.
19. Insert three Edison base (E26) 60 watt max incandescent or 9-13 watt max LED bulbs into sockets (K).
20. Reconnect main electrical supply from the fuse box/ circuit breaker and test the fixture.
21. Adjust shade direction/angle by adjusting swivel (O).

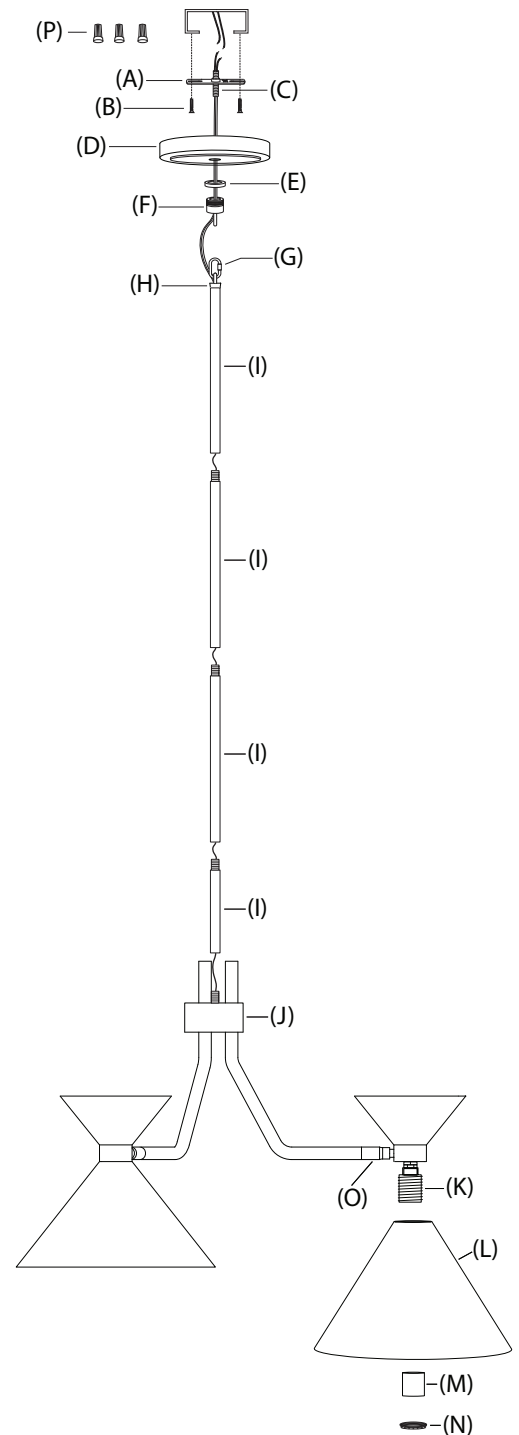

To clean, use soft cloth only. Do not use any chemical or abrasive cleaners.