

ASSEMBLY INSTRUCTIONS FOR YOUR CINCH WALL SCONCE

IMPORTANT SAFETY INSTRUCTIONS:

- * These instructions are provided for your safety. It's important that all safety instructions are read before beginning installation of fixture.
- * We **STRONGLY** recommend installation by a licensed electrician.
- * Turn off power at switch before replacing bulbs, making sure fixture has sufficient time to cool down.
- * Do not connect the electricity until lamp is fully assembled.
- * This fixture is UL rated for dry locations.

CORD COVER ASSEMBLY INSTRUCTIONS:

1. Unpack all parts and remove packing materials.
2. Remove mounting plate (A) from backplate (C) by removing screws (D).
3. Determine desired location for light fixture on wall. Hold mounting plate (A) in a level position against the wall. Using a pencil, mark the location of the mounting holes in mounting plate (A) onto the wall.
4. Drill small holes at marked locations on the wall. Holes should be sized so wall anchors (P), provided, fit snugly inside the opening. Insert wall anchors into drilled holes.
5. Affix mounting plate (A) to the wall by threading mounting screws (O) through holes in mounting plate (A) and into wall anchors (P).
6. Slide backplate (C) over mounting plate (A). Thread screws (D) back into threaded holes of mounting plate (A) to secure fixture to wall.
7. Thread cord cover (F) into the bottom of the backplate (C). Thread cord cover (G) onto cord cover (F).
8. Remove threaded collar (N) and socket cover (M) from socket (K).
9. Slide shade (L) over socket (K). Holding shade (L) firmly against the fixture, slide socket cover (M) over socket (K) and secure shade (L) and socket cover (M) to the fixture by threading collar (N) onto socket (K).
10. Insert one Edison base (E26) 60 watt max incandescent or 9-13 watt max LED bulb into socket (K).
11. Insert three prong plug (H) into wall outlet.
12. Control power to the fixture by using full range dimmer switch (I) located at the top of the fixture.

DIRECT WIRE ASSEMBLY INSTRUCTIONS:

1. **SHUT OFF MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER. IT IS RECOMMENDED THAT A LICENSED ELECTRICIAN INSTALL THIS FIXTURE.**
2. Unpack all parts and remove packing materials.
3. Remove mounting plate (A) from backplate (C) by removing screws (D).
4. Cut three prong plug (H) from the end of the electrical cord.
5. Remove cord covers (F) and (G) from the electrical cord. From the back side of backplate (C), pull the electrical cord up through hole in the bottom of backplate (C).
6. Remove nipple at the bottom of backplate (C) and thread plug cap (E) into the hole.
7. Cut the cord to the desired length for making an electrical connection. At least six inches of wire is required to make proper electrical connection.
8. Carefully pull the wiring from wall outlet box. Guide wires through the center hole in mounting plate (A).
9. Affix mounting plate (A) to wall outlet box with mounting screws (B) provided.
10. Lift fixture to mounting plate (A) and make proper electrical connections described in steps 11-13.

A LICENSED ELECTRICIAN IS RECOMMENDED.

11. Connect ground (green or silver in color) wire from fixture to ground wire in the outlet box. Fasten wires together with wire nut (Q) and tightly wrap the connection with electrical tape.
12. Attach hot wire from fixture (black in color or smooth side of wire) to hot wire from outlet box. Fasten wires together with wire nut (Q) and tightly wrap connection with electrical tape.
13. Attach neutral wire from fixture (white in color or ribbed side of wire) to neutral wire from outlet box. Fasten wires together with wire nut (Q) and tightly wrap connection with electrical tape.
14. Carefully push wire connections back into wall outlet box.
15. Follow steps 6, 8, 9, and 10 from **Cord Cover Assembly Instruction** above.
16. Reconnect main electrical supply at the fuse box/ circuit breaker and test the fixture.
17. Control power to the fixture by using full range dimmer switch (I) located at the top of the fixture or from a wall switch. NOTE: the fixture has a full range dimmer switch and dimming should be controlled on the fixture.
18. Adjust position of shade by swivel (J) and the position of the fixture arm by swivel (N).

