Vaso Pendant

GENERATION LIGHTING PENDANT

GENERAL PRODUCT INFORMATION:

These fixtures are intended to be installed utilizing NEC compliant junction boxes.

This product is safety listed for damp locations.

Incandescent version may be dimmed with a standard incandescent dimmer.

LED version may be dimmed with a LED dimmer. Consult lamp manufacturer for additional information.


CAUTION - RISK OF FIRE

This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.


Use minimum 90°c supply conductors.

SAVE THESE INSTRUCTIONS!

GENERATION LIGHTING 7400 Linder Ave., Skokie, IL 60077 T 847.410.4400 | F 847.410.4500 www.generationlighting.com

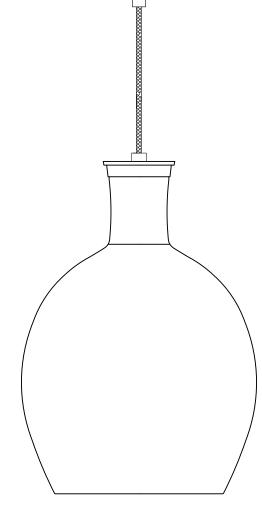



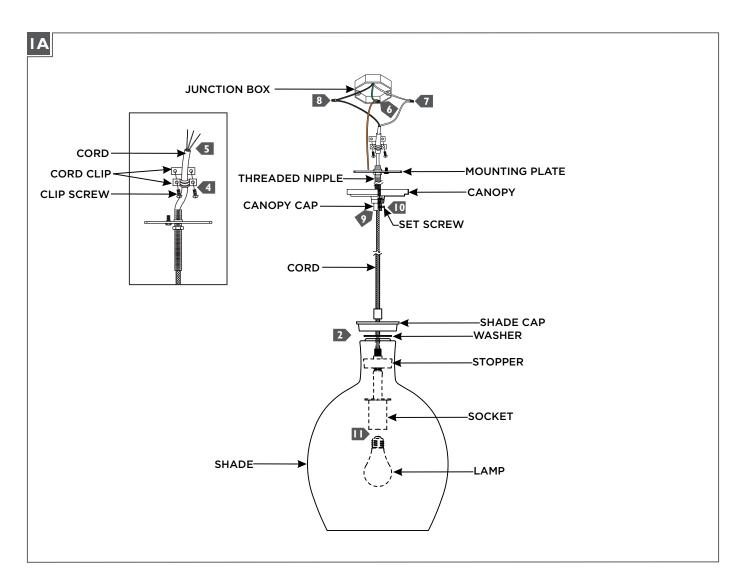

- I Secure the mounting plate to the junction box.
- 2 If necessary, feed socket cord through the shade, then install the washer and shade cap onto the cord so they rest on top of the shade.
- If necessary, loosen the set screw on the canopy cap and feed the fixture cord though it, followed by the canopy.
- Feed the fixture cord through the nipple to the desired length, place the cord in between the two cord clips and secure it in place, behind the mounting plate, using the clip screws.
- 5 Trim the cord leaving enough for electrical connections. From the end of the cord, strip the insulation 4" and then strip the end of the wires. Note: Make sure not to nick the inner wires.
- 6 Connect the fixture to a suitable ground in accordance to local electrical codes.
- Connect the white fixture wire (square and/or rigid) to the neutral power line wire with a wire nut.
- B Connect the black fixture wire (round and/or smooth) to the hot power line wire with a wire nut.
- Neatly place all the wires into the junction box, place the canopy onto the threaded rod, and secure it in place by screwing the canopy cap onto the threaded rod.
- **IO** Tighten the set screw on the canopy cap using a screwdriver.
- Screw the lamp into the socket. Refer to the label on the socket for Max Wattage Information.