




Windmill 60" 15-Blade Oiled Bronze Modern Farmhouse Ceiling Fan

96015-86

HEIGHT CHART

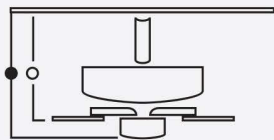

FAN HEIGHT

Using 6" Downrod

● Distance of 16.5"

○ Distance of 11.5"

GENERAL SPECS

3 Finishes Available
Lifetime Motor Warranty
Fifteen Blades
60" Blade Sweep
30-Degree Blade Pitch
80" Lead Wire
6" Downrod Included

MECHANICAL SPECS

DC-165L Motor
6 Speeds-Reversible w/ Wall Control
8 Poles
.42/.27/.21/.17/.11/.08 AMPS on H/M/L
30/19/14/11/7/5 WATTS on H/M/L
65/53/47/41/37/33 RPMS on H/M/L
Light Kit Adaptable
Remote Control Included
Not Hugger Adaptable
Not Slope Ceiling Kit Adaptable
Maximum 25° Slope with Minimum 18" Downrod
Maximum Length Optional Downrod 48"

ENERGY SPECS

Energy Information at High Speed
Airflow: 3472 Cubic Feet/Minute
Electricity Use: 33 Watts (Excludes Lights)
Airflow Efficiency: 105 Cubic Feet/Minute/Watt
Visit QuorumInternational.com for DOE Energy Guide

REMOTE CONTROL



Included



INSTALLATION NOTE

Multiple fans installed on the same circuit require individual wall controls and switch legs. The power supply wire from the control to the fans can not be shared.

LIGHT KIT OPTIONS

Additional Light Kit options on page 204

INSTALLATION INSTRUCTIONS

Visit www.quoruminternational.com/pages/faqs



Windmill Ceiling Fan Install: Tips for Success

Assembly and installation:

- Read '1. Safety Rules'
- Read '3. Mounting Options' to be sure your junction box has the proper support required for your fan.
- All Windmill fans are provided with a safety cable which is required to be attached to the building structure during installation.
- Maximum optional downrod length is 48" (Any size exceeding this will void warranty).
- Assure all set screws are tightened on down rod ball and yoke assembly – DO NOT use pneumatic or electric drivers exceeding 23 KGS of torque.
- Blade assembly must be completed to proceed with the pairing process.

Pairing process:

- Ensure the remote battery is correctly inserted.
- Begin the pairing process by turning off the power to the fan. After about 10 seconds, turn the power back on. With the power restored, the receiver in the fan will be open to pair for the next 60 seconds.
- During this 60 second window, press and hold the "0" button on the remote. If there is a light kit installed, the bulb(s) will flash when the fan has been paired. If there is no light kit, the blades will move slightly and then stop. At this point, the fan and control are paired.
- If more than one fan is installed, make sure only one fan at a time has power during the pairing process. Having power to more than one fan during the pairing process can cause interference due to two fans picking up the signal from one remote.
 - Start with power off on all fans.
 - Turn power on to only the first fan in line. Within 60 seconds of turning power on, press and hold the "0" button on that fan's corresponding remote.
 - Once paired, turn the power off to that fan, and move on to the next fan in line.
 - Repeat these steps until each fan has been individually paired.
 - Turn power back on for all fans and wait for at least 60 seconds before pressing any buttons on the remotes.
- If the power cannot be isolated to only one fan at a time, take the receiver out of all fans except for the fan currently being paired. Once the pairing is done, take the receiver out and move on to the next fan. Reinsert all receivers once each fan has been individually paired. Wait 60 seconds before operating the fans.

**For Step-by-Step Video
Installation Instructions Scan QR Code**



**Electricians Can Contact Quorum
Technical Support Team
During Installation Process if
Questions Arise**

Contact Us:
201 Railhead Rd. Fort Worth, TX 76106
Phone: 800-443-4626
Email: customersupport@quorumintl.com