

Sospeso Pendant**SLPD26727_, SLPD26827_, SLPD26927 | 1.0****VISUAL COMFORT & Co.****MODERN COLLECTION****GENERAL PRODUCT INFORMATION:**

These fixtures are intended to be installed utilizing NEC compliant junction boxes.

This product is safety listed for damp locations.

Incandescent version may be dimmed with a standard incandescent dimmer. LED version may be dimmed with a LED dimmer. Consult lamp manufacturer for additional information.

This instruction shows a typical installation.


CAUTION - RISK OF FIRE

This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.

Use minimum 90°C supply conductors.

SAVE THESE INSTRUCTIONS!

1A

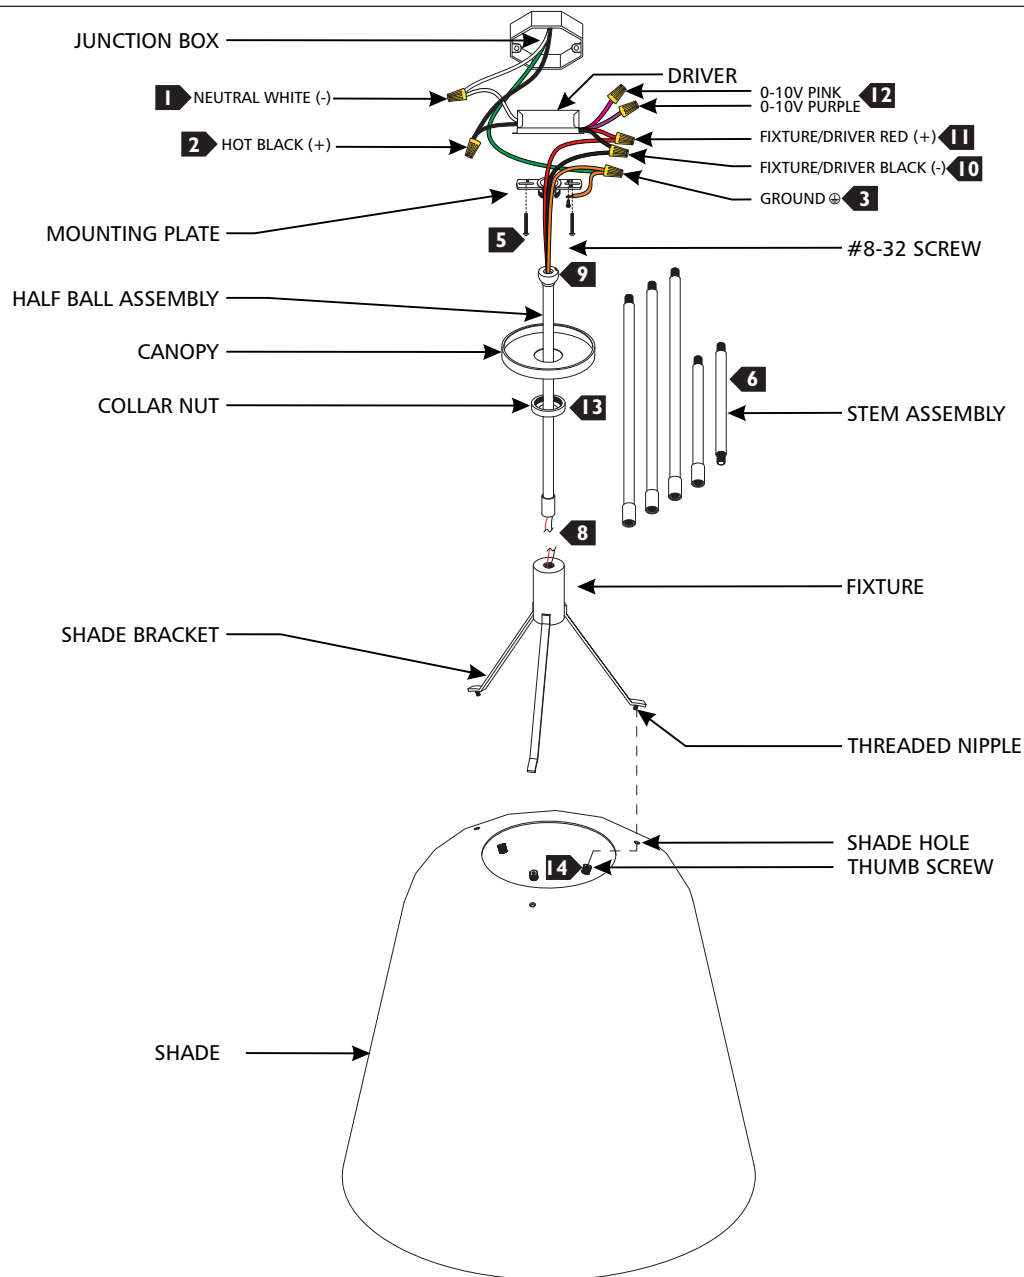

- 1 Connect the white input driver wire to the neutral power line wire with a wire nut.
- 2 Connect the black input driver wire to the hot power line wire with a wire nut.
- 3 Connect the fixture to a suitable ground in accordance with local electrical codes.
- 4 Place the driver and wire connections inside the junction box.
- 5 Secure the mounting plate to ceiling with the #8-32 screws provided making sure to leave the driver output wires and dimming wires (if applicable) available.
- 6 Determine the desired height of the fixture using the provided stems and half ball/upper stem and assemble them by screwing them together.
- 7 From the end of the stem assembly, slide the canopy, plate, and collar nut (in that order) onto the half ball/stem assembly.
- 8 Feed the fixture wires through the stem assembly, then screw the stem assembly to the top of the fixture.
- 9 Seat the half ball into the mounting plate ensuring no wires are being pinched.
- 10 Connect the negative (-) fixture wire to the negative (-) output driver wire with a wire nut.
- 11 Connect the positive (+) fixture wire to the positive (+) output driver wire with a wire nut.
- 12 **If using 0-10V dimming**, connect the purple and gray/pink wires to a compatible dimmer. **If not using 0-10V dimming, make sure to cap off these wires.**
- 13 Neatly place the wire connections inside the canopy/junction box, then slide the plate and canopy up over the mounting plate, and secure in place with the collar nut.
- 14 Align the shade holes to threaded nipples at the end of each shade bracket, then secure the shade by threading the thumb screws onto each threaded nipple.