

# Kenway Pendant

700KEN

1.0



PENDANTS

### GENERAL PRODUCT INFORMATION:



This product is suitable for indoor locations.


This product can be dimmed with a standard electronic dimmer.

This instruction shows a typical installation.

**SAVE THESE INSTRUCTIONS!**


**CAUTION - RISK OF FIRE**  
This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.  
**Use minimum 90°C supply conductors.**

**DANGER**  
The complete fixture exceeds 75 lbs., it must be supported independently of the outlet box unless the outlet box is listed for the weight to be supported.

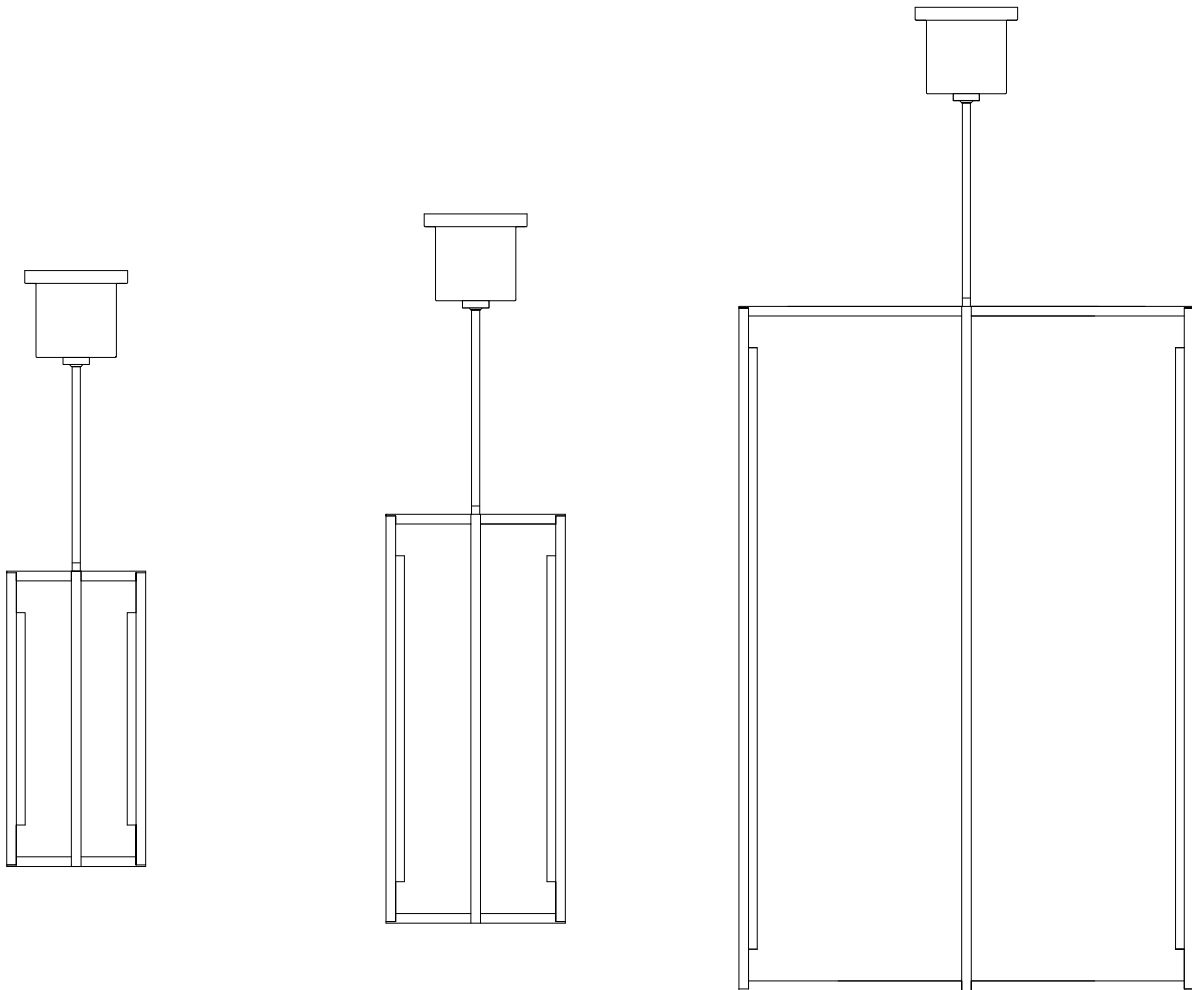

# Install the Fixture

1A

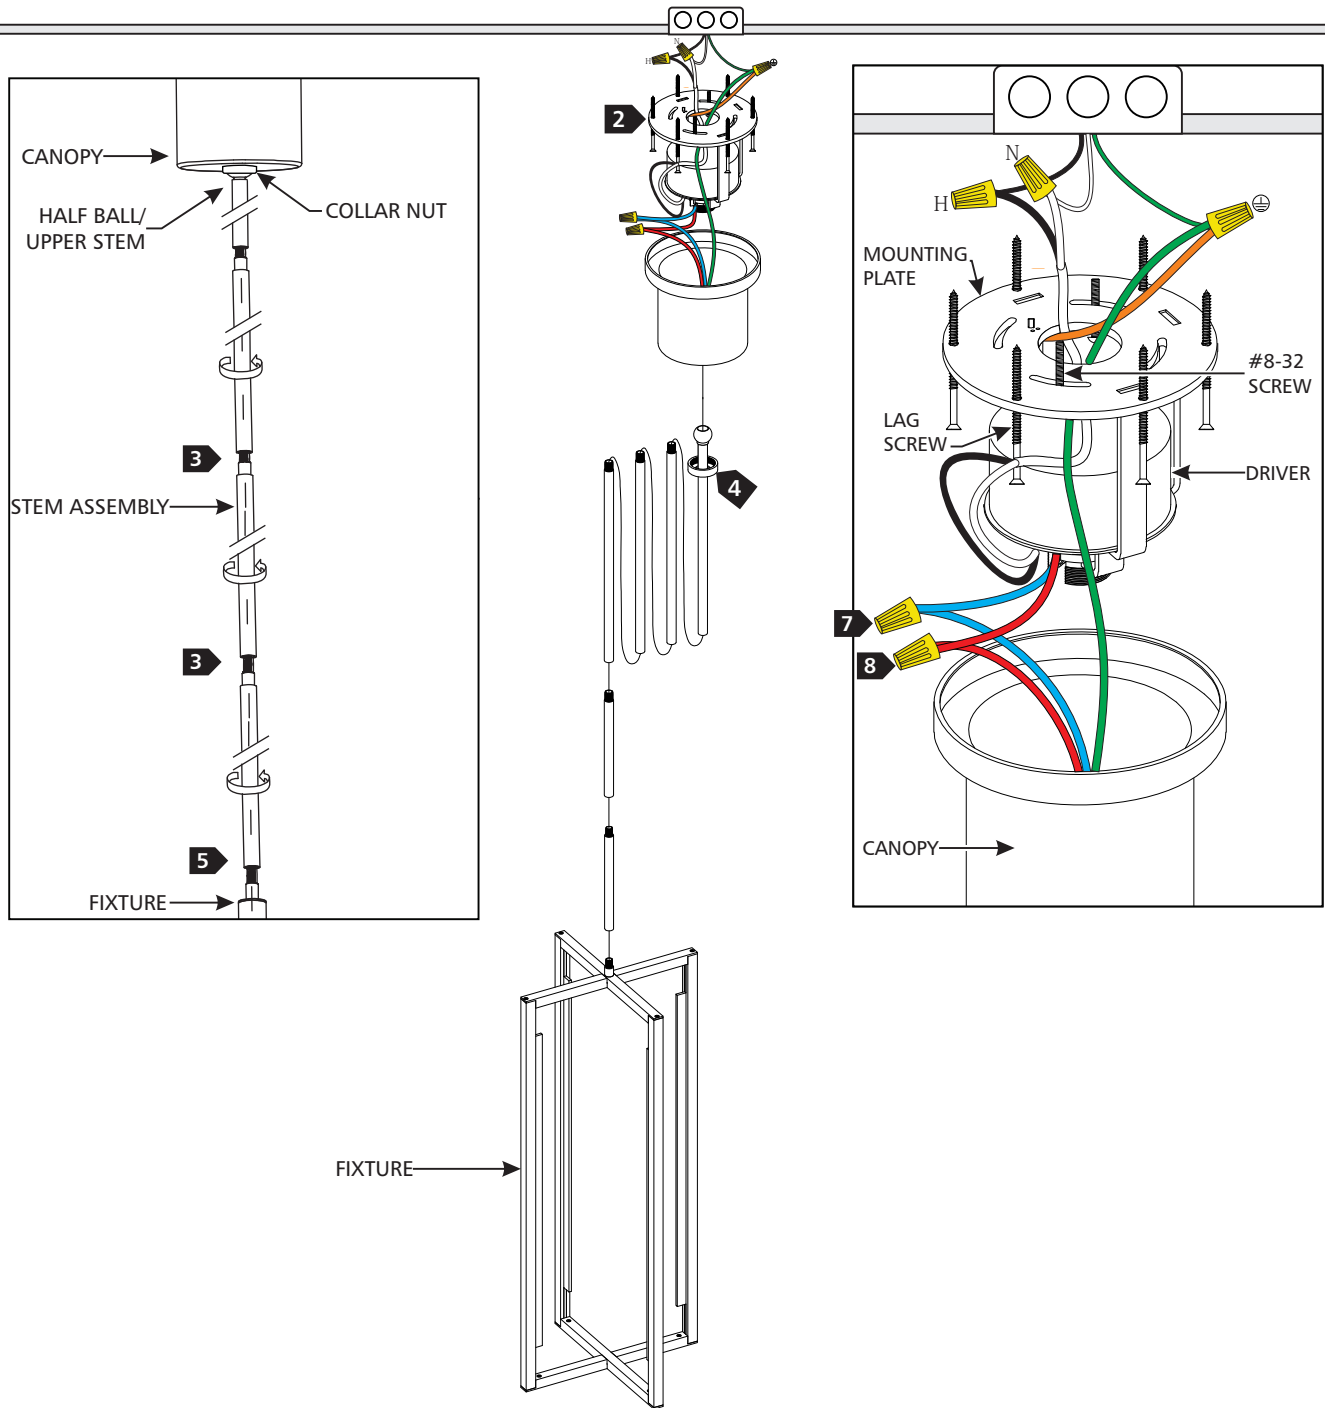

- 1 Remove the mounting plate and driver from the canopy.
- 2 Secure the mounting plate to the junction box with the provided #8-32 screws. **DANGER: If the junction box is not rated for 75 lbs. or more, the mounting plate must be supported independently of the junction box.**
- 3 Determine the desired height of the fixture using the provided stems and half ball/upper stem and assemble them by screwing them together.
- 4 Slide the collar nut over the half ball/stem assembly.
- 5 Feed the fixture wires through the stem assembly, then screw the stem assembly to the top of the fixture.
- 6 Feed the fixture wires and half ball/stem assembly through the canopy, then seat the half ball into the mounting plate. **(Make sure to avoid pinching the wires.)**
- 7 Connect the blue driver wire to the blue fixture wire with a wire nut.
- 8 Connect the red driver wire to the red fixture wire with a wire nut.
- 9 Connect the fixture to a suitable ground in accordance with local electrical codes.
- 10 Connect the white driver wires to the neutral power line wire with a wire nut.
- 11 Connect the black driver wires to the hot power line wire with a wire nut.
- 12 Neatly place the drivers, all wires, and wire nut connections inside the canopy, slide the canopy up to over the mounting bracket and secure in place with the collar nut.