


## ASSEMBLY INSTRUCTIONS

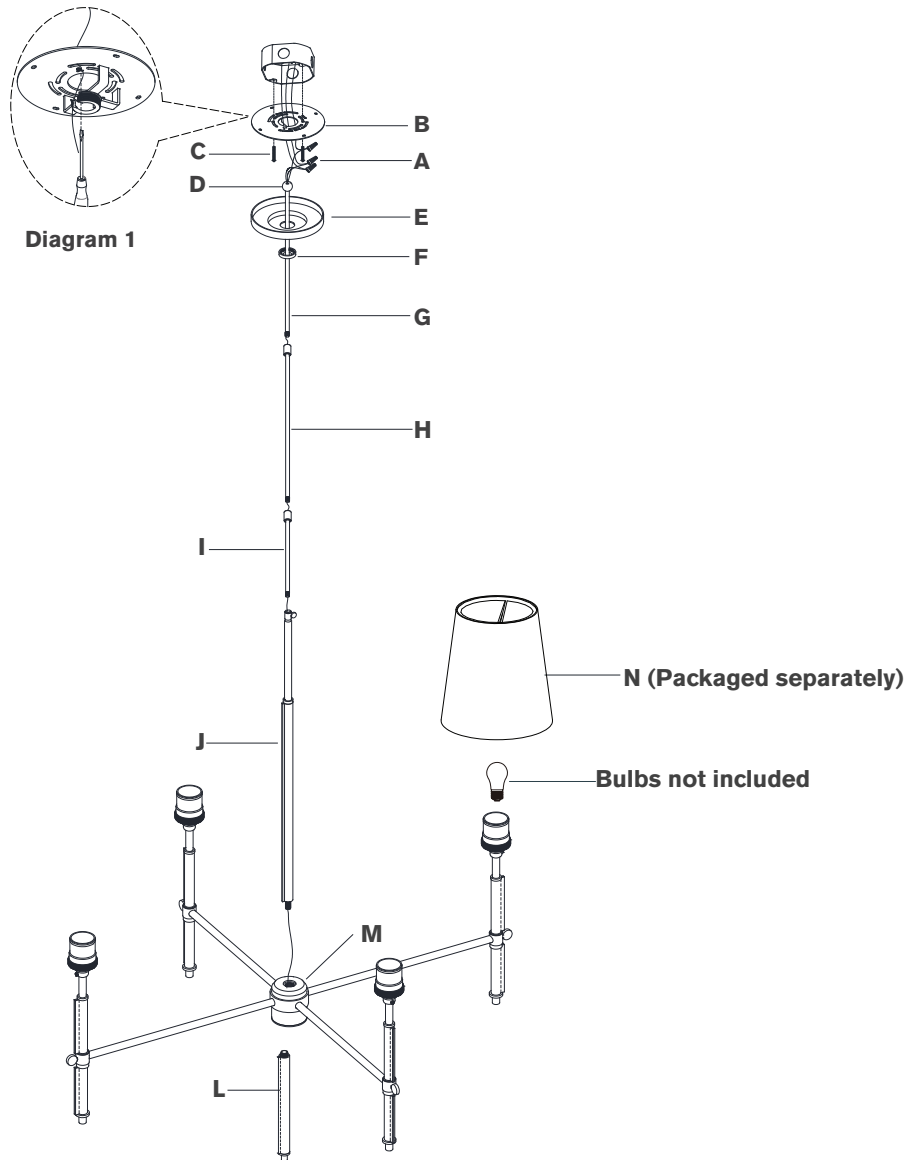

## Bryant Small Wrapped Chandelier

Item # TOB 5580

### NOTICE:

This light fixture should be installed in accordance with all applicable, local installation codes, and by a person familiar with the construction and operation of it, as well as the hazards involved. Inspect item and contents carefully. If any damage or defect is found, do not install. Retain all packaging material until installation is complete and approved.

### TOOLS REQUIRED (NOT INCLUDED):

Phillips Screwdriver      Slotted Screwdriver      Wire Cutters  
Slip Joint Pliers      Wire Strippers


1. Carefully remove all parts from the box. Place on a clean, soft surface.
2. Remove mounting plate (B) from canopy (E) by removing collar ring (F).
3. Install mounting plate (B) to junction box and secure with mounting screws (C).
4. Thread rod (J) to fixture body (M).
5. Feed fixture wires through rod (I), then connect to rod (J). Repeat for rod (H), connecting to rod (I).
6. Continue feeding fixture wires through rod (G), collar ring (F) and canopy (E).
7. Holding fixture upright, slide collar ring (F), canopy (E) down rods and rest on top of rod (J). Then connect rod (G) to rod (H).

**NOTE:** Slide components down slowly to avoid damages.

8. Hang fixture swivel balls (D) to the brackets of mounting plate (B).
9. Cut excess wires, being sure to leave enough to reach the junction box. Separate wires, and strip insulation on each 5/8".
10. Wrap fixture ground wire (bare copper) around the green grounding screw (see diagram 1). Tighten. Continue fixture ground wire and connect to supply ground wire (usually green or bare copper) using wire nut (A).

**NOTE:** It is imperative that the fixture is grounded.

## ASSEMBLY INSTRUCTIONS

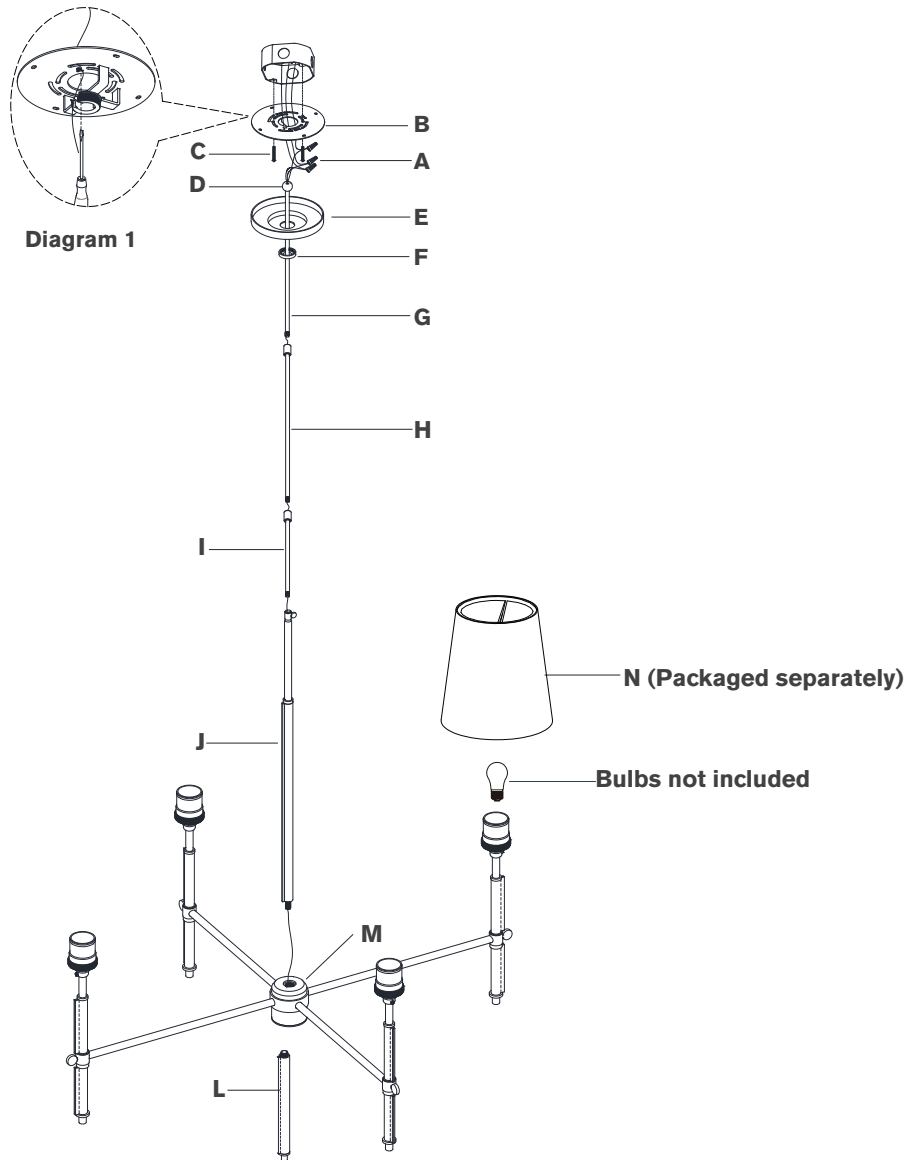

## Bryant Small Wrapped Chandelier

Item # TOB 5580

### NOTICE:

This light fixture should be installed in accordance with all applicable, local installation codes, and by a person familiar with the construction and operation of it, as well as the hazards involved. Inspect item and contents carefully. If any damage or defect is found, do not install. Retain all packaging material until installation is complete and approved.

11. Connect fixture neutral wire (white) to the supply neutral wire (usually white) using wire nut **(A)**.
  12. Connect fixture hot wire (black) to the supply hot wire (usually black) using wire nut **(A)**.
  - CAUTION:** Do not reverse the hot and neutral connections.
  13. Make sure all wire connections are tight, then carefully tuck into the junction box.
  14. Install canopy **(E)** to mounting plate **(B)** and secure with collar ring **(F)**.
  15. Thread rod **(L)** to bottom of fixture body **(M)**.
  16. Install light bulbs into sockets.
  17. Clip shades **(N)** onto light bulbs.
- NOTE:** If shade has additional packaging, carefully cut off from interior of shade to avoid damages.

**Care Instructions:** Clean only with a soft dry cloth or feather duster. Do not use abrasive or chemical agents.