

ASSEMBLY INSTRUCTIONS

Sutton 21" Flush Mount


Item # FW 4200

NOTICE:

This light fixture should be installed in accordance with all applicable, local installation codes, and by a person familiar with the construction and operation of it, as well as the hazards involved. Inspect item and contents carefully. If any damage or defect is found, do not install. Retain all packaging material until installation is complete and approved.

TOOLS REQUIRED (NOT INCLUDED):

Phillips Screwdriver Slotted Screwdriver

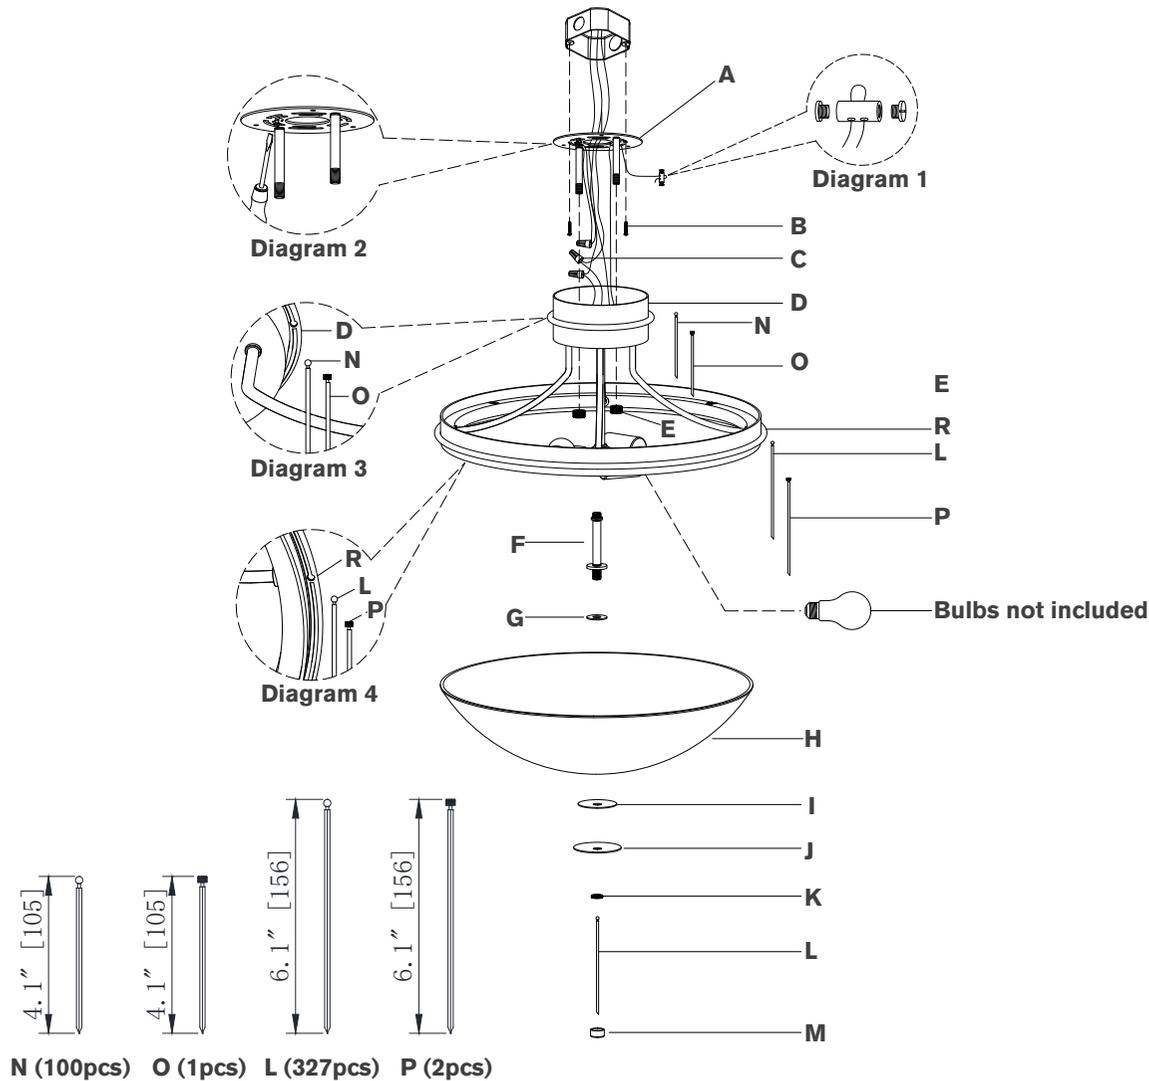

- Carefully remove all parts from the box. Place on a clean, soft surface.
- Remove mounting plate **(A)** from canopy **(D)** by removing threaded caps **(E)**.
- Install mounting plate **(A)** to the junction box and secure with mounting screws **(B)**.
- Run support cable through hole on back of mounting plate **(A)**. Loosen cable lock and install to end of support cable. Insert other end of cable through the cable lock and tighten ends with a screwdriver to secure. (see diagram 1)
- Wrap fixture ground wire (bare copper) around the green grounding screw (see diagram 2). Tighten. Continue fixture ground wire and connect to supply ground wire (usually green or bare copper) using wire nut **(L)**.
NOTE: It is imperative that the fixture is grounded.
- Connect fixture neutral wire (white) to the supply neutral wire (usually white) using wire nut **(O)**.
- Connect fixture hot wire (black) to the supply hot wire (usually black) using the wire nut **(L)**.
CAUTION: Do not reverse the hot and neutral connections.
- Make sure all wire connections are tight, then carefully tuck into the junction box.
- Install canopy **(D)** to mounting plate **(A)** and secure with threaded caps **(E)**.


ASSEMBLY INSTRUCTIONS

Sutton 21" Flush Mount

Item # FW 4200

NOTICE:

This light fixture should be installed in accordance with all applicable, local installation codes, and by a person familiar with the construction and operation of it, as well as the hazards involved. Inspect item and contents carefully. If any damage or defect is found, do not install. Retain all packaging material until installation is complete and approved.

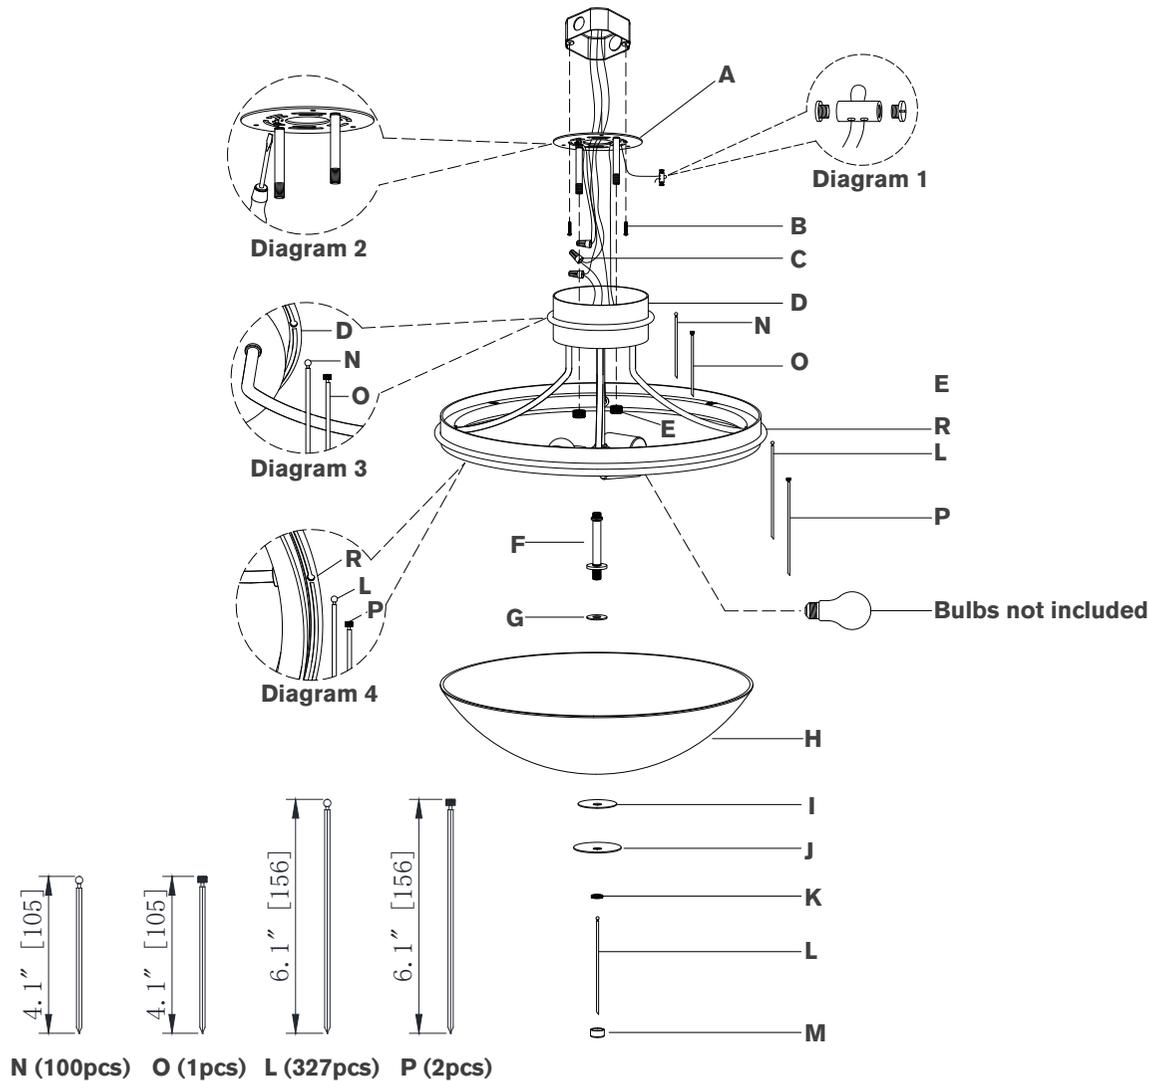

10. Install light bulbs into the sockets.
11. Thread rod **(F)** to the bottom of cluster.
12. Attach rubber washers **(G)**, glass shade **(H)**, rubber washers **(I)** and metal plate **(J)** to rod **(F)** and secure with locknut **(K)**.
NOTE: Do not overtighten otherwise shade could become damaged.
13. Let metal rod **(L)** pass through finial **(M)**, then thread finial **(M)** to rod **(F)**.
14. Insert metal drops **(N)** to opening on bottom side of canopy **(D)**, then secure by threading metal drop **(O)** to opening. See diagram 3.
15. Insert metal drops **(L)** to opening on bottom side of rings **(R)**, then secure by threading metal drop **(P)** to opening. See diagram 4.

Care Instructions: Clean only with a soft dry cloth or feather duster. Do not use abrasive or chemical agents.