
TOB3190

ASSEMBLY & INSTALLATION GUIDE

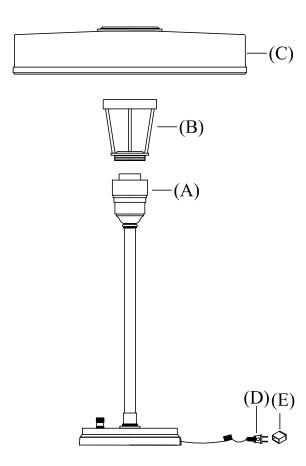

INSPECT ITEM CAREFULLY BEFORE ATTEMPTING TO INSTALL. IF THERE IS ANY DAMAGE OR OBVIOUS DEFECT, DO NOT INSTALL.

ITEM MAY NOT BE RETURNED ONCE IT HAS BEEN INSTALLED.

- 1. Screw shade holder (B) into socket housing (A).
- 2. Install bulb of correct type and wattage. See label on lamp.
- 3. Insert shade (C) into shade holder (B) by aligning the hole in shade (C).
- 4. Remove plastic cover (E) from electrical plug (D).
- 5. Plug lamp into wall outlet.