
ASSEMBLY INSTRUCTIONS

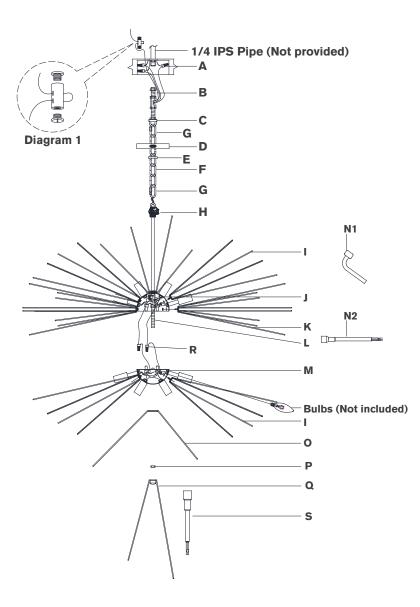

Strada Medium Round Chandelier

Item # KW 5071

NOTICE:

This light fixture should be installed in accordance with all applicable, local installation codes, and by a person familiar with the construction and operation of it, as well as the hazards involved. Inspect item and contents carefully. If any damage or defect is found, do not install. Retain all packaging material until installation is complete and approved.

TOOLS REQUIRED (NOT INCLUDED):

| Phillips Screwdriver | Slotted Screwdriver | Measuring Tape |
|----------------------|---------------------|----------------|
| Wire Cutters | Wire Strippers | |

- 1. Carefully remove all parts from the box. Place on a clean, soft surface.
- It is recommended to install a 1/4 IPS threaded pipe, secured to a structural member of the building (not included). Then install threaded tube (B) into receiver and tighten with wrench.

NOTE: Item must be supported independent of the junction box due to hanging weight.

- 3. Remove collar loop **(C)** from chain **(F)** and secure to threaded receiver attached to structural member by tightening locknut.
- 4. Install canopy (D) to collar loop (C) and secure with collar ring (E).
- Attach branch (I) to the top half ball (J) and secure with hex nut using provided wrench (N2).
- 6. Attach branch **(K)** to the top half ball **(J)** and secure with hex nut using provided wrench **(N1)**.


NOTE: It is important to let all branch **(K)** assembled and even distribution, then tighten it by wrench.

- 7. Attach branch (I) to the bottom half ball (M) and secure with the hex nut using provided wrench (N2).
- 8. Connect the black wire from the bottom half ball **(M)** to the black wire from the top half ball **(J)** using wire nut **(R)**.





ASSEMBLY INSTRUCTIONS

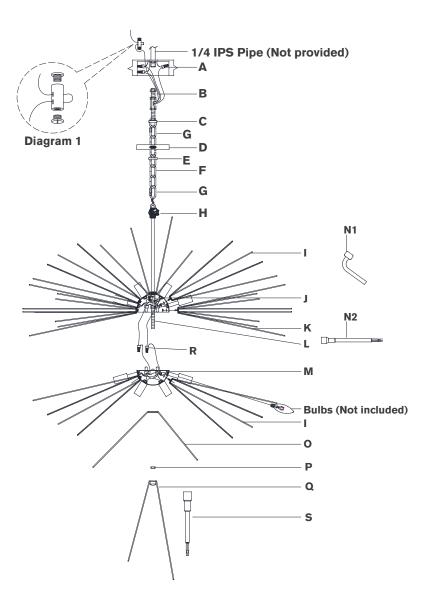

Strada Medium Round Chandelier

Item # KW 5071

NOTICE:

This light fixture should be installed in accordance with all applicable, local installation codes, and by a person familiar with the construction and operation of it, as well as the hazards involved. Inspect item and contents carefully. If any damage or defect is found, do not install. Retain all packaging material until installation is complete and approved.

- 9. Connect the white wire from the bottom half ball **(M)** to the white wire from the top half ball **(J)** with the wire nut **(R)**.
- 10. Install the bottom half ball (M) to threaded tube (L) and secure with branch (O) and hex nut (P) using provided wrench (S).
- 11. Thread branch (Q) to the bottom of threaded tube (L).
- 12. Install bulbs (not included) into the sockets.
- Determine desired overall length and amount of chain (F) needed. Shorten chain using chain pliers. (Keep extra chain)
- 14. Attach chain (F) to collar loop (C) and fixture loop (H) using quick links (G). Secure quick links (G).
- 15. Thread fixture wire, ground wire and safety cable through chain (F). NOTE: When you reach the collar loop (C), ensure there is no tension on the wires. Cut excess wires, being sure to leave about 12" to reach the junction box.
- 16. Separate two sides of molded wire and strip insulation on each 5/8".
- 17. Loosen collar ring (E) and let canopy (D) slip down chain (F) carefully.
- Twist all fixture wires together. Slip through center hole of collar loop (C).


NOTE: Untwist wires and separate to prepare for connection.

 Loosen cable lock and install to end of safety cable. Run safety cable through junction box and around structural member of building. Insert cable through cable lock and tighten the ends with a screwdriver to secure. (See diagram 1)





ASSEMBLY INSTRUCTIONS

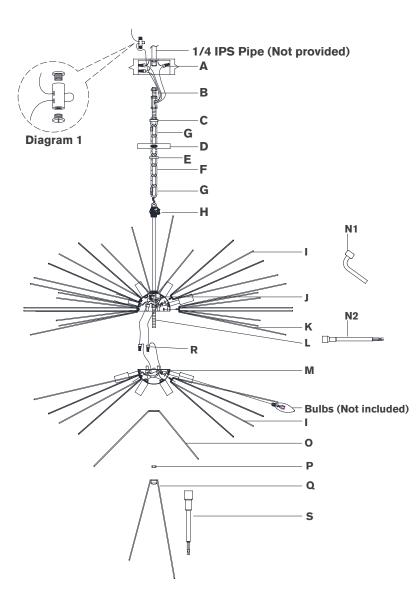

Strada Medium Round Chandelier

Item # KW 5071

NOTICE:

This light fixture should be installed in accordance with all applicable, local installation codes, and by a person familiar with the construction and operation of it, as well as the hazards involved. Inspect item and contents carefully. If any damage or defect is found, do not install. Retain all packaging material until installation is complete and approved.

- 20. Connect fixture ground wire (bare copper) to the supply ground wire (usually green or bare copper) using wire nut (A).NOTE: It is imperative that the fixture is grounded.
- 21. Connect fixture neutral wire (white) to the supply neutral wire (usually white) using wire nut **(A)**.
- 22. Connect fixture hot wire (black) to the supply hot wire (usually black) using the wire nut **(A)**.


CAUTION: Do not reverse the hot and neutral connections.

- 23. Make sure all wire connections are tight and tuck into the junction box.
- 24. Install canopy (D) to collar loop (C) and secure with collar ring (E).

Care Instructions: Clean only with a soft dry cloth or feather duster. Do not use abrasive or chemical agents.

DRY

VISUAL COMFORT

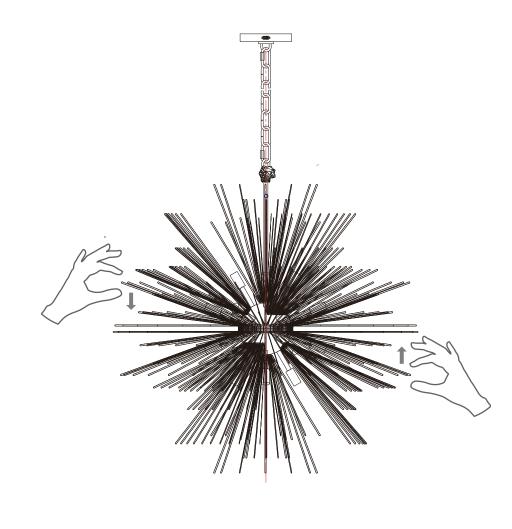

Strada Medium Round Chandelier

Item # KW 5071

NOTICE:

This light fixture should be installed in accordance with all applicable, local installation codes, and by a person familiar with the construction and operation of it, as well as the hazards involved. Inspect item and contents carefully. If any damage or defect is found, do not install. Retain all packaging material until installation is complete and approved.

For a more personalized style you are able to gently bend spines in any direction.

NOTICE: BENDING SPINES MULTIPLE TIMES CAN CAUSE THEM TO BREAK



