


ASSEMBLY INSTRUCTIONS

ITEM DESCRIPTION:

| | |
|---|------------------------|
| ITEM NO.: 49517 | NAME: Rosemont Pendant |
| MATERIAL TYPE: Steel/Glass/Alabaster FINISH: Bronze/Matte Swirl/White | |
| SOCKET TYPE: E26 | SOCKET QTY: 1 |
| BULB WATTAGE: 60W or/CFL 16W or/LED 13W | |
| VOLTAGE: 110-120 V | ITEM NET WEIGHT: 20LBS |

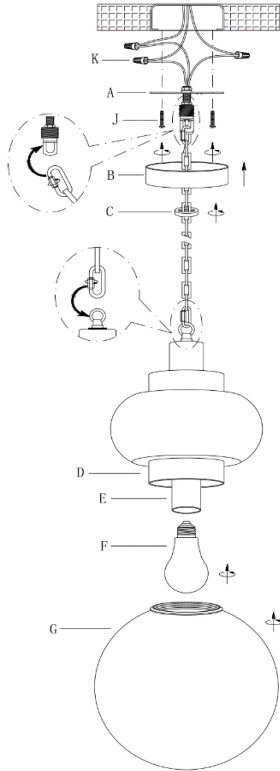

PARTS INCLUDED:

| | | | |
|------------------|-------|-------------------|------|
| A MOUNTING PLATE | 1 PC | E SOCKET | 1 PC |
| B CANOPY | 1 PC | F BULB (NOT INCL) | 1 PC |
| C COLLAR LOOP | 1 PC | G GLASS SHADE | 1 PC |
| D LAMP BODY | 4 PCS | | |

HARDWARE INCLUDED:

| | |
|--------------------------|--------------------|
| J Plastic Wire Connector | L Allen Wrench |
| K Mounting Screws | Green Ground Screw |

TO INSTALL YOU WILL NEED:

- 2 people recommended
- Phillips Screwdriver

These instructions are provided for safety. It is very important that they are read carefully and completely before beginning installation of this chandelier.

We strongly suggest that all hard-wired fixtures must be installed by a professional electrician.



TO ASSEMBLE:

1. Remove all packing contents from the carton(s) carefully. Ensure you have all parts indicated before you begin assembly.
2. Shut off the main electrical supply from the main fuse box/circuit breaker.
3. Connect the canopy(b) to the lamp body(d) by using chain through the canopy(b), rotate the fixing part on the chain in the counterclockwise direction and hook the upper and lower ring, respectively. Then rotate the fixing part in clockwise direction after hooking.
4. Pull the electrical cord of "j box" through the exit hole of the mounting plate(a).
5. Carefully inspect the fixture wires. The neutral fixture wire has very fine ridges molded into its plastic covering. The hot fixture wire has a smooth covering. The bare wire is the grounded wire.
6. Attach the ground wire from the fixture to the ground junction box wire from the outlet (usually green or bare wire). Fasten each together with a plastic wire connector (k) and wrap the connection with electrical tape. If your outlet box does not have a ground wire, insert the green ground screw into the mounting plate (a) facing down, and wrap the fixture's bare ground wire around the ground screw. It is imperative that the outlet box in your home be properly grounded.
7. Connect the neutral fixture wire to the neutral junction box wire (usually white). Fasten each together with a wire connector (k) and wrap the connection with electrical tape. Be sure no strands are exposed.
8. Connect the hot fixture wire to the hot junction box wire (usually black). Fasten each together with a plastic wire connector (k) and wrap the connection with electrical tape. Be sure no wire strands are exposed. Do not reverse the hot and neutral connections or safety will be compromised.
9. Gently tuck the wire connections neatly into the junction box.
10. Attach the mounting plate (a) to the outlet box by using the mounting screws(j) and tighten screws with a screwdriver.
11. Push collar loop(c) in canopy (b) and tighten onto nipple in mounting plate (a) by turning in a clockwise direction.
12. Attach the bulb(f) to socket(e) in a clockwise direction, then install the round glass shade(g) in a clockwise direction as well.
13. Restore power to the junction box and test fixture.

CARE INSTRUCTIONS:

Wipe with a soft, dry cloth. To protect finish, avoid the use of chemicals and household cleaners.

For customer service questions call 1-800-338-2150

ARTERIO RS