

ASSEMBLY INSTRUCTIONS

ITEM DESCRIPTION:

ITEM NO.: 89660 NAME: Santorini Chandelier

MATERIAL TYPE: Glass FINISH: Blue Smoke Luster

SOCKET TYPE: Integrated LED SOCKET QTY: 1


BULB WATTAGE: 60W LED

VOLTAGE: 110-120 V ITEM NET WEIGHT: 32.84LBS



TO ASSEMBLE:

1. Remove all packing contents and parts from the carton(s) carefully. Ensure you have all parts indicated before you begin assembly.
2. Shut off the main electrical supply from the fuse box/circuit breaker.
3. The posts (F1, F2, F3) into the light tube (Q). Attach the screw (N) with nipple to the light tube (Q) and tighten screws with a screwdriver.
4. Screw the rod (G4) to junction box (F) till tight, repeat operation on the rod (G3), rod (G2) and rod (G1) when you connect the rods, loosen the small hex screws (E) in the side hole first then tighten with Allen wrench (U) after all rods are connected. Be sure all the hexangular screws are tight enough.
5. Connect rod (G1), collar loop (C), canopy (B) & mounting plate (A) with nipple on mounting plate (A).
6. Pull the electrical cord of "j-box" through the exit hole of the mounting plate.
7. Please pay special attention that you do not need to connect the wire connect device (M). It is used for the wire connection for euro-market.
8. Carefully inspect the fixture wires. The neutral fixture wire has very fine ridges molded into its plastic covering. The hot fixture wire has a smooth covering. The bare silver wire is the grounded wire.
9. Attach the ground wire from the fixture to the ground junction box wire from the outlet (usually green or bare wire). Fasten each together with a plastic wire connector (K) and wrap the connection with electrical tape. If your outlet box does not have a ground wire, insert the green ground screw into the mounting plate (A) facing down, and wrap the fixture's bare ground wire around the ground screw. It is imperative that the outlet box in your home be properly grounded.
10. Connect the neutral fixture wire to the neutral junction box wire (usually white). Fasten each together with a wire connector (K) and wrap the connection with electrical tape. Be sure no strands are exposed.
11. Connect the hot fixture wire to the hot junction box wire (usually black). Fasten each together with a plastic wire connector (K) and wrap the connection with electrical tape. Be sure no wire strands are exposed. Do not reverse the hot and neutral connections or safety will be compromised.
12. Connect the lamp input power cable (O) usually black and white wire, according to the principle of connecting the black wire to the + pole and the white wire to the - pole to the 2-wire terminal (P), and then cover the 2-wire terminal (P) cap.
13. Gently tuck the wire connections neatly into the junction box.
14. Attach the mounting plate (A) with nipple to the ceiling outlet box using the enclosed mounting screws (J).
15. Push collar loop (C) in canopy (B) and tighten onto nipple in mounting plate (A) by turning in a clockwise.
16. Attached the u-glass (H) on the lamp body (Q), then attached the bolster (R) to the u-glass (H) hole, and secure it with top thumbscrew (D) And bottom thumbscrew (I).
17. Restore power to the junction box and test fixture.

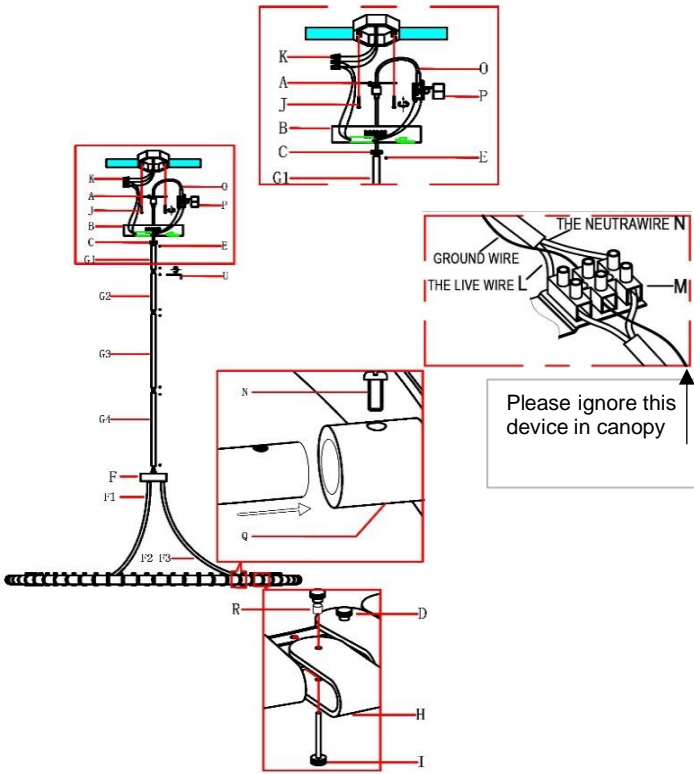

PARTS INCLUDED:

(A) Mounting Plate	Qty: 1	(I) Bottom Thumb Screw	Qty: 60
(B) Canopy	Qty: 1	(N) Screw	Qty: 3
(C) Collar Loop	Qty: 1	(O) Power Cable	Qty: 1
(D) Top Thumb Screw	Qty: 60	(P) 2-Wire Terminal	Qty: 1
(E) Hex Screw	Qty: 2	(Q) Light Tube	Qty: 1
(F1, F2, F3) Post	Qty: 1	(F) Junction Box	Qty: 1
(G1, G2, G3, G4) Rods	Qty: 4	(R) Bolster	Qty: 60
(H) U-Glass	Qty: 60		

HARDWARE INCLUDED:

(K) Plastic Wire Connector	(U) Allen Wrench
(J) Mounting Screw	(S) Wrench
Green Ground Screw	(C) Anchor
(E) Strengthened Screw	

TO INSTALL YOU WILL NEED:

· 2 people recommended · Phillips Screwdriver
These instructions are provided for safety. It is very important that they are read carefully and completely before beginning installation of this chandelier.

We strongly suggest that all hard-wired fixtures must be installed by a professional electrician.

CARE INSTRUCTIONS:

Wipe with a soft, dry cloth. To protect finish, avoid the use of chemicals and household cleaners.

For customer service questions call 1-800-338-2150

ARTERIOS