ASSEMBLY INSTRUCTIONS

ITEM DESCRIPTION:


ITEM NO.: 89653 NAME: Panella Chandelier

MATERIAL TYPE: Steel/Glass FINISH: Antique Brass/Matte Swirl

SOCKET TYPE: E12 SOCKET QTY: 12

BULB WATTAGE: 40W/10W CFL/9W LED

VOLTAGE: 110-120 V ITEM NET WEIGHT: 23LBS

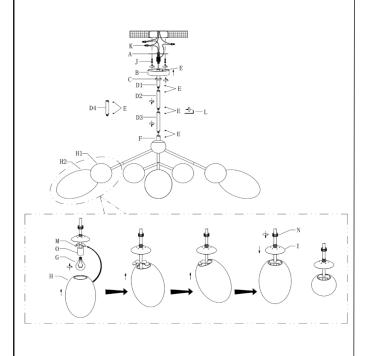

PARTS INCLUDED:

A MOUNTING PLATE	1 PC	H1 ROUND GLASS SHADI 8 PCS	
B CANOPY	1 PC	H2 OVAL GLASS SHADE 4 PCS	
C COLLAR LOOP	1 PC	I METAL CAP	12 PCS
D1,D2,D3,D4 ROD	4 PCS	N FIXING PART	12 PCS
E HEX SCREW	9 PCS	M ARM FOR GLASS SHAE 12 PCS	
F LAMP BODY	1 PC	O SOCKET	12 PCS

G BULB(not included bulb) 12 PCS

HARDWARE INCLUDED:

K Plastic Wire Connector	L Allen Wrench
J Mounting Screws	Green Ground Screw

TO INSTALL YOU WILL NEED:

• 2 people recommended • Phillips Screwdriver

These instructions are provided for safety. It is very important that they are read carefully and completely before beginning installation of this chandelier.

We strongly suggest that all hard-wired fixtures must be installed by a professional electrician.



TO ASSEMBLE:

- Remove all packing contents from the carton(s) carefully. Ensure you have all parts indicated before you begin assembly.
- 2. Shut off the main electrical supply from the main fuse box/circuit breaker.
- Connect lamp body(f) and canopy(b) with rod (d1, d2, d3, d4), when you connect the
 rods, loosen the small hex screws(e) first then tighten with Allen wrench(l) after all rods
 are connected. Be sure all the hex screws(e) are tight enough. Note: if you want the
 fixture to be semi-flush mount, you only need connect lamp body(f) and canopy(b) with
 rod(d4)
- 4. Pull the electrical cord of "j box " through the exit hole of the mounting plate(a).
- Carefully inspect the fixture wires. The neutral fixture wire has very fine ridges molded into its plastic covering. The hot fixture wire has a smooth covering. The bare wire is the grounded wire.
- 6. Attach the ground wire from the fixture to the ground junction box wire from the outlet (usually green or bare wire). Fasten each together with a plastic wire connector (k) and wrap the connection with electrical tape. If your outlet box does not have a ground wire, insert the green ground screw into the mounting plate (a) facing down, and wrap the fixture's bare ground wire around the ground screw. It is imperative that the outlet box in your home be properly grounded.
- Connect the neutral fixture wire to the neutral junction box wire (usually white). Fasten
 each together with a wire connector (k) and wrap the connection with electrical tape. Be
 sure no strands are exposed.
- Connect the hot fixture wire to the hot junction box wire (usually black). Fasten each
 together with a plastic wire connector (k) and wrap the connection with electrical tape.
 Be sure no wire strands are exposed. Do not reverse the hot and neutral connections or
 safety will be compromised.
- 9. Gently tuck the wire connections neatly into the junction box.
- 10. Attach the mounting plate (a) to the outlet box by using the mounting screws(j) and tighten screws with a screwdriver.
- Push collar loop(c) in canopy (b) and tighten onto nipple in mounting plate (a) by turning in a clockwise direction.
- 12. First install the bulb(g) in the socket(o) in a clockwise direction, then tilt the glass shade(h) and put the arm(m) on both sides into glass shade. Fit the metal cap(i) to the glass shade(h), then secure the shade with fixing part(n) in a clockwise direction.
- The rest of the glass shade (h1, h2) shall be assembled one by one according to the above method.
- 14. Restore power to the junction box and test fixture.

CARE INSTRUCTIONS:

Wipe with a soft, dry cloth. To protect finish, avoid the use of chemicals and household cleaners.

ARTERIORS