


# ASSEMBLY INSTRUCTIONS

## ITEM DESCRIPTION:

ITEM NO.: 89498	NAME: Paden Chandelier
MATERIAL TYPE: Steel/Leather	FINISH: Antique Brass/Cognac
SOCKET TYPE: E12	SOCKET QTY: 9
BULB WATTAGE: 40W or/CFL 10W or/LED 9W	
VOLTAGE: 110-120 V	ITEM NET WEIGHT: 18.6LBS

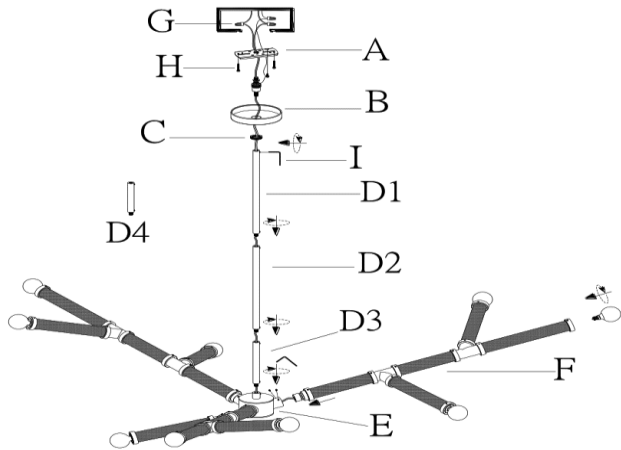

## TO ASSEMBLE:

1. Remove all packing contents from the carton(s) carefully. Ensure you have all parts indicated before you begin assembly.
2. Shut off the main electrical supply from the main fuse box/circuit breaker.
3. Remove the mounting plate(a) from the canopy(b) by turning collar loop (c) in a counterclockwise direction.
4. Screw the rod(d3) onto the junction box (e) and tighten the hexangular screw in the side desire hole by Allen wrench(i). Repeat the same operation on the rod (d1) and (d2). If the ceiling is high enough, pls assemble the rod(d4) if need.
5. Insert the tip end of socket assembly (f) in the metal ring on junction box carefully, and use 2pcs hexangular screws by Allen wrench(i) till tight. Repeat the same operation on the remaining 2pcs socket assembly. Pls adjust three socket assembly even distributed before screwing tight side hexangular.
6. Carefully inspect the pendant's fixture wires. The neutral fixture wire has very fine ridges molded into its plastic covering. The hot fixture wire has a smooth covering. The bare silver wire is the grounded wire.
7. Attach the ground wire from the fixture to the ground junction box wire from the outlet (usually green) or bare wire). Fasten each together with a plastic wire connector (g) and wrap the connection with electrical tape. If your outlet box does not have a ground wire, insert the green ground screw into the mounting plate (a) facing down, and wrap the fixture's bare ground wire around the ground screw. It is imperative that the outlet box in your home be properly grounded.
8. Connect the neutral fixture wire to the neutral junction box wire (usually white). Fasten each together with a wire connector (g) and wrap the connection with electrical tape. Be sure no strands are exposed.
9. Connect the hot fixture wire to the hot junction box wire (usually black). Fasten each together with a plastic wire connector (g) and wrap the connection with electrical tape. Be sure no wire strands are exposed. Do not reverse the hot and neutral connections or safety will be compromised.
10. Gently truck the wire connections neatly into the ceiling junction box.
11. Attach the mounting plate (a) with nipple to the ceiling outlet box using the enclosed mounting screws (h) and tighten screws with a screwdriver.
12. Push collar loop in canopy (b) and thread onto nipple in mounting plate (a) by turning in a clockwise
13. Screw rod (d1) to the canopy (b) by using hexangular screw and Allen wrench(i) be sure all the hexangular screws are tight enough.
14. Insert 9 type g 40w bulbs (or suitable cfl 10w/led 9w bulbs, not included) in the sockets. Do not exceed specified wattage.

## PARTS INCLUDED:

A MOUNTING PLATE	1 PC	D RODS	4 PCS
B CANOPY	1 PC	E JUNCTION BOX	1 PC
C COLLAR LOOP	1 PC	F SOCKETS/ARMS	3 PCS

## HARDWARE INCLUDED:

K Plastic Wire Connector	2 Pcs	Allen Wrench	1 Pc
J Mounting Screws	2 Pc		
Green Ground Screw	1 Pc		

## TO INSTALL YOU WILL NEED:

- 2 people recommended
- Phillips Screwdriver

These instructions are provided for safety. It is very important that they are read carefully and completely before beginning installation of this chandelier.

We strongly suggest that all hard-wired fixtures must be installed by a professional electrician.

## CARE INSTRUCTIONS:

Wipe with a soft, dry cloth. To protect finish, avoid the use of chemicals and household cleaners.

For customer service questions call 1-800-338-2150

ARTERIOS