


# ASSEMBLY INSTRUCTIONS

## ITEM DESCRIPTION:

|                             |                           |
|-----------------------------|---------------------------|
| ITEM NO.: 49522             | NAME: Penelope Pendant    |
| MATERIAL TYPE: Glass        | FINISH: Clear Seedy       |
| SOCKET TYPE: Integrated LED | SOCKET QTY: 1             |
| BULB WATTAGE: 12W LED       |                           |
| VOLTAGE: 110-120V           | ITEM NET WEIGHT: 41.26LBS |

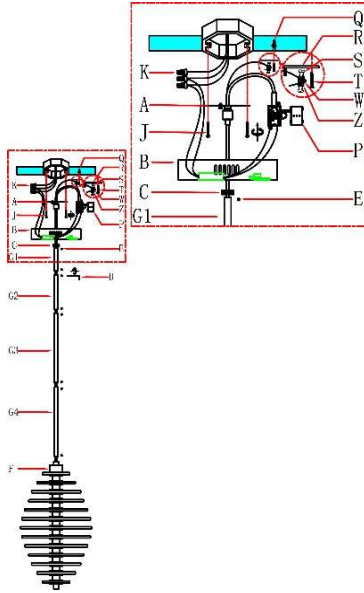

## PARTS INCLUDED:

|                   |       |                    |      |
|-------------------|-------|--------------------|------|
| A) MOUNTING PLATE | 1PC   | O) POWER CABLE     | 1 PC |
| B) CANOPY         | 1PC   | P) 2-WIRE TERMINAL | 1 PC |
| C) COLLAR LOOP    | 1 PC  | R) BRACKET         | 1 PC |
| E) HEX SCREW      | 2 PCS | S) SCREW           | 2 PC |
| F) LAMP BODY      | 1PC   | W) AIRCRAFT WIRE   | 1 PC |
| G1.2.3.4) RODS    | 1 PC  | Z) COUPLING        | 1 PC |

## HARDWARE INCLUDED:

|                        |   |                  |   |
|------------------------|---|------------------|---|
| Mounting Screws        | 2 | Canopy Screws    | 4 |
| Plastic Wire Connector | 1 | Hexangular Screw | 1 |
| Green Ground Screw     | 1 | Allen Wrench     | 1 |

## TO INSTALL YOU WILL NEED:

- 2 people recommended
- Phillips Screwdriver

These instructions are provided for safety. It is very important that they are read carefully and completely before beginning installation.

We strongly suggest that all hard-wired fixtures must be installed by a professional electrician.



## TO ASSEMBLE:

1. REMOVE ALL PACKING CONTENTS AND PARTS FROM THE CARTON(S) CAREFULLY.
2. PLEASE BE SURE YOU HAVE ALL PARTS INDICATED BEFORE YOU BEGIN ASSEMBLY.
3. SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER.
4. INSERT THE ROD(G4) TO LAMP BODY(F) AND THEN TIGHTEN CLOCKWISE DIRECTION, REPEAT THE SAME OPERATION ON THE ROD(G3), ROD(G2) AND ROD(G1) WHEN YOU CONNECT THE RODS, LOOSEN THE SMALL HEX SCREWS(E) IN THE SIDE HOLE FIRST, THEN TIGHTEN WITH ALLEN WRENCH(U) AFTER ALL RODS ARE CONNECTED. BE SURE ALL THE HEXANGULAR SCREWS ARE TIGHT ENOUGH.
5. CONNECT ROD(G1), COLLAR LOOP(C), CANOPY(B) & MOUNTING PLATE(A) WITH NIPPLE ON MOUNTING PLATE(A).
6. PULL THE ELECTRICAL CORD OF "J BOX" THROUGH THE EXIT HOLE OF THE MOUNTING PLATE(A)
7. DRILL ONE HOLE ON THE CEILING AND INSERT ANCHOR(Q) INTO DRILLED HOLE, THEN FIX BRACKET(R) TO THE CEILING WITH STRENGTHENED SCREW (T) BY SCREWING INTO ANCHOR(Q). REMOVE THE COUPLING(Z) FROM THE AIRCRAFT WIRE(W) BY LOOSENING (2) SCREWS(S). PASS THE AIRCRAFT WIRE(W) THROUGH (2) HOLES ON THE BRACKET(R). THEN PASS THE AIRCRAFT WIRE(W) THROUGH (2) HOLES ON THE COUPLING(Z) AND FIX WITH (2) SCREWS(S) BE SURE TO TIGHTEN TWO SCREWS ATTACHED ON THE COUPLING(Z).
8. PLEASE PAY SPECIAL ATTENTION THAT YOU DO NOT NEED TO CONNECT THE WIRE CONNECT DEVICE(M). IT IS USED FOR THE WIRE CONNECTION FOR EURO-MARKET.
9. CAREFULLY INSPECT THE FIXTURE WIRES. THE NEUTRAL FIXTURE WIRE HAS VERY FINE RIDGES MOLDED INTO ITS PLASTIC COVERING. THE HOT FIXTURE WIRE HAS A SMOOTH COVERING. THE BARE SILVER WIRE IS THE GROUNDED WIRE.
10. ATTACH THE GROUND WIRE FROM THE FIXTURE TO THE GROUND JUNCTION BOX WIRE FROM THE OUTLET (USUALLY GREEN OR BARE WIRE). FASTEN EACH TOGETHER WITH A PLASTIC WIRE CONNECTOR (K) AND WRAP THE CONNECTION WITH ELECTRICAL TAPE. IF YOUR OUTLET BOX DOES NOT HAVE A GROUND WIRE, INSERT THE GREEN GROUND SCREW INTO THE MOUNTING PLATE (A) FACING DOWN, AND WRAP THE FIXTURE'S BARE GROUND WIRE AROUND THE GROUND SCREW. IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME BE PROPERLY GROUNDED.
11. CONNECT THE NEUTRAL FIXTURE WIRE TO THE NEUTRAL JUNCTION BOX WIRE (USUALLY WHITE). FASTEN EACH TOGETHER WITH A WIRE CONNECTOR (K) AND WRAP THE CONNECTION WITH ELECTRICAL TAPE. BE SURE NO STRANDS ARE EXPOSED.
12. CONNECT THE HOT FIXTURE WIRE TO THE HOT JUNCTION BOX WIRE (USUALLY BLACK). FASTEN EACH TOGETHER WITH A PLASTIC WIRE CONNECTOR (K) AND WRAP THE CONNECTION WITH ELECTRICAL TAPE. BE SURE NO WIRE STRANDS ARE EXPOSED. DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.
13. CONNECT THE LAMP INPUT POWER CABLE(O) USUALLY BLACK AND WHITE WIRE, ACCORDING TO THE PRINCIPLE OF CONNECTING THE BLACK WIRE TO THE + POLE AND THE WHITE WIRE TO THE-POLE TO THE 2-WIRE TERMINAL (P), AND THEN COVER THE 2-WIRE TERMINAL (P) CAP.
14. GENTLY TUCK THE WIRE CONNECTIONS NEATLY INTO THE JUNCTION BOX.
15. ATTACH THE MOUNTING PLATE (A) WITH NIPPLE TO THE CEILING OUTLET BOX USING THE ENCLOSED MOUNTING SCREWS (J) AND TIGHTEN SCREWS WITH A SCREWDRIVER.
16. PUSH COLLAR LOOP(C) IN CANOPY (B) AND THREAD ONTO THE NIPPLE IN MOUNTING PLATE (A) BY TURNING IN A CLOCKWISE DIRECTION.
17. RESTORE POWER TO THE JUNCTION BOX AND TEST FIXTURE.

## CARE INSTRUCTIONS:

Wipe with a soft, dry cloth. To protect finish, avoid the use of chemicals and household cleaners.

For customer service questions call 1-800-338-2150

ARTERIOURS