


ASSEMBLY INSTRUCTIONS

ITEM DESCRIPTION:

| | |
|---|------------------------|
| ITEM NO.: 49388 | NAME: Fisk Pendant |
| MATERIAL TYPE: Steel | FINISH: Bronze |
| SOCKET TYPE: INTEGRATED LED SOCKET QTY: 1 | |
| BULB WATTAGE: 35W LED | |
| VOLTAGE: 110-120 V | ITEM NET WEIGHT: 16LBS |

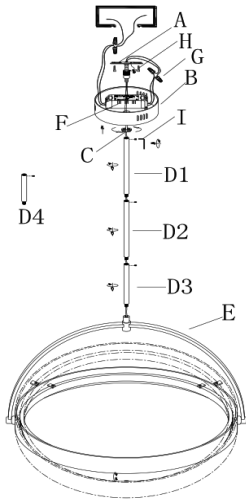

PARTS INCLUDED:

| | |
|------------------|--------|
| A Mounting Plate | Qty: 1 |
| B Canopy | Qty: 1 |
| C Collar Loop | Qty: 1 |
| D Rods | Qty: 4 |
| E Main Body | Qty: 1 |
| F Driver | Qty: 1 |
| | Qty: 1 |
| | Qty: 1 |
| | Qty: 1 |

HARDWARE INCLUDED:

| | | | |
|------------------------|-------|---------------|-------|
| Mounting Screws | 2 Pcs | Canopy Screws | 2 Pcs |
| Plastic Wire Connector | 2 Pc | Allen Wrench | 1 Pc |
| Green Ground Screw | 1 Pc | | |

TO INSTALL YOU WILL NEED:

- 2 people recommended
- Phillips Screwdriver

These instructions are provided for safety. It is very important that they are read carefully and completely before beginning

We strongly suggest that all hard-wired fixtures must be installed by a professional electrician.



TO ASSEMBLE:

1. Remove all packing contents from the carton(s) carefully
2. Remove all parts from the package(s) carefully
3. Please be sure you have all parts indicated before you begin assembly
4. Shut off the main electrical supply from the main fuse box/circuit breaker
5. Remove the mounting plate(a) from the canopy(b) by turning collar loop (c) in a counterclockwise direction
6. Screw the rod(d3) on the top of main body(e) and tighten the hexagonal screw in the side hole with allen wrench(i). Repeat the same operation on the rod (d1) and (d2).
7. If the ceiling is high enough, please assemble the rod(d4) if needed.
8. Carefully inspect the pendant's fixture wires. The neutral fixture wire has very fine ridges molded.
9. The hot fixture wire has a smooth covering. The bare silver wire is the grounded wire.
10. Attach the ground wire from the fixture to the ground junction box wire from the outlet (usually green) or bare wire). Fasten each together with a plastic wire connector (g) and wrap the connection with electrical tape. If your outlet box does not have a ground wire, insert the green ground screw into the mounting plate (a) facing down and wrap the fixture's bare ground wire around the ground screw. It is imperative that the outlet box in your home be properly grounded.
11. Connect the neutral fixture wire to the neutral driver(f) wire (output, usually white). Fasten each together with a wire connector (g) and wrap the connection with electrical tape. Be sure no strands are exposed.
12. Connect the hot fixture wire to the hot driver(f) wire (output, usually black). Fasten each together with a plastic wire connector (g) and wrap the connection with electrical tape. Be sure no wire strands are exposed. Do not reverse the hot and neutral connections or safety will be compromised.
13. Connect the hot driver wire (another end, input) to the hot junction box wire (usually black). Fasten each together with a plastic wire connector (g) and wrap the connection with electrical tape. Be sure no wire strands are exposed. Do not reverse the hot and neutral connections or safety will be compromised.
14. Connect the neutral driver wire (another end, input) to the neutral junction box wire (usually black). Fasten each together with a plastic wire connector (g) and wrap the connection with electrical tape. Be sure no wire strands are exposed. Do not reverse the hot and neutral connections or safety will be compromised.
15. Gently tuck the wire connections neatly into the ceiling junction box.
16. Attach the mounting plate (a) with nipple to the ceiling outlet box using the enclosed mounting screws (h) and tighten screws with a Phillips screwdriver.
17. Push collar loop in canopy (b) and thread onto nipple in mounting plate (a).
18. Wipe with a soft, dry cloth. To protect finish, avoid the use of chemicals and household cleaners.

CARE INSTRUCTIONS:

For customer service questions call 1-800-338-2150

ARTERIOS