


# ASSEMBLY INSTRUCTIONS

## ITEM DESCRIPTION:

ITEM NO.: DWI08	NAME: Antoni Sconce
MATERIAL TYPE: Iron	FINISH: Bronze
SOCKET TYPE: E26	SOCKET QTY: 1
BULB WATTAGE: 40W/10W CFL/9W LED	
VOLTAGE: 110-120 V	ITEM NET WEIGHT: 4.1 LBS

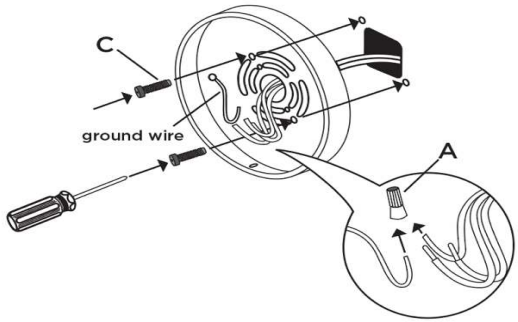

## TO ASSEMBLE:

1. Shut off the main electrical supply from the main fuse box/circuit breaker.
2. Attach mounting plate to wall or junction box using mounting screws (C).
3. Connect ground wire from wall to ground wire from lamp using wire caps (A).
4. Attach house wire to lamp wires as shown. Fasten the pairs together with a wire caps. **DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.**
5. Place the main frame on the groove given on the top of the mounting plate and fix by tightening the canopy screw (B) in the predrilled hole at the bottom.
6. Insert light bulb.

## PARTS INCLUDED:

Mounting Plate	Qty: 1
Body	Qty: 1
Shade	Qty: 1

## HARDWARE INCLUDED:

Mounting Screws ( C )	Qty: 2
Wire Cap (A)	Qty: 3
Canopy Screw (B)	Qty: 2

## TOOLS NEEDED (Not Included):

1 Screwdriver
---------------

These instructions are provided for safety. It is very important that they are read carefully and completely before beginning installation.

We strongly suggest that all hard-wired fixtures must be installed by a professional electrician.

## CARE INSTRUCTIONS:

Wipe with a soft, dry cloth. To protect finish, avoid the use of chemicals and household cleaners.

For customer service questions call 1-800-338-2150

ARTERIO RS