

ASSEMBLY INSTRUCTIONS

ITEM DESCRIPTION:

ITEM NO.: 89067

NAME: Javier Chandelier

MATERIAL TYPE: Steel/Crystal FINISH: Antique Brass/Champagne


SOCKET TYPE: E12

SOCKET QTY: 12

BULB WATTAGE: 8W LED BULB ONLY

VOLTAGE: 110-120 V

ITEM NET WEIGHT: 54LBS

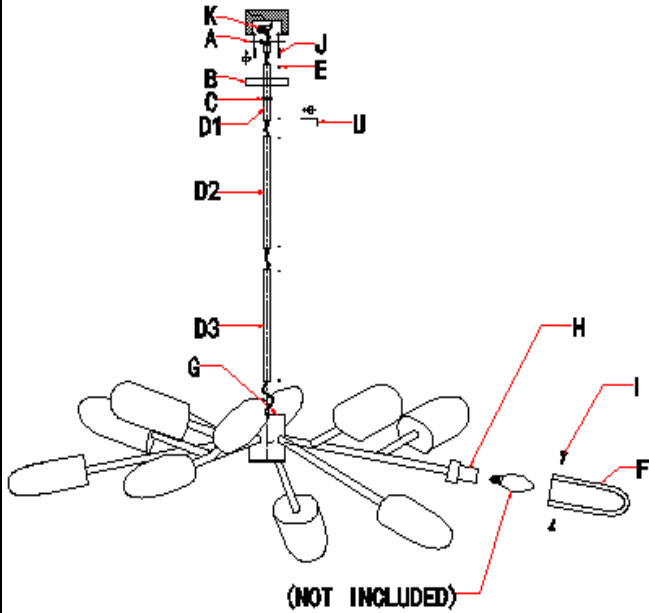

PARTS INCLUDED:

A Mounting Plate	Qty: 1	F Crystal	Qty: 12
B Canopy	Qty: 1	G Lamp Body	Qty: 1
C Collar Loop	Qty: 1	H Sockets	Qty: 12
D Rods	Qty: 3	I Thumb Screw	Qty: 24
E Hex Screws	Qty: 6		

HARDWARE INCLUDED:

K Plastic Wire Connector	2 Pc	U Allen Wrench	1 Pc
J Mounting Screws	2 Pcs		
Green Ground Screw	1 Pc		

TO INSTALL YOU WILL NEED:

- 2 people recommended
- Phillips Screwdriver

These instructions are provided for safety. It is very important that they are read carefully and completely before beginning installation of this chandelier.

We strongly suggest that all hard-wired fixtures must be installed by a professional electrician.



TO ASSEMBLE:

1. Remove all packing contents and parts from the carton(s) carefully. Ensure you have all parts indicated before you begin assembly.
2. Shut off the main electrical supply from the main fuse box/circuit breaker.
3. Screw the rod(d3) to lamp body(g) till tight, repeat the same operation on the rod(d1) and rod(d2) when you connect the rods, loosen the small hex screws(e) in the side hole first then tighten with Allen wrench(u) after all rods are connected. Be sure all the hexagonal screws are tight enough.
4. Remove the mounting plate(a) from the canopy(b) by turning collar loop (c) in a counterclockwise direction.
5. Pull the electrical cord of "j-box" through the exit hole of the mounting plate.
6. Carefully inspect the fixture wires. The neutral fixture wire has very fine ridges molded into its plastic covering. The hot fixture wire has a smooth covering. The bare wire is the grounded wire.
7. Attach the ground wire from the fixture to the ground junction box wire from the outlet (usually green or bare wire). Fasten each together with a plastic wire connector (k) and wrap the connection with electrical tape. If your outlet box does not have a ground wire, insert the green ground screw into the mounting plate (a) facing down, and wrap the fixture's bare ground wire around the ground screw. It is imperative that the outlet box in your home be properly grounded.
8. Connect the neutral fixture wire to the neutral junction box wire (usually white). Fasten each together with a wire connector (k) and wrap the connection with electrical tape. Be sure no strands are exposed.
9. Connect the hot fixture wire to the hot junction box wire (usually black). Fasten each together, with a plastic wire connector (k) and wrap the connection with electrical tape. Be sure no wire strands are exposed. Do not reverse the hot and neutral connections or safety will be compromised.
10. Gently tuck the wire connections(k) neatly into the junction box.
11. Attach the mounting plate (a) with nipple to the ceiling outlet box using the enclosed mounting screws (j) and tighten screws with a screwdriver.
12. Push collar loop(c) in canopy (b) and thread onto the nipple in mounting plate (a) by turning in a clockwise direction.
13. Insert 12 type b 8w led bulbs only (not included) into the socket (h). Do not exceed the specified wattage.
14. Attach the crystal (f) to the lamp body and secure the crystal(f) with 2pcs thumbscrews(i). Repeat the same operation on the other crystals.
15. Restore power to the junction box and test fixture.

CARE INSTRUCTIONS:

Wipe with a soft, dry cloth. To protect finish, avoid the use of chemicals and household cleaners.

For customer service questions call 1-800-338-2150

ARTERIO RS