


# ASSEMBLY INSTRUCTIONS

## ITEM DESCRIPTION:

ITEM NO.: 49084	NAME: Nox Sconce
MATERIAL TYPE: Steel	FINISH: Antique Brass, Bronze
SOCKET TYPE: E26	SOCKET QTY: 1
BULB WATTAGE: 60W	
VOLTAGE: 110-120V	ITEM NET WEIGHT: 9LBS

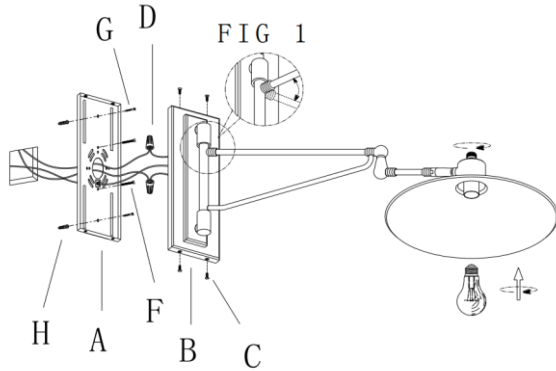

## PARTS INCLUDED:

Mounting Plate ( A )	Qty: 1
Back Plate ( B )	Qty: 1
Plate Screw ( C )	Qty: 4

## HARDWARE INCLUDED:

Plastics Wire Connector ( D )	Qty: 1
Mounting Screws ( E )	Qty: 1
Anchor ( F )	Qty: 1
Strengthened Screw ( G )	Qty: 1

## TOOLS NEEDED (Not Included):

1 Screwdriver
---------------

These instructions are provided for safety. It is very important that they are read carefully and completely before beginning installation of this chandelier.

We strongly suggest that all hard-wired fixtures must be installed by a professional electrician.

## TO ASSEMBLE:

1. Remove all packing contents and parts from the carton(s) carefully.
2. Please be sure you have all parts indicated before you begin assembly.
3. Turn off power to the junction box where the lamp will be installed.
4. Remove the mounting plate (A) from the back plate (B) by loose plate screws (C).
5. Pull the electrical cord of "J Box" through the exit hole of the mounting plate (A).
6. Attach the ground wire from the fixture to the ground junction box wire from the outlet (usually green or bare wire). Fasten each together with a plastic wire connector (D) and wrap the connection with electrical tape. If your outlet box does not have a ground wire, insert the green ground screw into the mounting plate (A) facing down, and wrap the fixture's bare ground wire around the ground screw. **IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME BE PROPERLY GROUNDED.**
7. Connect with neutral fixture wire to the neutral junction box wire (usually white). Fasten each together with a wire connector (D) and wrap the connection with electrical tape. Be sure no strands are exposed.
8. Connect the hot fixture wire to the hot junction box wire (usually black). Fasten each together with a plastic wire connector (D) and wrap the connection with electrical tape. Be sure no wire strands are exposed. **DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.**
9. Gently tuck the wire connections neatly into the ceiling junction box.
10. Attach the mounting plate (A) to the outlet box using the mountain screws (H). Tighten with a screwdriver.
11. If attached to a cement wall, use anchor (F) first then screw strengthened screws (G) into the anchor.
12. If attached to wood ceiling, thread strengthened screw (G) directly into wall.
13. Attach the back plate (B) to the mounting plate (A) using the enclosed plate screws (C). Tighten screws with a screwdriver (H).
14. Install one type A 60W bulb (or suitable CFL 16W/LED 13W bulb, not included) into threaded socket. **DO NOT EXCEED SPECIFIED WATTAGE.**

**\*PLEASE NOTE THE ARM CAN BE ROTATED AS SHOWN IN FIGURE 1 IF NEEDED.**

## CARE INSTRUCTIONS:

Wipe with a soft, dry cloth. To protect finish, avoid the use of chemicals and household cleaners.

For customer service questions call 1-800-338-2150

ARTERIO RS