ASSEMBLY INSTRUCTIONS

ITEM DESCRIPTION:


ITEM NO: DW49003 NAME: Sea Island Sconce

MATERIAL TYPE: Rattan FINISH: Natural

SOCKET TYPE: E26 SOCKET QTY: 1

BULB WATTAGE: 60W/CFL 16W/LED 13W

VOLTAGE: 110-120V ITEM NET WEIGHT: 4.5LBS

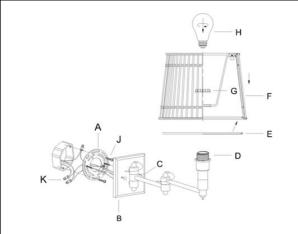

PARTS INCLUDED:

Mounting Plate (A)	Qty: 1
Body (B)	Qty: 1
Screw Nut (C)	Qty: 2
Socket (D)	Qty: 1
Diffuser (E)	Qty: 1
Shade (F)	Qty: 1
Socket Ring (G)	Qty: 1
Bulb- not included (H)	Qty: 1

HARDWARE INCLUDED:

Mounting Screws

Wire Connector

TOOLS NEEDED (Not Included):

1 Screwdriver


These instructions are provided for safety. It is very important that they are read carefully and completely before beginning installation of this chandelier.

We strongly suggest that all hard-wired fixtures must be installed by a professional electrician.



TO ASSEMBLE:

- Shut off the main electrical supply from the main fuse box/circuit breaker.
- 2. Attach mounting plate to wall or junction box using mounting screws (C).
- 3. Connect ground wire from wall to ground wire from lamp using wire caps (A).
- 4. Attach house wire to lamp wires as shown. Fasten the pairs together with a wire caps. DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.
- 5. Attach front face of light to back plate by inserting canopy screws (B) through predrilled holes in front face and into back plate as shown. Tighten using screwdriver.
- 6. Insert light bulb.
- 7. Restore power to junction box and test fixture. DO NOT EXCEED SPECIFIED MAX WATTAGE.

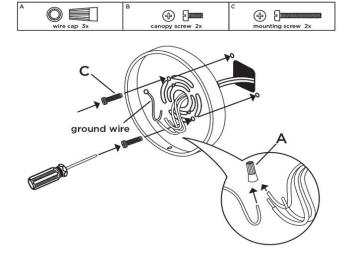

CARE INSTRUCTIONS:

Wipe with a soft, dry cloth. To protect finish, avoid the use of chemicals and household cleaners.

For customer service questions call 1-800-338-2150

ARTERIORS