


ASSEMBLY INSTRUCTIONS

ITEM DESCRIPTION:

ITEM NO.: 89628	NAME: Bentley Chandelier
MATERIAL TYPE: Steel	FINISH: Antique Brass
SOCKET TYPE: E12	SOCKET QTY: 16
BULB WATTAGE: 25W or/CFL 7W or/LED 5W	
VOLTAGE: 110-120 V	ITEM NET WEIGHT: 40LBS

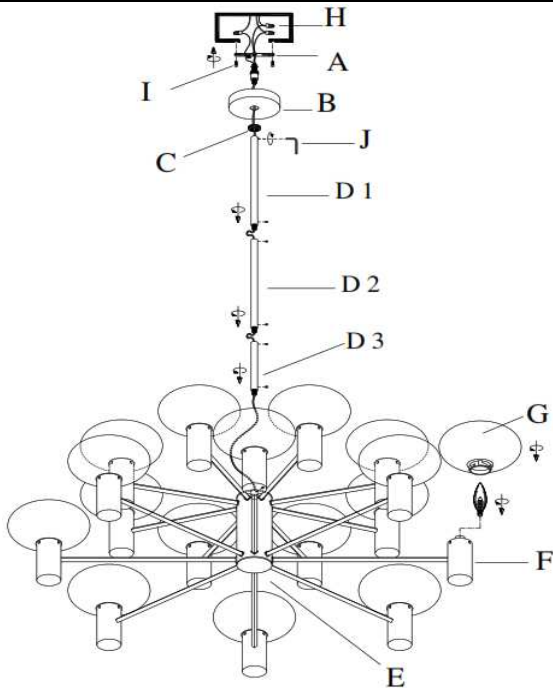

PARTS INCLUDED:

A Mounting Plate	Qty: 1	E Main Body	Qty: 1
B Canopy	Qty: 1	F Socket	Qty: 16
C Collar Loop	Qty: 1	G Glass Shade	Qty: 16
D Rods	Qty: 3		

HARDWARE INCLUDED:

Mounting Screws	2 Pcs	Canopy Screws	2 Pcs
Plastic Wire Connector	2 Pc	Allen Wrench	1 Pc
Green Ground Screw	1 Pc		

TO INSTALL YOU WILL NEED:

- 2 people recommended
- Phillips Screwdriver

These instructions are provided for safety. It is very important that they are read carefully and completely before beginning

We strongly suggest that all hard-wired fixtures must be installed by a professional electrician.



TO ASSEMBLE:

1. Remove all packing contents from the carton(s) carefully.
 2. Remove all packing contents from the carton(s) carefully.
 3. Remove all parts from the package(s) carefully.
 4. Please be sure you have all parts indicated before you begin assembly.
 5. Shut off the main electrical supply from the main fuse box/circuit breaker.
 6. Remove the mounting plate(a) from the canopy(b) by turning collar loop (c) in a counterclockwise direction.
 7. Screw the rod(d3) to the top main body(e) and tighten the hexangular screw in the side desire hole by allen wrench(j) repeat the same operation on the rod (d1) and (d2).
 8. Insert 16 type b 25w bulbs (or suitable /CFL 7w or/LED 5w bulbs, not included) in the sockets.
 9. Do not exceed specified wattage.
 10. Place the glass shade (g) on the top of metal cup (f) accordingly and rotate the glass till secure. Pls repeat the same operation on the remaining 15pcs glass shade.
 11. Carefully inspect the pendant's fixture wires. The neutral fixture wire has very fine ridges molded into its plastic covering. The hot fixture wire has a smooth covering, the bare silver wire is the grounded wire.
 12. Attach the ground wire from the fixture to the ground junction box wire from the outlet (usually green) or bare wire). Fasten each together with a plastic wire connector (h) and wrap the connection with electrical tape. If your outlet box does not have a ground wire, insert the green ground screw.
 13. Into the mounting plate (a) facing down and wrap the fixture's bare ground wire around the ground screw. It is imperative that the outlet box in your home be properly grounded.
 14. Connect the neutral fixture wire to the neutral junction box wire (usually white). Fasten each together with a wire connector (h) and wrap the connection with electrical tape. Be sure no strands are exposed.
 15. Connect the hot fixture wire to the hot junction box wire (usually black). Fasten each together with a plastic wire connector (h) and wrap the connection with electrical tape. Be sure no wire strands are exposed. Do not reverse the hot and neutral connections or safety will be compromised.
 16. Gently tuck the wire connections neatly into the ceiling junction box.
 17. Attach the mounting plate (a) with nipple to the ceiling outlet box using the enclosed mounting screws (i) and tighten screws with a screwdriver.
 18. Push collar loop in canopy (b) and thread onto nipple in mounting plate (a) by turning in a clockwise
 19. Screw rod (d1) to canopy (b), using hexangular screw and allen wrench(j) be sure all the hexangular screws are tight enough.
- CARE INSTRUCTIONS:**
 Wipe with a soft, dry cloth. To protect finish, avoid the use of chemicals and household cleaners.

For customer service questions call 1-800-338-2150

ARTERIO RS