


# ASSEMBLY INSTRUCTIONS

## ITEM DESCRIPTION:

ITEM NO.: 49392	NAME: Franklin Sconce
MATERIAL TYPE: Linen, Steel	FINISH: Antique Brass, Bronze
SOCKET TYPE: E26	SOCKET QTY: 1
BULB WATTAGE: 60W	
VOLTAGE: 110-120V	ITEM NET WEIGHT: 4.5LBS

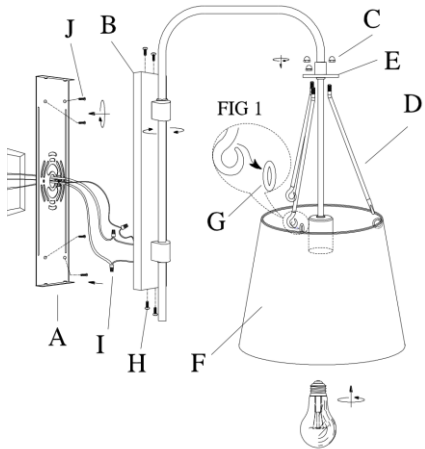

## PARTS INCLUDED:

Mounting Plate ( A )	Qty: 1
Back Plate ( B )	Qty: 1
Screw Nut ( C )	Qty: 3
Hook Rod ( D )	Qty: 3
Metal Plate ( E )	Qty: 1
Shade ( F )	Qty: 1
Metal Loop ( G )	Qty: 3
Plate Screw ( H )	Qty: 4

## HARDWARE INCLUDED:

Mounting Screws ( I )	Qty: 2
Plastic Wire Connector ( J )	Qty: 1

## TOOLS NEEDED (Not Included):

1 Screwdriver

These instructions are provided for safety. It is very important that they are read carefully and completely before beginning installation of this chandelier.

We strongly suggest that all hard-wired fixtures must be installed by a professional electrician.



## TO ASSEMBLE:

1. Remove all packing contents and parts from the carton(s) carefully.
2. Please be sure you have all parts indicated before you begin assembly.
3. Shut off the main electrical supply from the main fuse box/circuit breaker.
4. Gently pull wiring down from ceiling junction box and allow it to hang.
5. Remove the back plate (A) from the canopy (B) by loose plate screws (H).
6. Carefully inspect the fixture wires. The neutral fixture wire has very fine ridges molded into its plastic covering. The hot fixture wire has a smooth covering. The bare silver wire is the grounded wire.
7. Attach the ground wire from the fixture to the ground junction box wire from the outlet (usually green or bare wire). Fasten each together with a plastic wire connector (I) and wrap the connection with electrical tape. If your outlet box does not have a ground wire, insert the green ground screw into the mounting plate (A) facing down, and wrap the fixture's bare ground wire around the bare ground screw. IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME BE PROPERLY GROUNDED.
8. Connect the neutral fixture wire to the neutral junction box wire (usually white). Fasten each together wire a wire connector (I) and wrap the connection with electrical tape. Be sure no strands are exposed.
9. Connect the hot fixture wire to the hot junction box wire (usually black). Fasten each together with a plastic wire connector (I) and wrap the connection with electrical tape. Be sure no wire strands are exposed. DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.
10. As in Fig 1, make hook rod (D) to connect metal loop (G) on the top shade (E), then carefully pass hook rod another end through the plate and then tighten screw nut (C) until secure. Repeat the same operation on the remainings 2PCS hook rod.
11. Gently tuck the wire connections neatly into the ceiling junction box.
12. Attach the back plate (B) to the mounting plate (A) using the enclosed 4PCS of mounting screws (J). Tighten screws with screwdriver.
13. Push back plate (B) up over the mounting plate (A) until it is flush with ceiling and fix the back plate by using 4PCS plate screws (H).
14. Insert 1 type A 60W bulb (or suitable CFL 16W/LED 13W, not included) into the sockets (D). DO NOT EXCEED SPECIFIED WATTAGE.

## CARE INSTRUCTIONS:

Wipe with a soft, dry cloth. To protect finish, avoid the use of chemicals and household cleaners.

For customer service questions call 1-800-338-2150

ARTERIO RS