


ASSEMBLY INSTRUCTIONS

ITEM DESCRIPTION:

ITEM NO.: 89485	NAME: Griff Chandelier
MATERIAL TYPE: Steel	FINISH: Textured Antique Brass
SOCKET TYPE: E12	SOCKET QTY: 8
BULB WATTAGE: 60W OR/CFL 12W OR/LED 10W	
VOLTAGE: 110-120 V	ITEM NET WEIGHT: 13.4LBS

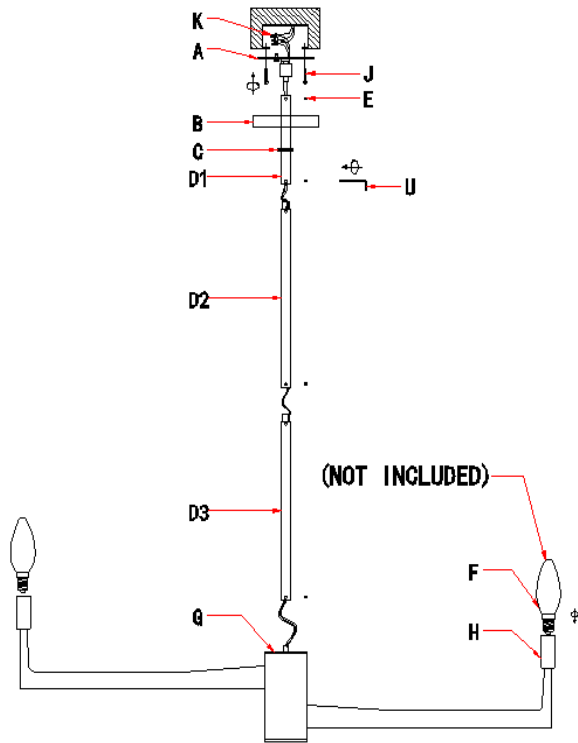

PARTS INCLUDED:

A Mounting Plate	Qty: 1	E Hex Screws	Qty: 6
B Canopy	Qty: 1	F Bulb (not incl.)	Qty: 8
C Collar Loop	Qty: 1	G Lamp Body	Qty: 1
D Rods	Qty: 3	H Sockets	Qty: 8

HARDWARE INCLUDED:

H Plastic Wire Connecto	2 Pc	J Allen Wrench	1 Pc
I Mounting Screws	2 Pcs		
Green Ground Screw	1 Pc		

TO INSTALL YOU WILL NEED:

- 2 people recommended
- Phillips Screwdriver

These instructions are provided for safety. It is very important that they are read carefully and completely before beginning installation.

We strongly suggest that all hard-wired fixtures must be installed by a professional electrician.

TO ASSEMBLE:

1. Remove all packing contents and parts from the carton(s) carefully. Ensure you have all parts indicated before you begin assembly.
2. Shut off the main electrical supply from the main fuse box/circuit breaker.
3. Pass the wire through the rod(d3), screw the rod(d3) to the lamp body (g), and tighten the hex screw in the side hole with Allen wrench(u). Repeat the same operation on the rod (d1) and (d2) be sure to tighten the hexagonal screw in the side hole with Allen wrench(u).
4. Connect rod(d1), collar loop(c), canopy(b) & mounting plate(a) with nipple on mounting plate(a).
5. Carefully inspect the fixture wires. The neutral fixture wire has very fine ridges molded into its plastic covering. The hot fixture wire has a smooth covering. The bare wire is the grounded wire.
6. Attach the ground wire from the fixture to the ground junction box wire from the outlet (usually green or bare wire). Fasten each together with a plastic wire connector (k) and wrap the connection with electrical tape. If your outlet box does not have a ground wire, insert the green ground screw into the mounting plate (a) facing down, and wrap the fixture's bare ground wire around the ground screw. It is imperative that the outlet box in your home be properly grounded.
7. Connect the neutral fixture wire to the neutral junction box wire (usually white). Fasten each together with a wire connector (k) and wrap the connection with electrical tape. Be sure no strands are exposed.
8. Connect the hot fixture wire to the hot junction box wire (usually black). Fasten each together with a plastic wire connector (k) and wrap the connection with electrical tape. Be sure no wire strands are exposed. Do not reverse the hot and neutral connections or safety will be compromised.
9. Gently tuck the wire connections(k) neatly into the ceiling junction box.
10. Attach the mounting plate (a) to the outlet box using the mounting screws(j) and tighten screws(j) with a screwdriver.
11. Push collar loop(c) in canopy (b) and tighten onto nipple in mounting plate (a) by turning in a clockwise.
12. Insert 8 type b 60w bulb (or/cfl 12w or/led 10w, not included) into the socket(h). **Do not exceed specified wattage.**
13. Restore power to the junction box and test fixture.

CARE INSTRUCTIONS:

Wipe with a soft, dry cloth. To protect finish, avoid the use of chemicals and household cleaners.

For customer service questions call 1-800-338-2150

ARTERIO RS