

ASSEMBLY INSTRUCTIONS

ITEM DESCRIPTION:

ITEM NO.: 49824-564

NAME: Memphis Sconce

MATERIAL TYPE: Alabaster, Iron FINISH: White, Antique Brass


SOCKET TYPE: E26

SOCKET QTY: 1

BULB WATTAGE: 60 W

VOLTAGE: 110-120 V

ITEM NET WEIGHT: 3.5LBS

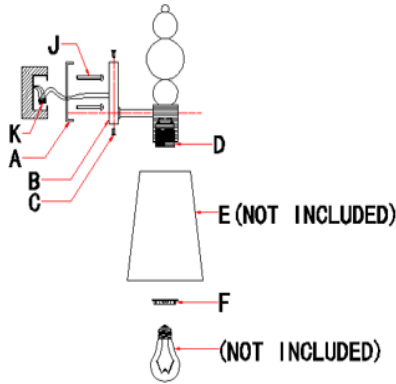

PARTS INCLUDED:

Mounting Plate (A) Qty: 1

Back Plate (B) Qty: 1

Set Screw (C) Qty: 2

Socket (D) Qty: 1

Shade (E) Qty: 1

Socket Ring (F) Qty: 1

HARDWARE INCLUDED:

Mounting Screws (J)

Plastic Wire Connectors (K)

TOOLS NEEDED (Not Included):

1 Screwdriver

These instructions are provided for safety. It is very important that they are read carefully and completely before beginning installation of this chandelier.

We strongly suggest that all hard-wired fixtures must be installed by a professional electrician.



TO ASSEMBLE:

1. Shut off the main electrical supply from the main fuse box/circuit breaker.
2. Pull the electrical cord of the J-box through the exit whole of the mounting plate (A).
3. Attach the ground wire from the fixture to the ground junction box wire from the outlet (usually green or bare wire). Fasten each together with a plastic wire connector (K) and wrap the connection with electrical tape. If your outlet box does not have a ground wire, insert the green ground screw into the mounting plate (A) facing down, and wrap the fixture's bare ground wire around the ground screw.
4. Connect the neutral fixture wire to the neutral junction box wire (usually white). Fasten each together with a wire connector (K) and wrap the connection with electrical tape. Be sure no strands are exposed.
5. Connect the hot fixture wire to the hot junction box wire (usually black). Fasten each together with a plastic wire connector (K) and wrap the connection with electrical tape. Be sure no wire strands are exposed.
6. Gently tuck the wire connections neatly in the junction box.
7. Attach the mounting plate (A) to the outlet box by using the enclosed mounting screw (J), and tighten it with a screwdriver.
8. Attach the back plate (B) onto the mounting plate (A) with the set screws (C), and tighten it with a screwdriver.
9. Remove the socket ring (F) from the socket (D).
10. Attach the shade (E) on the socket (D) and fasten it with the socket ring (F).
11. Insert 1 type A 60 W bulb or CFL 12 W or LED 10 W (not included) into the socket (D).

CARE INSTRUCTIONS:

Wipe with a soft, dry cloth. To protect finish, avoid the use of chemicals and household cleaners.

For customer service questions call 1-800-338-2150

ARTERIO RS