## ASSEMBLY INSTRUCTIONS

## ITEM DESCRIPTION:

ITEM NO.: 42045

NAME: Prescott Sconce

ITEM NET WEIGHT: 11LBS


SOCKET QTY: 4

MATERIAL TYPE: Iron FINISH: Gold Leaf

SOCKET TYPE: E12

BULB WATTAGE: 25W/7W CFL/5W LED

VOLTAGE: 110-120V

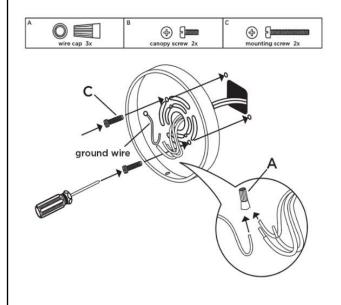

## PARTS INCLUDED:

Mounting Plate	Qty: 1	
Back Plate	Qty: 1	
Iron Shade	Qty: 1	
Socket Assembly	Qty: 1	

#### HARDWARE INCLUDED:

© Mounting Screws	Qty: 2
(A) Plastic Wire Connector	Qty: 1


## TOOLS NEEDED (Not Included):

#### 1 Screwdriver

These instructions are provided for safety. It is very important that they are read carefully and completely before beginning installation.

We strongly suggest that all hard-wired fixtures must be installed by a professional electrician.

For customer service questions call 1-800-338-2150

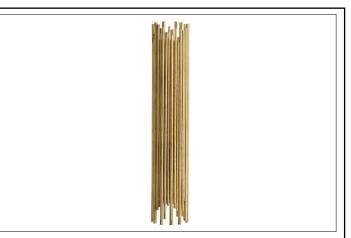

#### TO ASSEMBLE:

**1**. Shut off the main electrical supply from the main fuse box/circuit breaker.

- 2. Attach mounting plate to wall or junction box using mounting screws (C).
- 3. Connect ground wire from wall to ground wire from lamp using wire caps (A).
- Attach house wire to lamp wires as shown. Fasten the pairs together with a wire caps DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.
- 5. Attach front face of light to back plate by inserting canopy screws (B) through predrilled holes in front face and into back plate as shown. Tighten using screwdriver.
- 6. Insert light bulb.
- 7. Restore power to junction box and test fixture. DO NOT EXCEED SPECIFIED MAX WATTAGE.

#### CARE INSTRUCTIONS:

Wipe with a soft, dry cloth. To protect finish, avoid the use of chemicals and household cleaners.

# ARTERIORS