


# ASSEMBLY INSTRUCTIONS

## ITEM DESCRIPTION:

ITEM NO.: 45061	NAME: Swami Large Pendant
MATERIAL TYPE: Buri Midrib FINISH: Natural & Black Ombr	
SOCKET TYPE: E26	SOCKET QTY: 1, 3" Neck
BULB WATTAGE: 150W/CFL 35W/LED 28W	
VOLTAGE: 110-120 V	ITEM NET WEIGHT: 40LBS

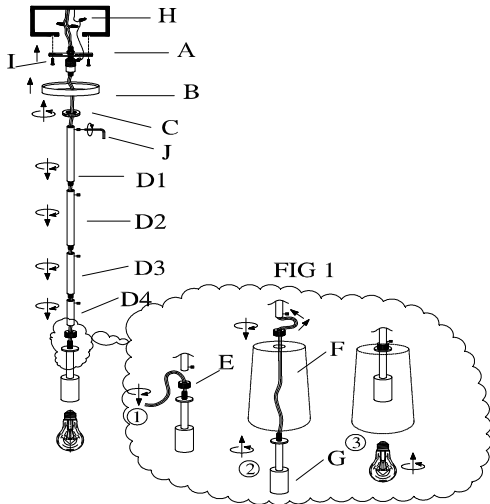

## PARTS INCLUDED:

A MOUNTING PLATE	Qty: 1
B CANOPY	Qty: 1
C COLLAR LOOP	Qty: 1
D RODS	Qty: 4
E LOCKING RING	Qty: 1
F SHADE	Qty: 1
G SOCKET ASSEMBLY	Qty: 1

## HARDWARE INCLUDED:

H Plastic Wire Connector	2 Pcs	Canopy Screws	2 Pcs
Mounting Screws	2 Pc		
Green Ground Screw	1 Pc	Allen Wrench	1 Pc

## TO INSTALL YOU WILL NEED:

- 2 people recommended
- Phillips Screwdriver

These instructions are provided for safety. It is very important that they are read carefully and completely before beginning

We strongly suggest that all hard-wired fixtures must be installed by a professional electrician.



## TO ASSEMBLE:

1. Shut off the main electrical supply from the main fuse box/circuit breaker.
2. Carefully unpack all fixture parts and hardware and lay them on a soft surface for assembly.
3. As shown in fig, unscrew the locking ring(e) off the socket assembly(g), and attach the shade(f, not included) from the bottom to the socket properly, then secure it by screw the locking ring(e) till tight.
4. Gently pull wiring down from ceiling junction box and allow to hang.
5. Remove mounting plate from the canopy by unscrewing the collar.
6. Carefully inspect the pendant's fixture wires.  
Neutral fixture wire: White  
Hot fixture wire: Black  
Ground wire: Green
7. Wrap ground wire of lamp assembly and ground wire of junction box together and fasten together with a wire nut and wrap the connection with electrical tape.
8. Attach the neutral fixture wire from the pendant to the neutral junction box wire (usually white). Fasten each together with a wire nut and wrap the connection with electrical tape.
9. Attach the hot fixture wire from the pendant to the hot junction box wire (usually black). Fasten each together with a wire nut and wrap the connection with electrical tape.  
**DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.**
10. Gently tuck the wire connections neatly into the ceiling junction box.
11. Place the mounting plate over the center of the ceiling junction box.

## CARE INSTRUCTIONS:

Wipe with a soft, dry cloth. To protect finish, avoid the use of chemicals and household cleaners.

For customer service questions call 1-800-338-2150

ARTERIOS