


# ASSEMBLY INSTRUCTIONS

## ITEM DESCRIPTION:

ITEM NO.: 89447	NAME: Troon Round Chandelier
MATERIAL TYPE: Steel/Glass	FINISH: Antique Brass/Opal Swirl
SOCKET TYPE: E12	SOCKET QTY: 12
BULB WATTAGE: 25W/7W CFL/5W LED	
VOLTAGE: 110-120 V	ITEM NET WEIGHT: 28.67LBS

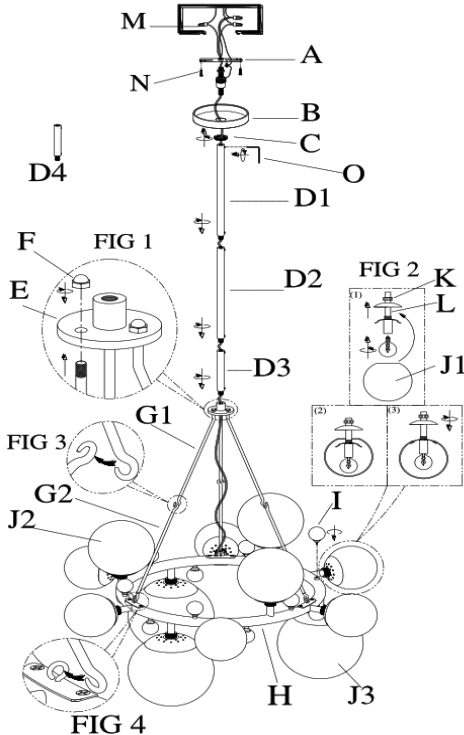

## PARTS INCLUDED:

A MOUNTING PLATE	1 PC	G HOOK RODS	6 PCS
B CANOPY	1 PC	H MAIN LOOP	1 PC
C COLLAR LOOP	1 PC	I CRYSTAL BALL	12 PCS
D RODS	4 PCS	J GLASS SPHERE	3 LGE/3 MED/6 SML
E METAL WASHER	1 PC	K SCREW RING	12 PCS
F SCREW NUT	3 PCS	L SOCKET ASSEMBLY	12 PCS
<b>HARDWARE INCLUDED:</b>			
M Plastic Wire Connector	2 Pcs	O Allen Wrench	1 Pc
N Mounting Screws	2 Pc		
Green Ground Screw	1 Pc		

## TO INSTALL YOU WILL NEED:

- 2 people recommended
- Phillips Screwdriver

These instructions are provided for safety. It is very important that they are read carefully and completely before beginning installation of this chandelier.

We strongly suggest that all hard-wired fixtures must be installed by a professional electrician.

For customer service questions call 1-800-338-2150



## TO ASSEMBLE:

1. Remove all packing contents from the carton(s) carefully. Ensure you have all parts indicated before you begin assembly.
2. Shut off the main electrical supply from the main fuse box/circuit breaker.
3. Remove the mounting plate(a) from the canopy(b) by turning collar loop (c) in a counterclockwise direction.
4. Screw the rod(c3) to the metal washer(e) and tighten the hexangular screw in the side desire hole by Allen wrench(o) and screw the rod (c1) and (c2). If the ceiling is high enough, pls assemble the rod(d4) if need.
5. As fig 2, unscrew the screw ring (k) off the socket (l), insert type g 25w bulb (or suitable cf/led, not included) in the socket, then attach the glass sphere(j) to the socket properly, then screw the screw ring (k) to secure the glass sphere till tight. Repeat above operation on remaining 5pcs small glass sphere(j1), 3pcs med glass sphere(j2) and 3pcs large glass sphere(j3) do not exceed specified wattage. Pls install the glass sphere size large, medium, and small based on the stickers on the label on the socket assembly(l)
6. Screw crystal ball(i) on the main loop(h) till tight. Repeat the same operation on the remaining 11pcs crystal ball.
7. Connect the hook rod (g2) on the main loop as fig 4 and connect hook rod(g1) as fig 3, then insert the other end of hook rod(g1) to the metal washer(e), and then use screw nut(f) to tight it as fig 1. Repeat the above operations on the remaining 2 side rods.
8. Carefully inspect the pendant's fixture wires. The neutral fixture wire has very fine ridges molded into its plastic covering. The hot fixture wire has a smooth covering. The bare silver wire is the grounded wire.
9. Attach the ground wire from the fixture to the ground junction box wire from the outlet (usually green) or bare wire). Fasten each together with a plastic wire connector (m) and wrap the connection with electrical tape. If your outlet box does not have a ground wire, insert the green ground screw into the mounting plate (a) facing down, and wrap the fixture's bare ground wire around the ground screw it is imperative that the outlet box in your home be properly grounded.
10. Connect the neutral fixture wire to the neutral junction box wire. Fasten together with a wire connector (m) and wrap connection with electrical tape. Ensure no strands are exposed.
11. Connect the hot fixture wire to the hot junction box wire. Fasten together with a plastic wire connector (m) and wrap connection with electrical tape. Ensure no wire strands are exposed. Do not reverse the hot and neutral connections or safety will be compromised.
12. Gently truck the wire connections neatly into the ceiling junction box.
13. Attach the mounting plate (a) with nipple to the ceiling outlet box using the mounting screws (n) and tighten screws with a screwdriver.
14. Push collar loop in canopy (b) and thread onto nipple in mounting plate (a) by turning clockwise
15. Screw rod (d1) to the canopy (b) by using hexangular screw and Allen wrench(o) be sure all the hexangular screws are tight enough.

## CARE INSTRUCTIONS:

Wipe with a soft, dry cloth. To protect finish, avoid the use of chemicals and household cleaners.

ARTERIOORS