# **ASSEMBLY INSTRUCTIONS**

## ITEM DESCRIPTION:


ITEM NO.: 46430 NAME: Upson Sconce

MATERIAL TYPE: Iron FINISH: Antique Brass

SOCKET TYPE: E12 SOCKET QTY: 2

**BULB WATTAGE: 25W** 

VOLTAGE: 110-120V ITEM NET WEIGHT: 3LBS

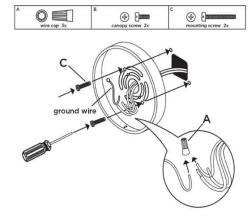

## PARTS INCLUDED:

Mounting Plate	Qty: 1	
Back Plate	Qty: 1	
Iron Shade	Qty: 1	
Socket Assembly	Qty: 1	

### HARDWARE INCLUDED:


Mounting Screws	Qty: 2
Plastic Wire Connector	Qty: 1
	Qty:

#### TOOLS NEEDED (Not Included):

#### 1 Screwdriver

These instructions are provided for safety. It is very important that they are read carefully and completely before beginning installation of this chandelier.

We strongly suggest that all hard-wired fixtures must be installed by a professional electrician.

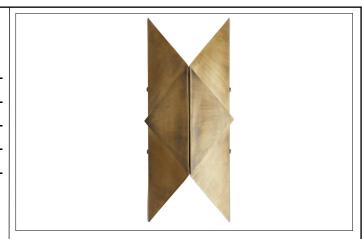

#### TO ASSEMBLE:

- 1. Shut off the main electrical supply from the main fuse box/circuit breaker
- 2. Attach mounting plate to wall or junction box using mounting screws (C).
- Connect ground wire from wall to ground wire from lamp using wire caps (A).
- Attach house wire to lamp wires as shown. Fasten the pairs together with a wire caps
   DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.
- 5. Attach front face of light to back plate by inserting canopy screws (B) through predrilled holes in front face and into back plate as shown. Tighten using screwdriver.
- 6. Insert light bulb.
- 7. Restore power to junction box and test fixture. DO NOT EXCEED SPECIFIED MAX WATTAGE.

# CARE INSTRUCTIONS:

Wipe with a soft, dry cloth. To protect finish, avoid the use of chemicals and household cleaners.

For customer service questions call 1-800-338-2150

ARTERIORS