

# ASSEMBLY INSTRUCTIONS

## ITEM DESCRIPTION:


ITEM NO.: 49225 NAME: Zanadoo Outdoor Pendant

MATERIAL TYPE: Steel, Glass FINISH: Aged Iron, Clear

SOCKET TYPE: E26 Other SOCKET QTY: 12

BULB WATTAGE: 40W/10W CFL/9W LED

VOLTAGE: 110-120 V ITEM NET WEIGHT: 38LBS

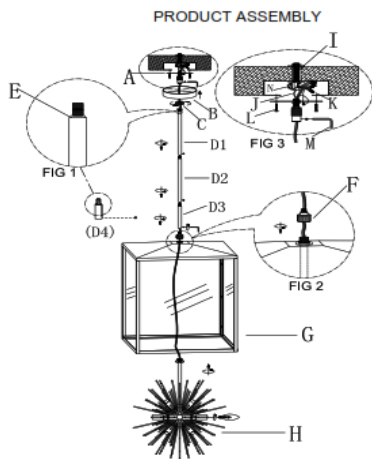

## PARTS INCLUDED:

A Mounting Plate	Qty: 1	I Threading Pipe	Qty: 1
B Canopy	Qty: 1	J Steel Cable	Qty: 1
C Collar Loop	Qty: 1		
D Rods	Qty: 4		
E Rubber Loop	Qty: 5		
F Set Ring	Qty: 1		
G Main Frame	Qty: 1		
H Zanadoo Body	Qty: 1		

## HARDWARE INCLUDED:

Mounting Screws	2 Pcs	Canopy Screws	2 Pcs
Plastic Wire Connector	2 Pc	Allen Wrench	1 Pc
Green Ground Screw	1 Pc	Lock	1 Pc

## TO INSTALL YOU WILL NEED:

- 2 people recommended
- Phillips Screwdriver

These instructions are provided for safety. It is very important are read carefully and completely before beginning installation of chandelier.

We strongly suggest that all hard-wired fixtures must be installed by a professional electrician.

## TO ASSEMBLE:

1. REMOVE ALL PACKING AND PARTS CONTENTS FROM THE CARTON(S) CAREFULLY
2. SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER
3. INSERT 12 TYPE B 40W BULBS (OR SUITABLE CFL/10W, OR LED 9W BULB, NOT INCLUDED) INTO THE SOCKET. DO NOT EXCEED SPECIFIED WATTAGE. BEFORE ASSEMBLING, IT IS IMPORTANT THAT THE RUBBER LOOPS ARE ON THE TOP THREADING OF RODS AS FIG 1 SHOW.
4. ATTACH THE ZANADOO BODY (H) TO THE TOP OF MAIN FRAME (G), AND SCREW THE SET RING (F) TILL TIGHT AS SHOWN IN FIG 2.
5. SCREW THE ROD (D3) ONTO THE TOP OF SET RING (F), AND TIGHTEN THE HEXANGULAR SCREW IN THE SIDE HOLE WITH ALLEN WRENCH (M) REPEAT THE SAME OPERATION ON THE ROD (D2) AND (D1). IF THE CEILING IS HIGH ENOUGH, PLS ASSEMBLE THE ROD (D4) IF NEED.
6. REMOVE THE MOUNTING PLATE (A) FROM THE CANOPY (B) BY TURNING COLLAR LOOP (C) IN A COUNTER CLOCKWISE DIRECTION.
7. CAREFULLY INSPECT THE PENDANT'S FIXTURE WIRES. THE NEUTRAL FIXTURE WIRE HAS VERY FINE RIDEGS MOLDED INTO ITS PLASTIC COVERING. THE HOT FIXTURE WIRE HAS A SMOOTH COVERING. THE BARE SILVER WIRE IS THE GROUNDED WIRE.
8. ATTACH THE GROUND WIRE FROM THE FIXTURE TO THE GROUND JUNCTION BOX WIRE FROM THE OUTLET (USUALLY GREEN) OR BARE WIRE). FASTEN EACH TOGETHER WITH A PLASTIC WIRE CONNECTOR (K) AND WRAP THE CONNECTION WITH ELECTRICAL TAPE. IF YOUR OUTLET BOX DOES NOT HAVE A GROUND WIRE, INSERT THE GREEN GROUND SCREW INTO THE MOUNTING PLATE (A) FACING DOWN, AND WRAP THE FIXTURE'S BARE GROUND WIRE AROUND THE GROUND SCREW. IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME BE PROPERLY GROUNDED.
9. CONNECT THE NEUTRAL FIXTURE WIRE TO THE NEUTRAL JUNCTION BOX WIRE (USUALLY WHITE). FASTEN EACH TOGETHER WITH A WIRE CONNECTOR (K) AND WRAP THE CONNECTION WITH ELECTRICAL TAPE. BE SURE NO STRANDS ARE EXPOSED.
10. CONNECT THE HOT FIXTURE WIRE TO THE HOT JUNCTION BOX WIRE (USUALLY BLACK). FASTEN EACH TOGETHER WITH A PLASTIC WIRE CONNECTOR (K) AND WRAP THE CONNECTION WITH ELECTRICAL TAPE. BE SURE NO WIRE STRANDS ARE EXPOSED. DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.
11. SCREW THE THREADING PIPE (I) IN A FIXED LOCATION ON CEILING, ATTACH THE STEEL CABLE (J) TO THE FIXED FIXTURE (AN APPROPRIATE LOAD THE CEILING WITH THE LOCK (N), THIS LUMINAIRE MUST BE MOUNTED OR SUPPORTED INDEPENDENTLY OF AN OUTLET BOX.
12. GENTLY TUCK THE WIRE CONNECTIONS NEATLY INTO THE CEILING JUNCTION BOX.
13. ATTACH THE MOUNTING PLATE (A) WITH NIPPLE TO THE CEILING OUTLET BOX USING THE ENCLOSED MOUNTING SCREWS (L) AND TIGHTEN SCREWS WITH A SCREWDRIVER.
14. PUSH COLLAR LOOP IN CANOPY (B) AND THREAD ONTO NIPPLE IN MOUNTING PLATE (A) BY TURNING IN A CLOCKWISE
15. SCREW ROD (D1) TO CANOPY (B), USING HEXANGULAR SCREW AND ALLEN WRENCH (M) BE SURE ALL THE HEXANGULAR SCREWS ARE TIGHT ENOUGH.

## CARE INSTRUCTIONS:

Wipe with a soft, dry cloth. To protect finish, avoid the use of chemicals and household cleaners.

For customer service questions call 1-800-338-2150

ARTERIOURS