

ASSEMBLY INSTRUCTIONS

ITEM DESCRIPTION:

ITEM NO.: 89967 NAME: Zanadoo Fixed Chandelier

MATERIAL TYPE: Steel FINISH: Antique Brass

SOCKET TYPE: E12 SOCKET QTY: 12


BULB WATTAGE: 40W/10W CFL/9W LED

VOLTAGE: 110-120 V ITEM NET WEIGHT: 16LBS



TO ASSEMBLE:

1. Remove all packing contents from the carton(s) carefully. Ensure you have all parts indicated before you begin assembly.
2. Shut off the main electrical supply from the main fuse box/circuit breaker.
3. Gently pull wiring down from ceiling junction box and allow it to hang.
4. Remove the mounting plate (A) from the canopy (B) by loose canopy screws (E) with screwdriver.
5. Screw the rod onto the top of main body (D) till tight. Please be sure tighten the hexangular screws with Allen wrench (H).
6. Carefully inspect the fixture wires. The neutral fixture wire has very fine ridges molded into its plastic covering. The hot fixture wire has a smooth covering. The bare silver wire is the grounded wire.
7. Attach the ground wire from the fixture to the ground junction box wire from the outlet (usually green or bare wire). Fasten each together with a plastic wire connector (F) and wrap the connection with electrical tape. If your outlet box does not have a ground wire, insert the green ground screw into the mounting plate (A) facing down, and wrap the fixture's bare ground wire around the ground screw. It is imperative that the outlet box in your home be properly grounded.
8. Connect the neutral fixture wire to the neutral junction box wire (usually white). Fasten each together with a wire connector (F) and wrap the connection with electrical tape. Be sure no strands are exposed.
9. Connect the hot fixture wire to the hot junction box wire (usually black). Fasten each together with a plastic wire connector (F) and wrap the connection with electrical tape. Be sure no wire strands are exposed. Do not reverse the hot and neutral connections or safety will be compromised.
10. Gently tuck the wire connections neatly into the ceiling junction box.
11. Attach the mounting plate (A) with nipple to the ceiling outlet box using the enclosed mounting screws (G) and tighten screws with a screwdriver.
12. Push mounting plate (A) in canopy (B) and thread the canopy screws (E) to secure it till tight.
13. Screw rod (C) to canopy (B), using hexangular set screw and Allen wrench (H) be sure all the hexangular set screws are tight.
14. Insert 12 type b 40w bulb (or cfl/10w, or led 9w bulbs, not included) into the sockets. Do not exceed specified wattage.

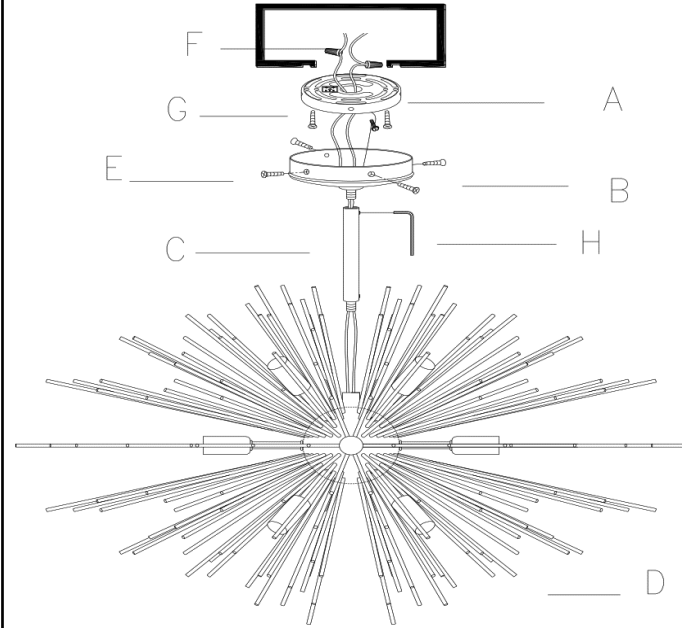

PARTS INCLUDED:

| | |
|-------------------|--------|
| (A) Mounted Plate | Qty: 1 |
| (B) Canopy | Qty: 4 |
| (C) Rods | Qty: 1 |
| (D) Main Body | Qty: 1 |
| (E) Canopy Screw | Qty: 1 |

HARDWARE INCLUDED:

| | |
|----------------------------|--------------------|
| (F) Plastic Wire Connector | (H) Allen Wrench |
| (C) Mounting Screw | Green Ground Screw |

TO INSTALL YOU WILL NEED:

· 2 people recommended · Phillips Screwdriver
 These instructions are provided for safety. It is very important that they are read carefully and completely before beginning installation of this chandelier.

We strongly suggest that all hard-wired fixtures must be installed by a professional electrician.

CARE INSTRUCTIONS:

Wipe with a soft, dry cloth. To protect finish, avoid the use of chemicals and household cleaners.

For customer service questions call 1-800-338-2150

ARTERIO RS