


# ASSEMBLY INSTRUCTIONS

## ITEM DESCRIPTION:

ITEM NO.: 44325	NAME: Trinidad Sconce
MATERIAL TYPE: Iron	FINISH: Waxed Blackened Iron
SOCKET TYPE: E26	SOCKET QTY: 2
BULB WATTAGE: 25W/7W CFL/5W LED	
VOLTAGE: 110-120V	ITEM NET WEIGHT: 13 LBS

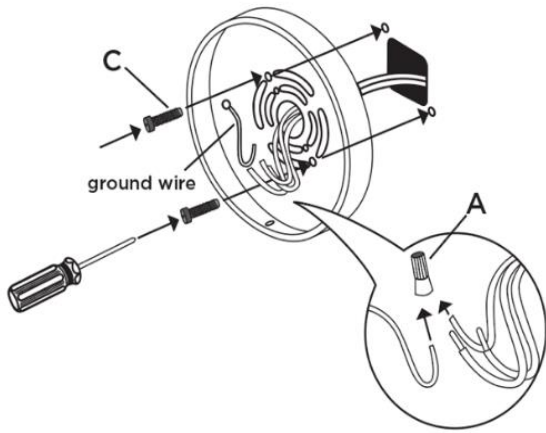

## PARTS INCLUDED:

Mounting Plate	Qty: 1
Back Plate	Qty: 1
Iron Shade	Qty: 1

## HARDWARE INCLUDED:

(C) Mounting Screws	Qty: 2
(A) Plastic Wire Connector	Qty: 3
(B) Canopy Screws	Qty: 2

## TOOLS NEEDED (Not Included):

1 Screwdriver

These instructions are provided for safety. It is very important that they are read carefully and completely before beginning installation.

We strongly suggest that all hard-wired fixtures must be installed by a professional electrician.

For customer service questions call 1-800-338-2150



## TO ASSEMBLE:

1. Attach mounting plate to wall or junction box using mounting screws (C).
2. Connect ground wire from wall to ground wire from lamp using wire caps (A).
3. Attach house wire to lamp wires as shown. Fasten the pairs together with a wire caps (A). **DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.**
4. Place Main Frame on the groove given on the top of Mounting Plate and fix by tightening the canopy screw (B) in the predrilled hole at the bottom.
5. Remove front part of the metal shade by gently pushing it upwards as it is hung on the hooks given on the main frame as per figure 1 and figure 2, Hanger Face need in upward direction to install the cover.
6. Insert (2) TYPE A 25W BULB / 7W SBLED / 5W SBLED (not included) into the socket. **DO NOT EXCEED SPECIFIED WATTAGE.** Restore front part by placing it gently on the hooks. Ensure to follow arrow marking done on the main and front part to complete the assembly.



Figure 1

Figure 2

## CARE INSTRUCTIONS:

Wipe with a soft, dry cloth. To protect finish, avoid the use of chemicals and household cleaners.

ARTERIO RS