
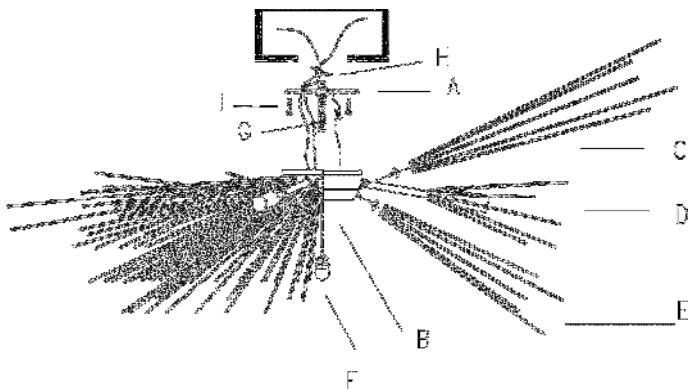


ASSEMBLY INSTRUCTIONS

ITEM DESCRIPTION:

ITEM NO.: 89969	NAME: Roxanne Flush Mount
MATERIAL TYPE: Steel	FINISH: Antique Brass
SOCKET TYPE: E12	SOCKET QTY: 8
BULB WATTAGE: 40W/10W CFL/9W LED	
VOLTAGE: 110-120 V	ITEM NET WEIGHT: 13LBS

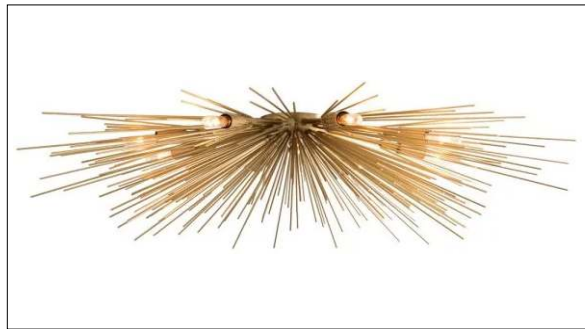

PARTS INCLUDED:

(A) Mounting Plate	Qty: 1
(B) Canopy	Qty: 1
(C) Set Screw	Qty: 1
(H) Wire connector	Qty: 1

HARDWARE INCLUDED:

J Plastic Wire Connector 2 Pc	Allen Wrench	1 Pc
K Mounting Screws 2 Pcs	Green Ground Screw	1 Pc

TO INSTALL YOU WILL NEED:

- 2 people recommended
- Phillips Screwdriver

These instructions are provided for safety. It is very important that they are read carefully and completely before beginning installation .

We strongly suggest that all hard-wired fixtures must be installed by a professional electrician.

TO ASSEMBLE:

1. Remove all packing contents and parts from the carton(s)carefully. Ensure sure you have all parts indicated before you begin assembly.
2. Shut off the main electrical supply from the main fuse box/circuit breaker.
3. Gently pull wiring down from ceiling junction box and allow it to hang.
4. Remove the mounting plate (a) from the canopy (b) by loose finial(f)
5. Screw the big steel wire cluster (c) onto the upper desired threading on the canopy. Repeat the same operation on the remaining 7pcs.
6. Screw the small steel wire cluster (c) onto the lower desired threading's on the canopy. Repeat the same operation on the remaining 15pcs.
7. Carefully inspect the fixture wires. The neutral fixture wire has very fine ridges molded into its plastic covering. The hot fixture wire has a smooth covering. The bare silver wire is the grounded wire.
8. Attach the ground wire from the fixture to the ground junction box wire from the outlet (usually green or bare wire). Fasten each together with a plastic wire connector (h) and wrap the connection with electrical tape. If your outlet box does not have a ground wire, insert the green ground screw into the mounting plate (a) facing down, and wrap the fixture's bare ground wire around the ground screw.it is imperative that the outlet box in your home be properly grounded.
9. Connect the neutral fixture wire to the neutral junction box wire (usually white). Fasten each together with a wire connector (h) and wrap the connection with electrical tape. Be sure no strands are exposed.
10. Connect the hot fixture wire to the hot j-box wire (usually black). Fasten each together with a plastic wire connector (h) and wrap the connection with electrical tape. Ensure no wire strands are exposed. Do not reverse the hot & neutral connections or safety will be compromised.
11. Gently tuck the wire connections neatly into the ceiling junction box.
12. Attach the mounting plate (a) with nipple to the ceiling outlet box using the enclosed mounting screws (i) and tighten screws with a screwdriver.
13. Push mounting plate (a) into canopy (b), be sure pass the threading pipe(g) through the canopy(b)and tighten with finial(f)
14. Insert 8 type b 40w bulbs (or suitable cfl/led) into the sockets(d).do not exceed specified wattage. Restore power and test fixture.

CARE INSTRUCTIONS:

Wipe with a soft, dry cloth. To protect finish, avoid the use of chemicals and household cleaners.

For customer service questions call 1-800-338-2150

ARTERIO RS

