


ASSEMBLY INSTRUCTIONS

ITEM DESCRIPTION:

ITEM NO.: 49749	NAME: Heloise Pendant
MATERIAL TYPE: Linen	FINISH: White
SOCKET TYPE: E26	SOCKET QTY: 1
BULB WATTAGE: 60W/16W CFL/13W LED	
VOLTAGE: 110-120 V	ITEM NET WEIGHT: 5.73LBS

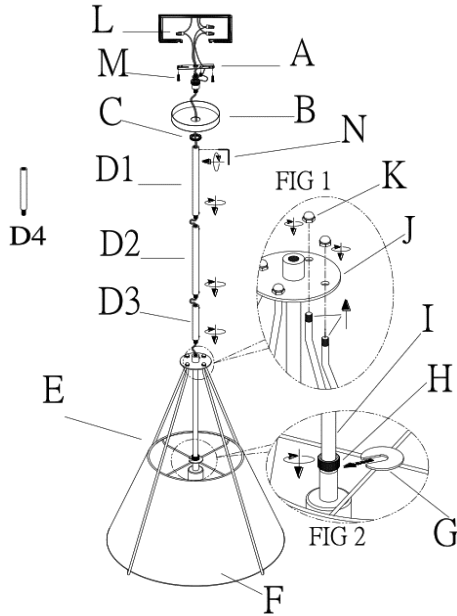

PARTS INCLUDED:

A) MOUNTING PLATE	1 PC	G) C WASHER	1 PC
B) CANOPY	1 PC	H) SCREW RING	1 PC
C) COLLAR LOOP	1 PC	I) SOCKET PIPE	1 PC
D1,D2,D3,D4) ROD	4 PCS	J) METAL PLATE	1 PC
E) METAL ROD	2 PC	K) METAL NUT	4 PC

HARDWARE INCLUDED:

L) Plastic Wire Connector	2 Pcs	P) Allen Wrench	1 Pc
J) Mounting Screws	2 Pc		
Green Ground Screw	1 Pc		

TO INSTALL YOU WILL NEED:

- 2 people recommended
- Phillips Screwdriver

These instructions are provided for safety. It is very important that they are read carefully and completely before beginning installation.

We strongly suggest that all hard-wired fixtures must be installed by a professional electrician.



TO ASSEMBLE:

1. Remove all packing contents from the carton(s) carefully. Ensure you have all parts indicated before you begin assembly.
2. Shut off the main electrical supply from the main fuse box/circuit breaker.
3. Remove the mounting plate (a) from the canopy (b) by turning collar loop (c) in a counterclockwise direction.
4. Screw the pipe (c3) to the metal plate (l) and tighten the hexangular screw in the side desire hole by Allen wrench (n) and screw the pipe (c1) and (c2). If the ceiling is high enough, pls assemble the pipe (d4) if need.
5. Install 1 type a 60w bulb (or suitable cfl 16w/led 13w bulb, not included) into threaded socket. do not exceed specified wattage.
6. As fig 2, attach the shade (f) to the socket pipe (l), gently insert c washer (g) pass the pipe and then secure the screw ring (h) till tight.
7. Be careful use 2pcs metal rod (e) to hold the shade evenly and screw 4pcs metal nuts (k) to secure the rods till tight as fig 1.
8. Carefully inspect the pendant's fixture wires. The neutral fixture wire has very fine ridges molded into its plastic covering. The hot fixture wire has a smooth covering. The bare silver wire is the grounded wire.
9. Attach the ground wire from the fixture to the ground junction box wire from the outlet (usually green) or bare wire). Fasten each together with a plastic wire connector (l) and wrap the connection with electrical tape. If your outlet box does not have a ground wire, insert the green ground screw into the mounting plate (a) facing down, and wrap the fixture's bare ground wire around the ground screw it is imperative that the outlet box in your home be properly grounded.
10. Connect the neutral fixture wire to the neutral junction box wire (usually white). Fasten each together with a wire connector (l) and wrap the connection with electrical tape. Be sure no strands are exposed.
11. Connect the hot fixture wire to the hot junction box wire (usually black). Fasten each together with a plastic wire connector (l) and wrap the connection with electrical tape. Be sure no wire strands are exposed. Do not reverse the hot and neutral connections or safety will be compromised.
12. Gently truck the wire connections neatly into the ceiling junction box.
13. Attach the mounting plate (a) with nipple to the ceiling outlet box using the enclosed mounting screws (m) and tighten screws with a screwdriver.
14. Push collar loop in canopy (b) and thread onto nipple in mounting plate (a) by turning in clockwise.
15. Screw pipe (d1) to the canopy (b) by using hexangular screw and Allen wrench (n) be sure all the hexangular screws are tight enough.

CARE INSTRUCTIONS:

Wipe with a soft, dry cloth. To protect finish, avoid the use of chemicals and household cleaners.

For customer service questions call 1-800-338-2150

ARTERIO RS