

CRYSTORAMA

LIGHTING THE WAY FOR SIXTY YEARS



Crystorama.com


ASSEMBLY INSTRUCTION MODEL #ATL-709-MK-TG



All electrical components must be installed by a licensed electrician in accordance with the National Electric Code and the appropriate local electrical codes.



You will need 1- Med.Bulb
60 Watts Recommended 100 Watts Max.
USE LED BULBS FOR EXTENDED USE
THIS FIXTURE IS WET RATED

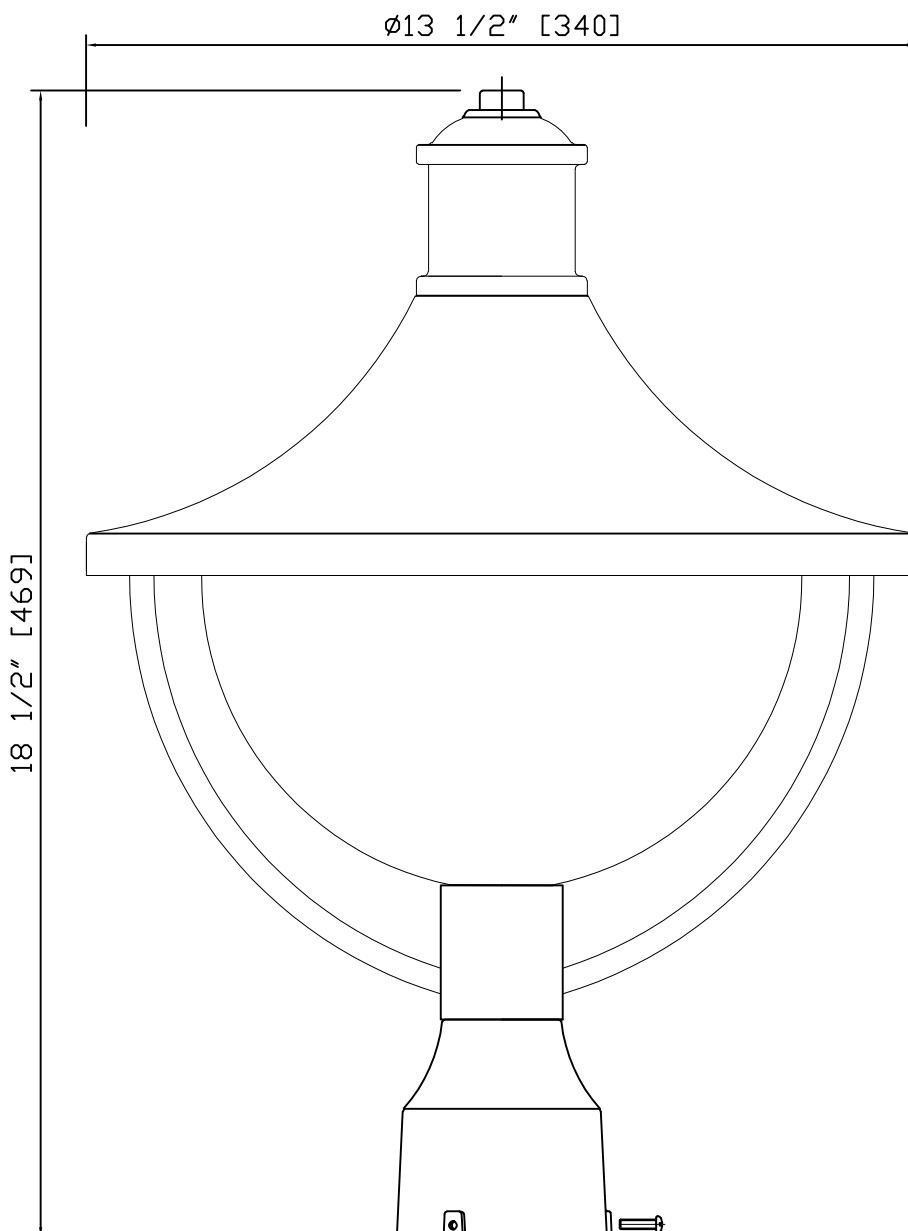

How to Install

1. M Remove the bottom frame from the top frame by loosening the 4 flat head screws.
2. Slide the bottom frame over the post and secure with the screws.
3. Slide the glass shade over the socket and secure with the socket ring.
4. Install the bulb onto the socket. Place the top frame over the bottom frame and align the holes on them. Tighten the screws using a screwdriver (not provided).

WARNING: This product can expose you to Lead which is known to the state of California to cause cancer and/or birth defects or reproductive harm. For more information go to www.P65Warnings.ca.gov

CRYSTORAMA

LIGHTING THE WAY FOR SIXTY YEARS

ASSEMBLY INSTRUCTION MODEL #ATL-709-MK-TG

Part Number

Part Numbers

- A. (1)-Mounting hardware
- B. (1)-Bottom frame
- C. (3)-screws
- D. (1)-White glass shade Ø10"*H5.5"
XAR709GLA10IN
- E. (1)-Socket
- F. (1)-Socket ring
- G. (1)-Top frame
- H. (4)-Flat head screw

