


ASSEMBLY INSTRUCTIONS FOR YOUR JACQUELINE ACCENT LAMP

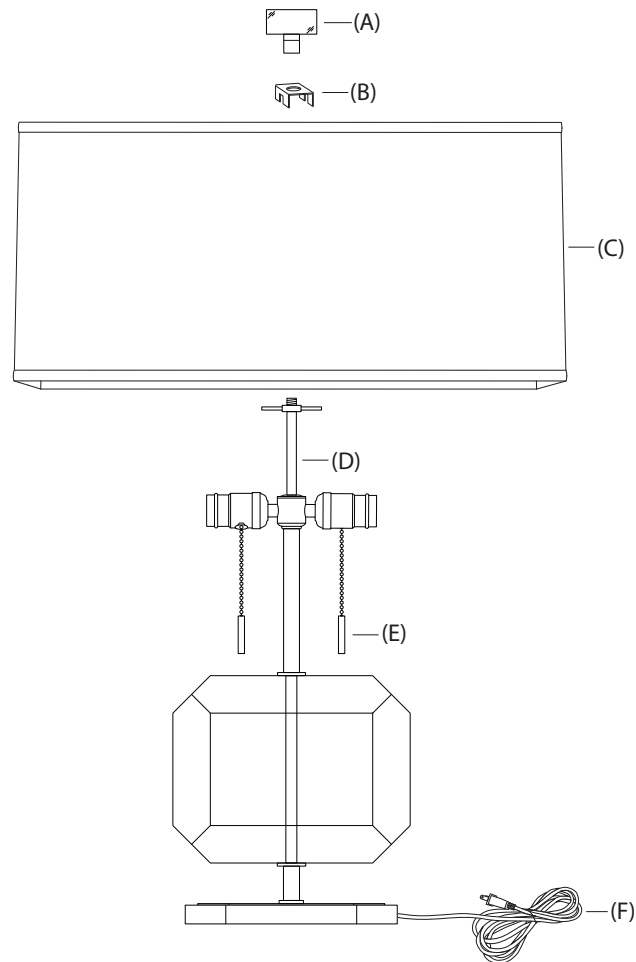

IMPORTANT SAFETY INSTRUCTIONS:

- * This lamp has a polarized plug (one blade is wider than the other) as a feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If it does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do NOT alter the plug.
- * Do not use with an extension cord unless the plug from the lamp can be fully inserted into the extension cord receptacle.
- * Switch power off and remove plug from the wall outlet before replacing the bulb.

ASSEMBLY INSTRUCTIONS:

NOTE: Do not connect electricity until lamp is fully assembled.

1. Unpack all parts and remove packing materials. Place lamp base on level surface.
2. Install two 3-way 100W Max. Type A, medium base bulbs into the sockets. Bulbs must be 3-way compatible for the sockets to function properly.
3. Remove finial (A) and shade lock (B) from shade riser (D).
4. Place shade (C) onto shade riser (D). Place shade lock (B) onto shade riser (D). Note: shade lock (B) should be turned so cutouts fit over alignment arms located at the top of shade riser (D).
5. Thread finial (A) back onto shade riser (D) to secure the shade to the lamp.
6. Remove protective plastic from polarized plug (F).
7. Insert plug (F) into wall outlet.
8. Control power to the fixture using pull chains (E) on the sockets.

** To clean, use a soft cloth only. Do not use any chemical or abrasive cleaners. **

S1197B