

Lyon Pendant

6684901, 6884901 | 1.0

VISUAL COMFORT & Co.

STUDIO COLLECTION

SAVE THESE INSTRUCTIONS!

GENERAL PRODUCT INFORMATION:

These fixtures are intended to be installed utilizing NEC compliant junction boxes.

This product is safety listed for damp locations.



Incandescent version may be dimmed with a standard incandescent dimmer. LED version may be dimmed with a LED dimmer. Consult lamp manufacturer for additional information.

This instruction shows a typical installation.

CAUTION - RISK OF FIRE

This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.

Use minimum 90°c supply conductors.

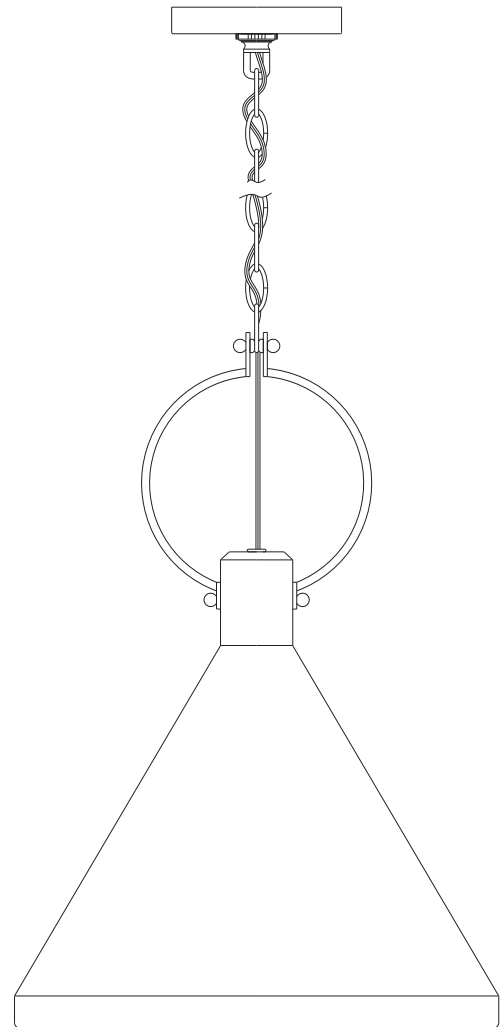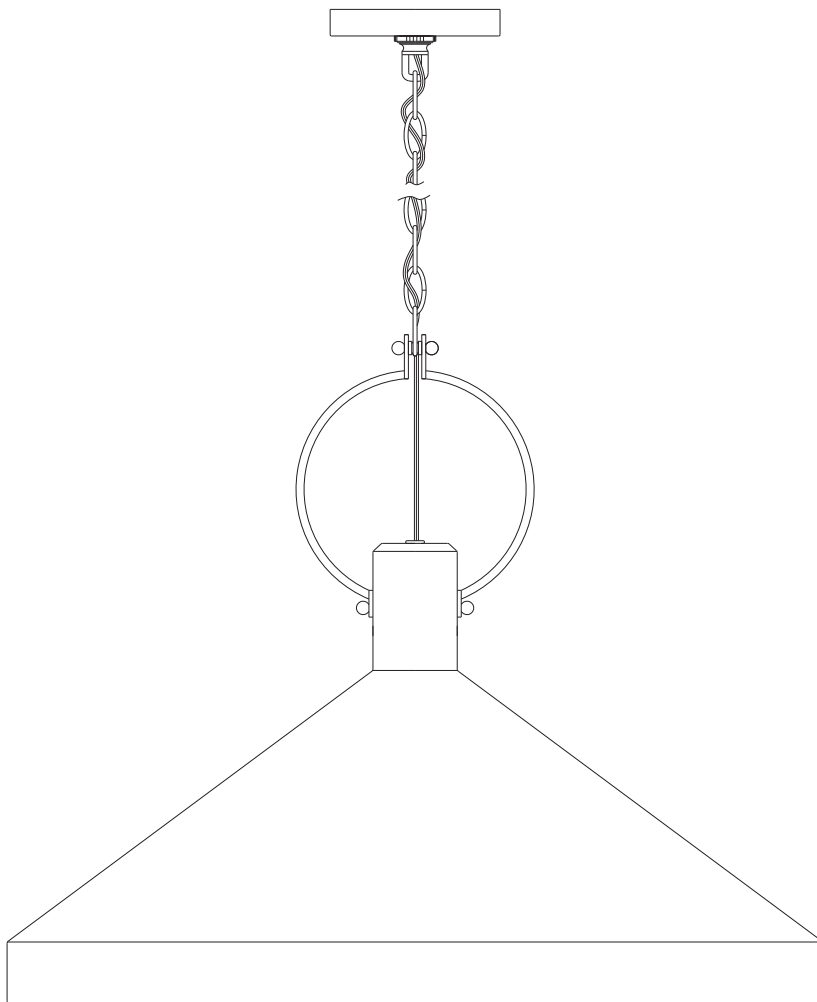

VISUAL COMFORT & Co.


7400 Linder Ave., Skokie, IL 60077

T 847.410.4400 | F

847.410.4500

www.visualcomfort.com

Install the Fixture

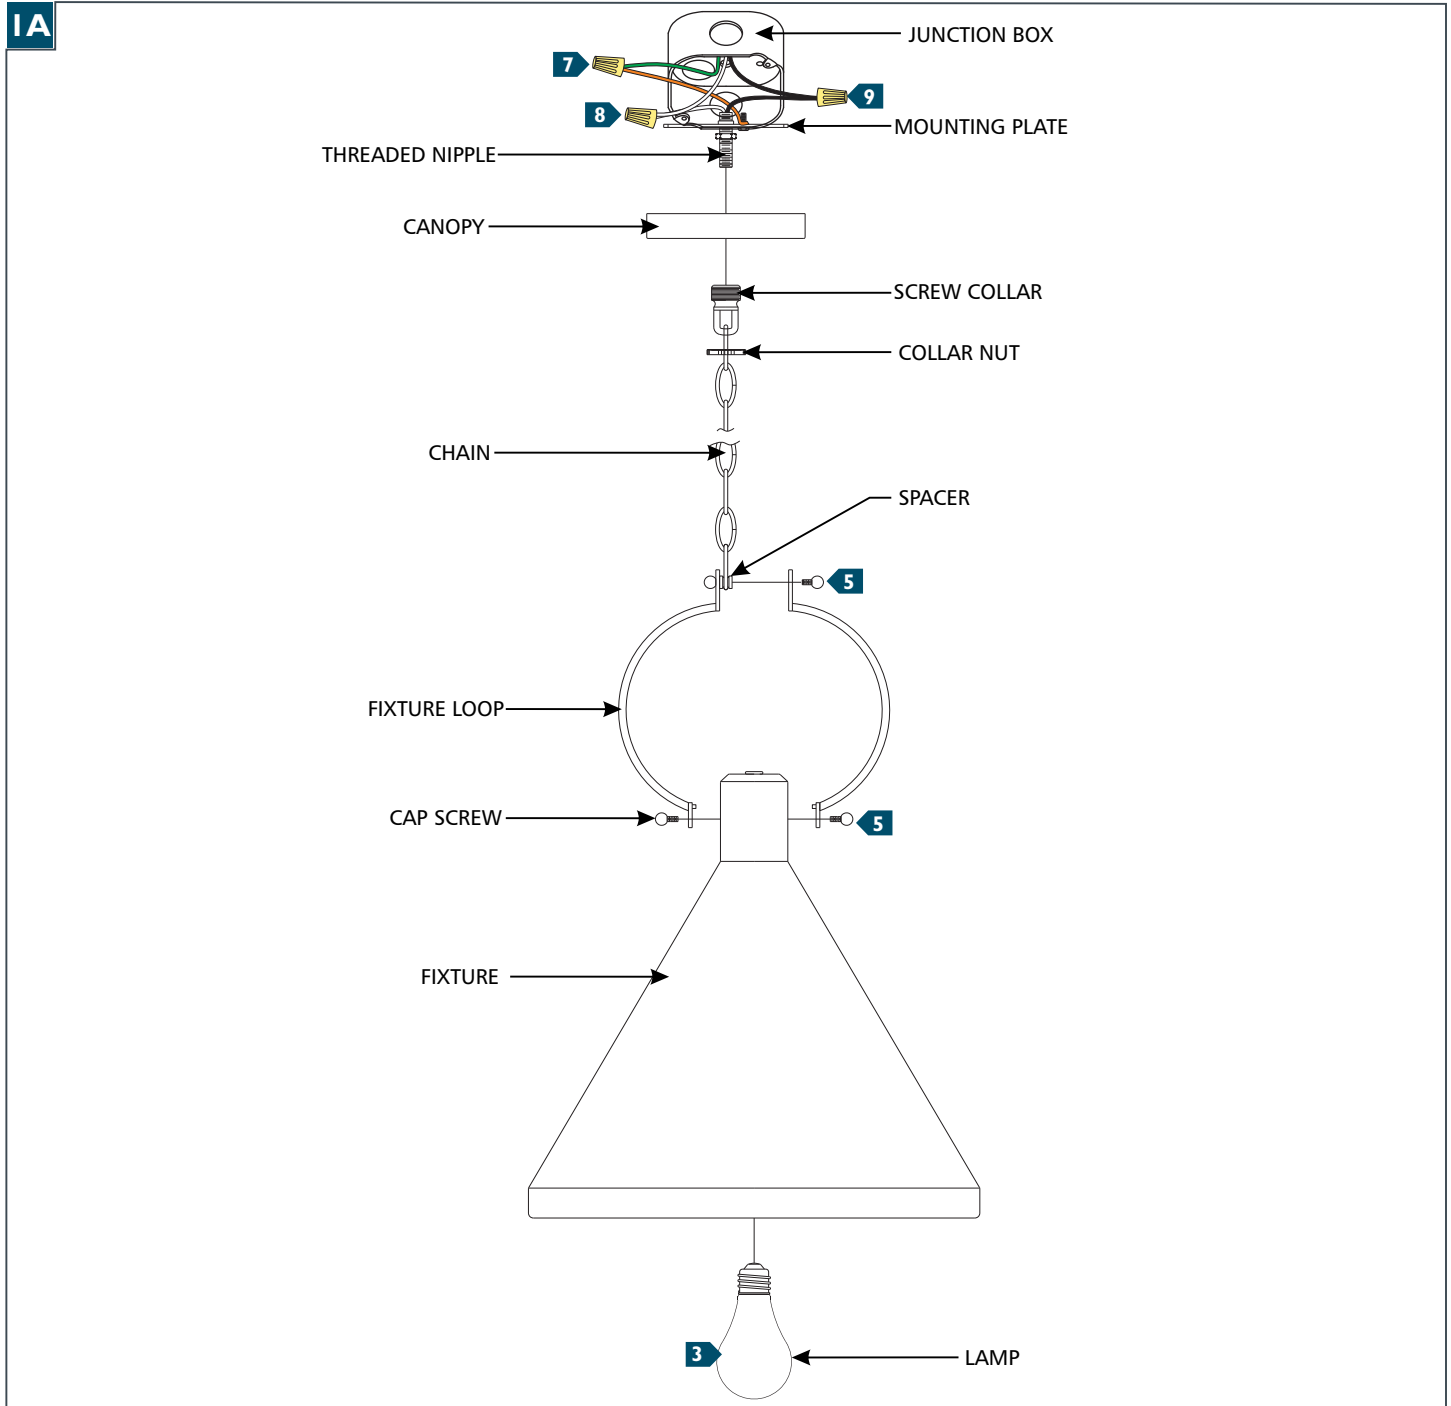

- 1** If necessary, screw the short end of the threaded nipple tightly onto the mounting plate, then screw the screw collar onto the threaded nipple.
- 2** Secure the mounting plate to the junction box.
- 3** Screw the lamp into the socket. Refer to the label on the socket for Max Wattage Information.
- 4** Determine the wanted height of the fixture and remove a portion of the chain by opening a link and removing it from the bottom.
- 5** Install the fixture loop to the top of the fixture using cap screws, install the canopy and the collar nut onto the chain (in that order), then place the bottom chain link on the spacer and secure the top of the fixture loop using the cap screw.
- 6** Weave the cord through the chain, screw collar, canopy, threaded nipple, and out of the junction box. Trim the cord leaving enough to make electrical connections.
- 7** Connect the fixture to a suitable ground in accordance to local electrical codes.
- 8** Connect the white fixture wire (square and/or rigid) to the neutral power line wire with a wire nut.
- 9** Connect the black fixture wire (round and/or smooth) to the hot power line wire with a wire nut.
- 10** Neatly place all the wires into the junction box, place the canopy onto the mounting plate, and secure it in place by screwing the collar nut tightly onto the screw collar.