


ASSEMBLY INSTRUCTIONS FOR Madeline Floor Lamp

Model # 3375-12
3375-15

3275-12
3375-15 1.0

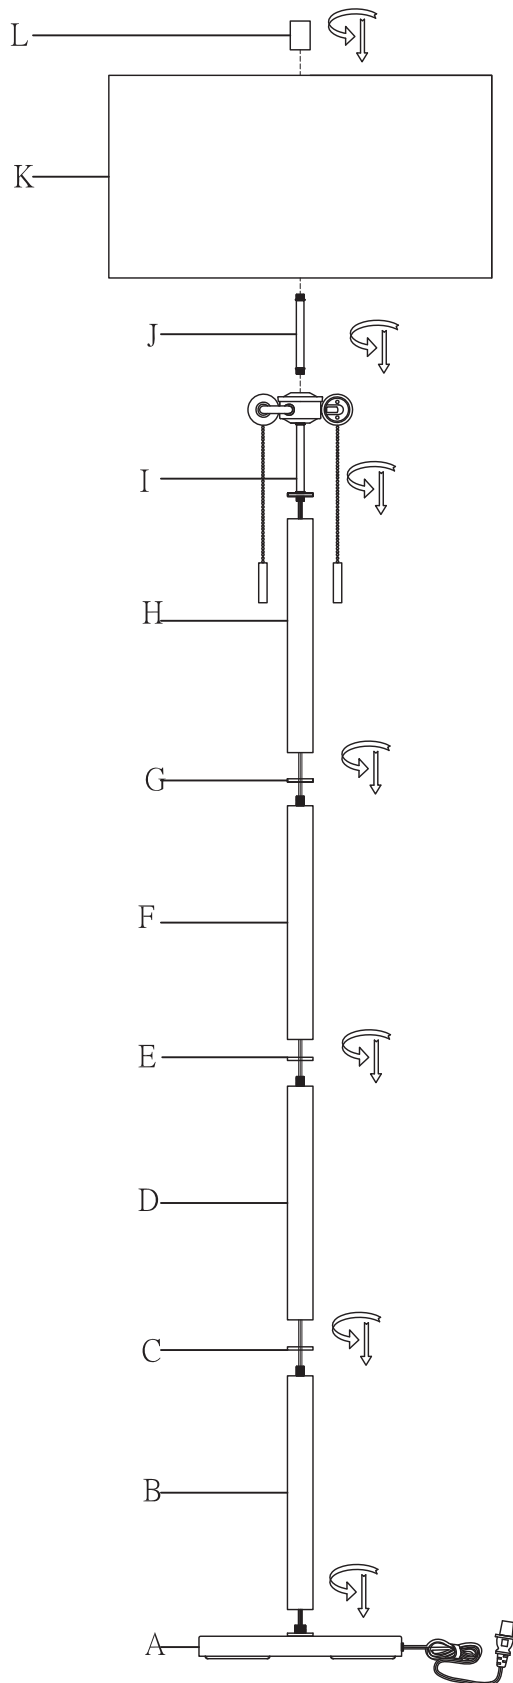

1. Screw pole(B) clockwise into base(A) to tighten.
2. Place metal piece(C) onto pole(B) then screw pole(D) clockwise into pole(B) to tighten.
3. Repeat the step 2 to finish the rest metal piece(E)(G) and Pole(F)(H).
4. Screw part(I) clockwise into pole(H) to tighten.
5. Screw metal pole(J) clockwise into part(I) to tighten.
6. Set shade(K) onto metal pole(J) and tighten clockwise with finial(L) to secure shade.

GENERAL PRODUCT INFORMATION:

This product is suitable
for dry locations only.



IMPORTANT SAFETY INSTRUCTIONS:

This portable lamp has a polarized plug (one blade is wider than the other) as a feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. **DO NOT ALTER THE PLUG.**

BULB TYPE: (2) 150 watt maximum incandescent or 9 watt maximum equivalent LED bulb. (not included)