


ASSEMBLY INSTRUCTIONS FOR PROSPECT LED FLOOR LAMP

3219 1.0

Model # 3219-01

Model # 3219-22

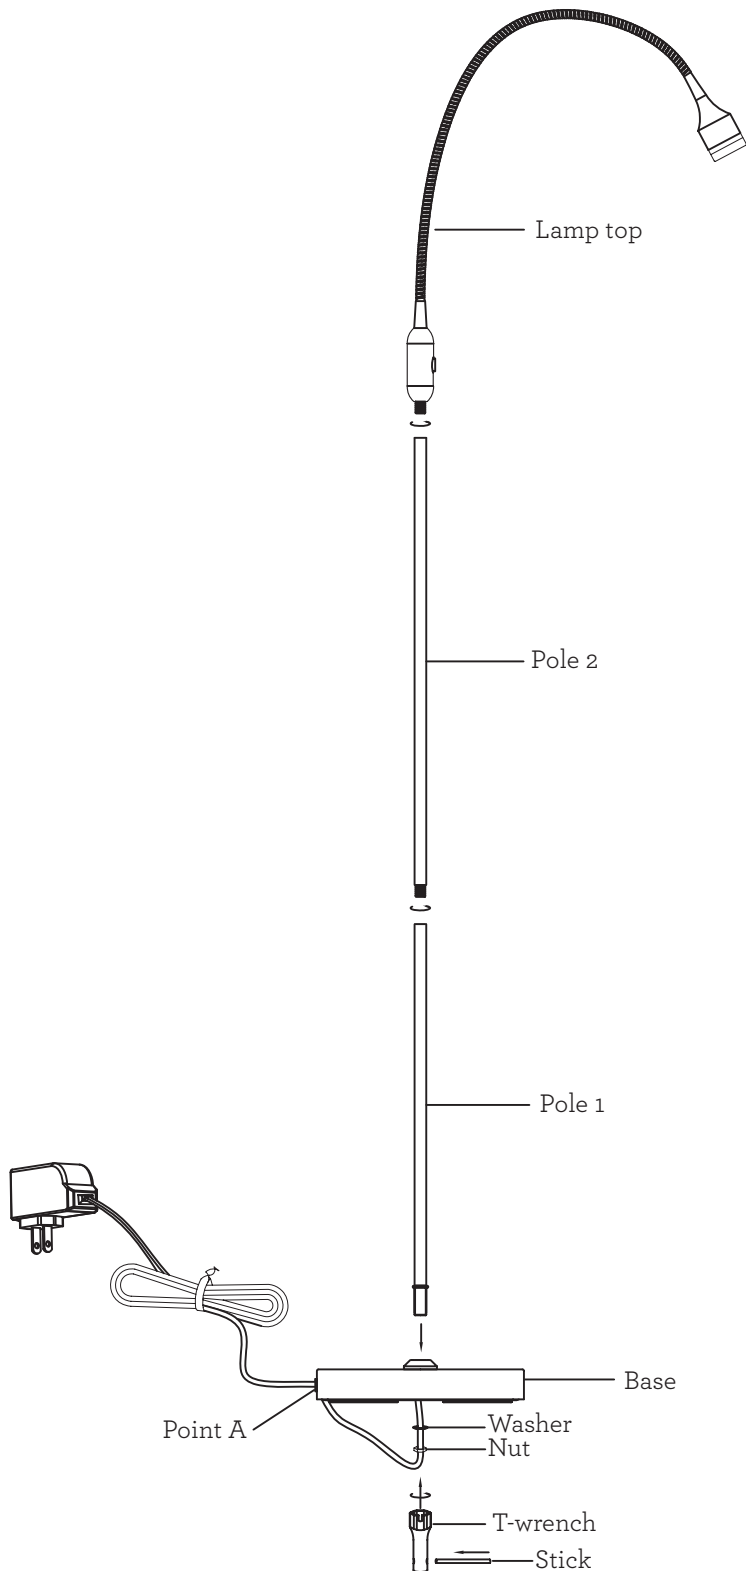

1. Screw the lamp top clockwise into pole 2 to tighten. Screw pole 2 clockwise into pole 1 to tighten.
2. Pull the power cord out from point A till pole 1 reaches the base. Screw pole 1 clockwise into base to tighten.
3. Fasten the power cord with T-wrench and stick. The lamp is completed.

GENERAL PRODUCT INFORMATION:

This product is suitable
for dry locations only.



IMPORTANT SAFETY INSTRUCTIONS:

This portable lamp has a polarized plug (one blade is wider than the other) as a feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. **DO NOT ALTER THE PLUG.**

LED: (1) 3 watt LED included.

PARTS DIAGRAM:

T - Wrench
(1) Stick