


ASSEMBLY INSTRUCTION FOR
Rebecca Floor Lamp- Natural

Model# 1601-12

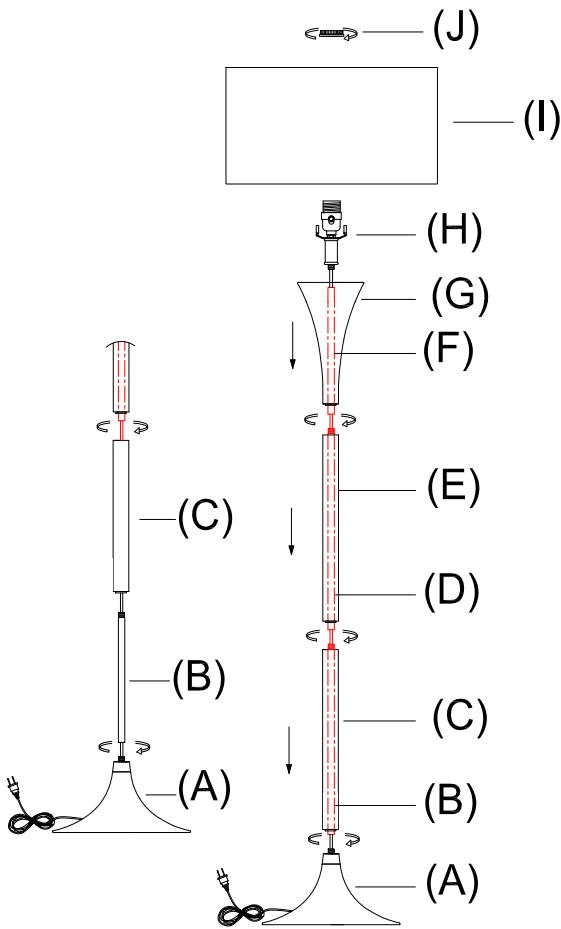

1. Slide out the inner metal tube (B) from inside of the wood tube (C), then screw inner metal tube (B) clockwise onto lamp base (A). Be careful not to twist the power cord. Tighten securely.
2. Slide wood tube (C) over inner metal tube(B).
3. Slide out the inner metal tube (D) from inside of the wood tube (E), then fasten inner metal tube (D) onto inner metal tube(B).
4. Slide wood tube(E) over inner metal tube(D).
5. Slide out the inner metal tube (F) from inside of the wood tube (G), then fasten inner metal tube (F) onto inner metal tube(D).
6. Slide wood tube(G) over inner metal tube(F).
7. Fasten socket assembly (H) onto inner metal tube tube(F).
8. Socket ring (J) comes pre-assembled to the socket (H). Before assembling the shade, please unscrew this socket ring (J). Place shade (I) onto socket assembly (H).
9. Tighten socket ring (J) onto socket assembly (H) to secure shade.

GENERAL PRODUCT INFORMATION:

This product is suitable for dry locations only.

IMPORTANT SAFETY INSTRUCTIONS:

This portable lamp has a polarized plug as a feature to reduce the risk of electric shock (one blade is larger than the other). This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not use with an extension cord unless the plug can be fully inserted. **DO NOT ALTER THE PLUG** .

BULB TYPE: Please use 100 Watt Incandescent or 16 Watt LED Bulb (Not Included).

A note on packaging: Due to the fragile nature of this product, we have chose to use Styrofoam only where it is needed to protect it and deliver the best quality product to our customer. We are aiming to reduce the use of plastic and styrofoam in the packaging of our products where possible and are investigating more environmentally friendly alternatives to use. We hope you enjoy your purchase!

GET INSPIRED. SHARE YOUR STYLE.

#myadesso

Visit www.adessohome.com for details.

- PARTS DIAGRAM**
- 1 - Base (A)
 - 1 - Tube (B)
 - 1 - Part (C)
 - 1 - Tube (D)
 - 1 - Part (E)
 - 1 - Tube (F)
 - 1 - Part (G)
 - 1 - Socket Assembly (H)
 - 1 - Shade (I)
 - 1 - Socket Ring (J)

ADESSO

353 West 39th Street 2nd Floor NY, NY 10018
 Tel: (212) 736 4440 Fax: (212) 736 4806
www.adessohome.com