


ASSEMBLY & INSTALLATION INSTRUCTIONS

A575

Grace Chandelier 105050

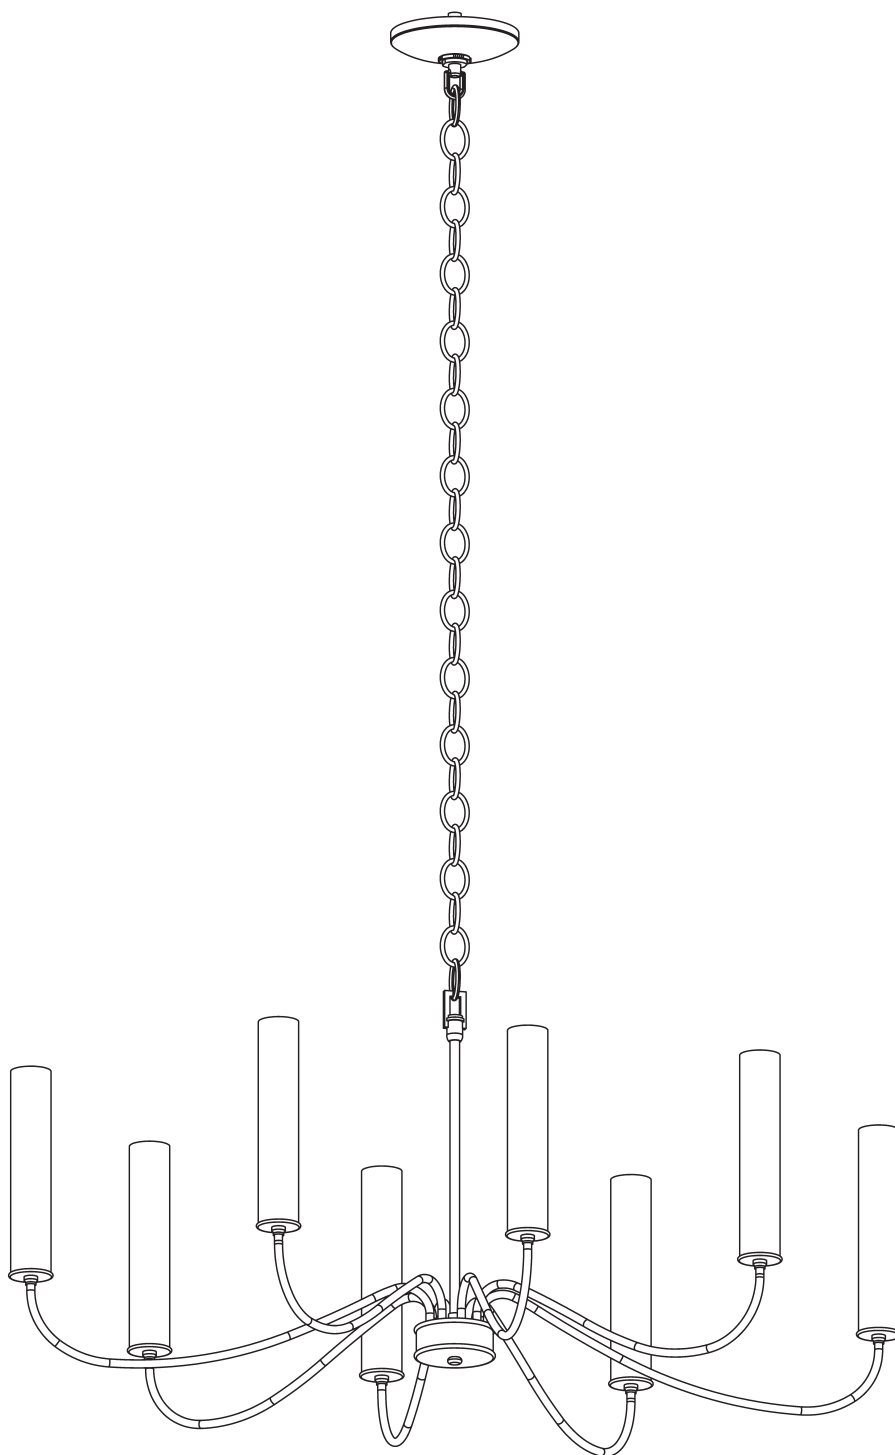

HUBBARDTON FORGE.

42773 Rev A

1 OF 4

Component Parts

A	Crossbar
B	Lock Nut
C	Nipple
D	Ground Screw
E	Canopy
F	Canopy Ring
G	Canopy Loop
H	Chain
I	Fixture Loop
J	Fixture
K	Socket (8)
L	B10 Type Bulb (8) - Not Included
M	Glass (8)



ASSEMBLY & INSTALLATION INSTRUCTIONS

A575

Grace Chandelier 105050

CAUTION: FAILURE TO INSTALL THIS FIXTURE PROPERLY MAY RESULT IN SERIOUS PERSONAL INJURY OR DEATH AND PROPERTY DAMAGE. We recommend installation by a licensed electrician. This product must be installed in accordance with applicable installation code(s), by a person familiar with the construction and operation of the product and the hazards involved.*

Caution: Do not exceed maximum wattage noted on fixture. Use only recommended bulbs with fixture.

Please Note: After installation extra hardware and accessories are possible; our kits are used on multiple products.

To Install Fixture (Figure 1 - on following page)

CAUTION: BE SURE POWER IS OFF AT THE MAIN BREAKER BOX PRIOR TO INSTALLATION.

1. Carefully unpack fixture from the carton.
2. Using two machine screws (not provided), fasten the crossbar (A) to the electric box with the head of the ground screw (D) facing down.

Note: A new electric box comes with screws. When replacing a fixture, retain the existing screws for use with the new fixture.

3. Thread nipple (C) into crossbar (A) and thread lock nut (B) and canopy loop (G) onto threaded nipple (K), leaving parts loose. Adjust the length of threaded nipple in crossbar so that canopy ring (F), which comes threaded onto canopy loop, will hold canopy (E) against the ceiling with no threads showing for best appearance. When the correct adjustment is established, tighten locknut against crossbar to hold adjustment.
4. Remove the crossbar (A) assembly from electrical box.
5. Attach one end of the chain (H) to the fixture loop (I) using a chain spreader (not provided). Lace the wires through every other link of the chain to the end. Slip wires and chain through canopy ring (F) and canopy (E). Allow canopy ring and canopy to rest on top link of chain.
6. Fasten the chain (H) to the canopy loop (G).
7. Slip wires through the canopy loop (G) and nipple (C). Make sure to provide enough slack in the wire to ensure weight of fixture is supported by the chain.
8. Using two machine screws (not provided), reattach the crossbar (A) to the electric box.
9. Using suitable wire connectors (not provided) connect fixture wires to supply wires (white to ribbed side of the fixture cord, black to smooth side). Holding canopy (E) close to ceiling, run a pigtail lead from crossbar ground screw (D) to the junction box and connect all ground wires (bare copper or green to bare copper or green).

CAUTION: MAKE SURE WIRE CONNECTORS ARE TWISTED ON SECURELY AND NO BARE WIRE IS EXPOSED.

10. Raise canopy (E) to the ceiling and secure loop collar (F) to canopy loop (G).
11. Install B10 type bulb (L) (not included) into socket (K).
12. Slip glass (M) over the bulbs.


Note: All glass tolerance is designed for the recommended B10 type bulb. If a piece does not fit, verify correct bulb type and size is being used.

13. Repeat steps for remaining sockets and glass
14. Restore electricity at main breaker.

ASSEMBLY & INSTALLATION INSTRUCTIONS

A575

Grace Chandelier 105050

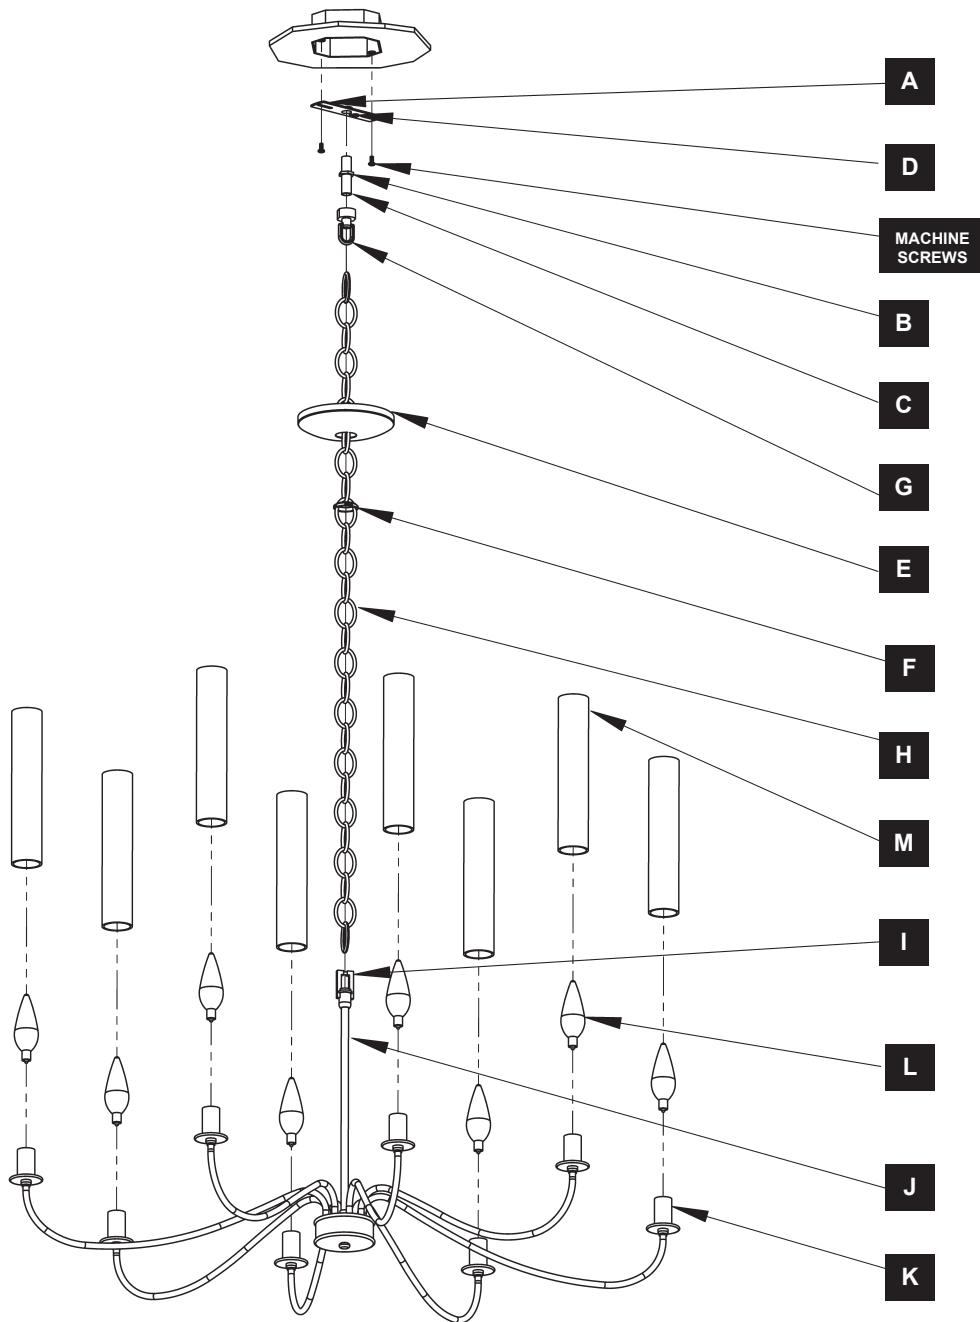

(Figure 1)

If you need further assistance, or find that you are missing any parts, please contact the dealer from which you purchased this product. We hope you enjoy your fixture!

*** Hubbardton Forge will not be liable for injury or damage caused by improper installation, lamping or use of this fixture.**



HUBBARDTON FORGE.

42773 Rev A

4 OF 4