


## ASSEMBLY INSTRUCTIONS FOR YOUR GRAVITY PENDANT

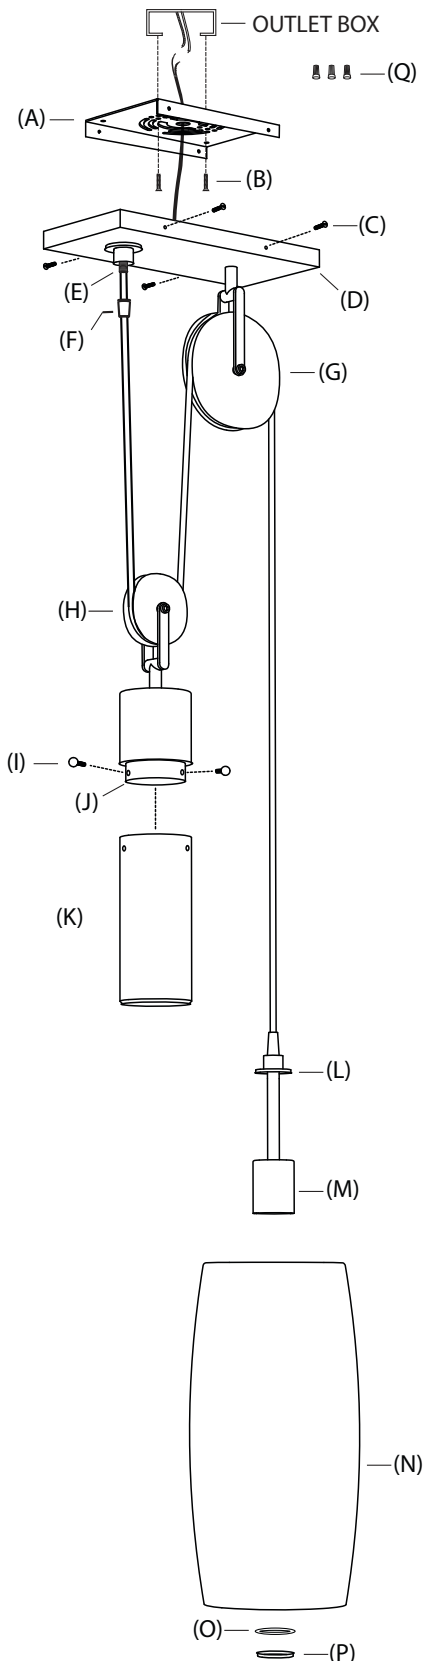

### IMPORTANT SAFETY INSTRUCTIONS:

\*These instructions are provided for your safety.

\*It is very important that they are read completely before beginning the installation of your fixture.

**\*WE STRONGLY RECOMMEND INSTALLATION BY A LICENSED ELECTRICIAN.**

\*Turn off power at switch before replacing bulbs, making sure fixture has had sufficient time to cool down.

\*This fixture is UL rated for dry locations.

### ASSEMBLY INSTRUCTIONS:

1. SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/ CIRCUIT BREAKER.
2. Remove all parts from carton and discard packing materials.
3. Place the parts on a level surface.
4. Remove mounting plate (A) from canopy (D) by un-threading screws (C). Set screws (C) aside.
5. Carefully pull wires from the wall outlet box and thread them through the center hole in mounting plate (A).
6. Affix mounting plate (A) to the ceiling outlet box using screws (B) provided.
7. Determine the desired height for the fixture to hang and adjust the cord length accordingly. To add or remove length from the cord, carefully unthread collar (F) from plastic sleeve (E). Adjust cord to desired length under the smaller pulley (H) and over the larger pulley (G). Thread collar (F) back onto plastic sleeve (E).
8. If necessary, cut extra cord above canopy (D). NOTE: leave at least six inches of cord above the canopy in order to make proper wire connections.
9. Lift the canopy to the ceiling and make the proper electrical connections noted in steps 10 through 12. A LICENSED ELECTRICIAN IS RECOMMENDED.
10. Attach ground wire from fixture (green or copper in color) to ground wire from outlet box. Fasten wires together with wire nut (Q) and tightly wrap connection with electrical tape.
11. Attach hot wire from fixture (black in color or smooth side of wire) to hot wire from outlet box. Fasten wires together with wire nut (Q) and tightly wrap connection with electrical tape.
12. Attach neutral wire from fixture (white in color or ribbed side of wire) to neutral wire from outlet box. Fasten wires together with wire nut (Q) and tightly wrap connection with electrical tape.
13. Gently push the wire connections back into the ceiling outlet box.
14. Place canopy (D) over the mounting plate so it sits flush against the ceiling. Use canopy screws (C) to attach the canopy to the mounting plate (A).
15. Slide glass shade (N) over socket (M) until it rests against the stop (L).
16. Holding shade in place, slide plastic washer (O) the socket (K) to the stop (L). Secure washer and shade by threading flange (P) onto stop (L).
17. Attach crystal cylinder (K) to housing (J) with three thumb screws (I). Note: Do not overtighten screws as this could damage the crystal cylinder
18. Install (1) 100W MAX. Type A, medium base bulb into the socket (M).
19. Adjust fixture by moving the glass shade (N) up or down to achieve desired location.
20. Reconnect the main electrical supply at the fuse box/ circuit breaker and test the fixture.