
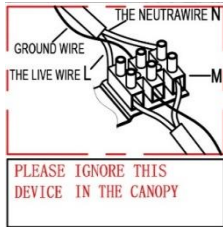


ASSEMBLY INSTRUCTIONS

ITEM DESCRIPTION:

ITEM NO.: 49521	NAME: Renly Pendant
MATERIAL TYPE: Steel	FINISH: Pale Gold Leaf
SOCKET TYPE: Integrated LE SOCKET QTY: 1	
BULB WATTAGE: 12W LED/3000K	
VOLTAGE: 110-120 V	ITEM NET WEIGHT: 31LBS

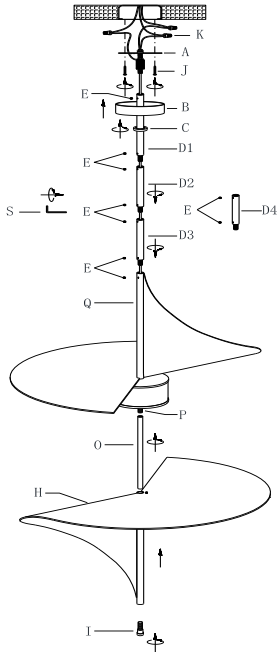

TO ASSEMBLE:

1. Remove all packing contents and parts from the carton(s) carefully. Ensure you have all parts indicated before you begin assembly.
2. Shut off the main electrical supply from the main fuse box/circuit breaker.
3. Connect the lamp body (q) and canopy(b) with rod (d1, d2, d3, d4), when you connect the rods, loosen the small hex screws (e) first, then tighten with Allen wrench(s) after all rods are connected. Be sure all the hex screws(e) are tight enough.
4. Note: if you want the fixture to be semi-flush mount, you only need to connect the lamp body (q) and canopy (b) with rod (d4). please pay special attention that you do not need to connect the terminal block (m) in the canopy. It is used for the wire connection for Euro-market.
5. Carefully inspect the fixture wires. The neutral fixture wire has very fine ridges molded into its plastic covering. The hot fixture wire has a smooth covering. The bare wire is the grounded wire.
6. Attach the ground wire from the fixture to the ground junction box wire from the outlet (usually green or bare wire). Fasten each together with a plastic wire connector (k) and wrap the connection with electrical tape. If your outlet box does not have a ground wire, insert the green ground screw Minto the mounting plate (a) facing down, and wrap the fixture's bare ground wire around the ground screw. It is imperative that the outlet box in your home be properly grounded.
7. Connect the neutral fixture wire to the neutral junction box wire (usually white). Fasten each together with a wire connector (k) and wrap the connection with electrical tape. Be sure no strands are exposed.
8. Connect the hot fixture wire to the hot junction box wire (usually black). Fasten each together with a plastic wire connector (k) and wrap the connection with electrical tape. Be sure no wire strands are exposed. Do not reverse the hot and neutral connections or safety will be compromised.
9. Gently tuck the wire connections neatly into the junction box.
10. Attach the mounting plate (a) to the outlet box by using the mounting screws (j) and tighten screws with a screwdriver.
11. Push collar loop (c) in canopy (b) and tighten onto nipple in mounting plate (a) by turning in a clockwise direction.
12. Attach the pipe(o) to the threaded nipple (p) in a clockwise direction. Then align the hole of center tube of the bottom metal part (h) and insert the pipe (o) until it is completely covered. Attach the finial (i) into the bottom of the bottom metal part (h) and fix in a clockwise direction.
13. Restore power to the junction box and test fixture.

PARTS INCLUDED:

(A) MOUNTING PLATE Qty: 1	(Q) LAMP BODY Qty: 1
(B) CANOPY Qty: 1	(O) PIPE Qty: 1
(C) COLLAR LOOP Qty: 1	(H) BOTTOM METAL Qty: 1
(D1-4) ROD Qty: 4	(I) FINIAL Qty: 1
(E) HEX SCREW Qty: 9	(P) THREADED NIPPLI Qty: 1

HARDWARE INCLUDED:

(J) Mounting Screws	(S) Allen Wrench
(K) Plastic Wire Connector	Green Ground Screw

TO INSTALL YOU WILL NEED:

- 2 people recommended
- Phillips Screwdriver

These instructions are provided for safety. It is very important that they are read carefully and completely before beginning installation.

We strongly suggest that all hard-wired fixtures must be installed by a professional electrician.

CARE INSTRUCTIONS:

Wipe with a soft, dry cloth. To protect finish, avoid the use of chemicals and household cleaners.

For customer service questions call 1-800-338-2150

ARTERIOS